



Maintenance and Service Guide

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2023 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Intel, Core, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Linux is a registered trademark of Linus Torvalds in the U.S. and other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVIDIA and GeForce RTX are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. NVMe is a registered trademark of NVM Express. PCIe is a US registered trademark and/or service mark of PCI-SIG. SD is a trademark or registered trademark of SD-3C LLC. USB Type-C, and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2023

Document Part Number: N44058-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.microsoft.com>.

If your product ships with Windows in S Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

-
- ⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.
-

Table of contents

1 Product description	1
2 Components	6
Right	6
Left	7
Display	8
Low blue light mode (select products only)	8
Top cover	10
Keyboard area	10
Touchpad	10
Touchpad settings	10
Adjusting touchpad settings	11
Turning on the touchpad	11
Touchpad components	11
Lights	12
Button and fingerprint reader	13
Special keys	15
Bottom	16
Rear	17
Labels	18
Inserting a SIM card in the service bay	19
3 Illustrated parts catalog	21
Computer major components	21
Display assembly subcomponents	25
Cables	27
Miscellaneous parts	28
4 Removal and replacement procedures preliminary requirements	32
Tools required	32
Service considerations	32
Plastic parts	32
Cables and connectors	32
Drive handling	32
Electrostatic discharge information	33
Generating static electricity	33
Preventing electrostatic damage to equipment	34
Personal grounding methods and equipment	34
Grounding the work area	35
Recommended materials and equipment	35

Cleaning your computer	36
Enabling HP Easy Clean (select products only)	36
Removing dirt and debris from your computer	36
Cleaning your computer with a disinfectant	37
Caring for wood veneer (select products only)	38
Packaging and transporting guidelines	38
Accessing support information	39
5 Removal and replacement procedures for authorized service provider parts	41
Component replacement procedures	41
Preparation for disassembly	41
Service cover	41
Battery	42
WLAN module	43
WWAN module	45
Memory modules	47
Solid-state drive	51
Touchpad cable	54
NFC module antenna	55
NFC module	55
WWAN antenna	56
Speakers	57
Bottom case	58
Card reader cable	60
Keyboard hub cable	61
Fan	62
Graphics card	63
System board	64
Heat sink	67
Audio jack	68
Fingerprint reader	69
Fingerprint reader cable	70
Card reader	71
NFC module cable	72
Keyboard hub	73
Touchpad	74
SD card reader	75
SD card reader cable	76
Display assembly	77
Top cover with keyboard	89
6 Troubleshooting guide	91
Resources	91
General troubleshooting steps	92
Identify the issue	92
1. Understand the issue	93
Boot-up sequence	93
Failure classification	93

2. Examine the environment.....	95
3. Perform a visual inspection of hardware.....	95
4. Update BIOS and drivers.....	96
Manually updating BIOS and drivers.....	96
Remotely deploying the BIOS and drivers.....	96
Analyze the issue.....	96
5. Remove or uninstall recently added hardware, software.....	96
6. HP Hardware Diagnostics and Tools.....	96
HP PC Hardware Diagnostics (UEFI).....	97
HP BIOS Configuration Utility (BCU).....	98
HP Image Diagnostic Tool.....	99
HP Thermal Monitor.....	99
Non HP diagnostics tools.....	99
7. Status lights, blinking light codes, troubleshooting lights, and POST error messages.....	99
Status lights.....	99
Blinking light codes.....	100
POST error messages.....	101
Resolve the issue.....	102
8. Hard reset.....	102
9. Soft reset (Default Settings).....	103
10. Reseat cables and connections.....	103
11. Test with minimum configuration.....	104
Essential hardware configuration.....	104
Safe mode.....	105
12. Test with verified working configuration (hardware or operating system).....	105
13. Replace the system board.....	105
Verify solution.....	106
Helpful Hints.....	107
At startup.....	107
During operation.....	107
Consulting with HP Service.....	108
Common issues and possible solutions.....	108
Power-on issues.....	108
No power.....	109
Intermittent power-on, shutdown, reboot.....	111
AC adapter issue.....	112
Battery not recognized, not charging.....	113
Battery discharges too fast.....	115
Burnt smell.....	115
POST.....	116
No video (with power).....	116
Blinking lights.....	117
Diagnostic error messages.....	118
BIOS password.....	118
Performance (OS).....	119
Intermittent shutdown.....	119
Blue screen.....	121
Freeze at Windows Logo (hang or lockup).....	122

Electromagnetic Interference (EMI).....	123
No wake up.....	124
Unresponsive.....	125
Slow performance.....	126
HP Smart Adapter warning message.....	126
Incorrect time and date.....	127
Display.....	128
Display anomalies.....	128
Symptom.....	128
Quick check.....	129
HP PC Hardware Diagnostics (UEFI) for video test.....	129
Display assembly diagram.....	129
Dead pixel.....	130
No video (internal).....	130
No video (external).....	130
DisplayPort/VGA.....	131
HDMI.....	131
No or bad external video via docking.....	132
Incorrect or missing color/distorted image.....	132
Touch screen.....	133
I/O devices.....	134
Keyboard.....	134
Keyboard pointing stick (select products only).....	135
Keyboard backlight.....	136
Touchpad.....	136
Network connectivity (RJ-45 jack).....	137
Network connectivity wireless (WLAN).....	137
WWAN.....	138
USB.....	138
Smart card reader.....	139
Speaker, headphone - audio issues.....	140
Thunderbolt (TB).....	141
Storage.....	142
Hard drive or solid-state drive not recognized.....	143
No boot to operating system (no read-write error).....	144
Read-write error.....	145
Slow performance.....	146
Blue screen (BSOD) error.....	146
Noisy hard drive.....	146
Mechanical.....	147
Noise (sound).....	147
Fan runs constantly.....	148
Thermal shutdown (hot).....	149
Additional information.....	150
Acronyms.....	150
Blinking lights and boot error codes.....	151
Processor not executing code.....	152
BIOS recovery code unable to find valid BIOS recovery image.....	152

Memory module error	152
Graphics Controller Error (No Controller).....	152
Failure System Board Error	153
Intel Trusted Execution Technology (TXT) Error	153
Sure Start unable to find valid BIOS Boot Block image.....	153
Sure Start has identified a problem (Manual Recovery Policy Set).....	153
POST error messages and user actions.....	154
Routine maintenance for performance improvement	156
Common blue screen error messages	156
Error message list.....	156
Bug check symbolic names.....	157
Microsoft general troubleshooting of Windows bug check codes.....	157
Use Windows Debugging Tool.....	157
Windows Software Development Kit (SDK)	158
Display issue: pixel anomalies.....	161
Cable management	163
Connector types	163
Flex cable.....	163
Horizontal cable insertion.....	164
Multiple-pin horizontal connector (LVDS cable to display panel)	164
Multiple-pin vertical connector (LVDS cable to system board).....	165
7 Backing up, restoring, and recovering.....	166
Backing up information and creating recovery media.....	166
Using Windows tools for backing up.....	166
Using the HP Cloud Recovery Download Tool to create recovery media (select products only).....	166
Restoring and recovering your system.....	166
Creating a system restore	167
Restoring and recovery methods	167
Recovering using HP Recovery media.....	167
Changing the computer boot order	168
Using HP Sure Recover (select products only).....	168
8 Computer Setup (BIOS), TPM, and HP Sure Start	169
Using Computer Setup	169
Navigating and selecting in Computer Setup	169
Restoring factory settings in Computer Setup.....	169
Updating the BIOS	170
Determining the BIOS version	170
Preparing for a BIOS update	170
Downloading a BIOS update.....	171
Installing a BIOS update.....	171
Changing the boot order using the f9 prompt	171
TPM BIOS settings (select products only)	172
Using HP Sure Start (select products only).....	172
9 Using HP PC Hardware Diagnostics.....	173
Using HP PC Hardware Diagnostics Windows (select products only).....	173

Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	173
Accessing HP PC Hardware Diagnostics Windows.....	173
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant.....	173
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	174
Downloading HP PC Hardware Diagnostics Windows.....	174
Downloading the latest HP PC Hardware Diagnostics Windows version from HP.....	174
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	174
Downloading HP Hardware Diagnostics Windows by product name or number (select products only).....	174
Installing HP PC Hardware Diagnostics Windows.....	175
Using HP PC Hardware Diagnostics UEFI.....	175
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code.....	175
Starting HP PC Hardware Diagnostics UEFI.....	175
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	176
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive.....	176
Downloading the latest HP PC Hardware Diagnostics UEFI version.....	176
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only).....	177
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	177
Downloading Remote HP PC Hardware Diagnostics UEFI.....	177
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	177
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number.....	177
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	178
10 Specifications.....	179
Computer specifications.....	179
Display specifications.....	179
Solid-state drive specifications.....	180
11 Statement of memory volatility.....	182
Current BIOS steps.....	182
Nonvolatile memory usage.....	184
Questions and answers.....	185
Using HP Sure Start (select products only).....	187
12 Power cord set requirements.....	188
Requirements for all countries.....	188
Requirements for specific countries and regions.....	188
13 Recycling.....	190
Index.....	191

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP ZBook Fury 16 G10 Mobile Workstation PC
Processors	<p>13th generation Intel® processors</p> <p>Intel Core® i9-13950HX (2.20 GHz base frequency, 36 MB cache, 24 cores, 55 W)</p> <p>Intel Core i9-13900HX (2.20 GHz base frequency, 36 MB cache, 24 cores, 55 W)</p> <p>Intel Core i7-13850HX (2.10 GHz base frequency, 30 MB cache, 20 cores, 55 W)</p> <p>Intel Core i7-13700HX (2.10 GHz base frequency, 30 MB cache, 16 cores, 55 W)</p> <p>Intel Core i5-13600HX (2.60 GHz base frequency, 24 MB cache, 14 cores, 55 W)</p>
Chipset	Intel WM790
Display	<p>40.6 cm (16.0 in), WUQXGA (3840 × 2400), BrightView, ultra wide viewing area (UWVA), DCI-P3 100, embedded DisplayPort® (eDP) 1.4 + panel self refresh (PSR), ambient light sensor (ALS), bent panel with narrow bezel, 500 nits</p> <p>Organic light-emitting diode (OLED) + low blue light (LBL), BrightView, 5 MP + IR camera, WLAN only</p> <p>OLED + LBL, BrightView, 5 MP + IR camera, WLAN + WWAN only</p> <p>White light emitting diode (WLED) + LBL, antiglare, HP DreamColor, 120 Hz, no microphone</p> <p>WLED + LBL, UWVA, antiglare, HP DreamColor, 120 Hz, 5 MP + IR camera</p> <p>40.6 cm (16.0 in), WUXGA (1920 × 1200), wide light-emitting diode (WLED) + low blue light, antiglare, UWVA, 100% sRGB, ALS, bent panel with narrow bezel</p> <p>eDP 1.4 + PSR2, no microphone, 400 nits</p> <p>eDP 1.4 + PSR2, no microphone, touch screen, 400 nits</p> <p>eDP 1.4 + PSR2, 5 MP + IR camera, 400 nits</p> <p>eDP 1.4 + PSR2, 5 MP + IR camera, touch screen, 400 nits</p> <p>eDP 1.3 + PSR, 5 MP + IR camera, WWAN, G4 plus privacy filter, 1000 nits</p> <p>eDP 1.3 + PSR, no microphone, G4 plus privacy filter, 1000 nits</p> <p>eDP 1.3 + PSR, 5 MP + IR camera, G4 plus privacy filter, 1000 nits</p> <p>eDP 1.4 + PSR2, 5 MP + IR camera, WWAN, low power, 400 nits</p> <p>eDP 1.4 + PSR2, 5 MP + IR camera, WWAN, low power, touch screen, 400 nits</p> <p>39.6 cm (15.6 in), full high definition (FHD) (1920 × 1080), antiglare, 45% character generation (CG), UWVA, eDP 1.2 without PSR, ALS, bent panel with narrow bezel, 250 nits</p> <p>5 MP + IR camera</p> <p>No camera</p>

Table 1-1 Product components and their descriptions (continued)

Category	Description
Graphics card	NVIDIA® RTX 5000 Ada
	NVIDIA RTX 4000 Ada
	NVIDIA RTX 3500 Ada
	NVIDIA RTX 2000 Ada
	NVIDIA RTX A1000
	NVIDIA GeForce RTX® 4090
Media card reader	SD® 7.0 media card reader
Memory	Four memory module slots (small outline dual in-line memory modules (SODIMMs)
	Double data rate (DDR5)-5600, non-error correction code (ECC)
	DDR5-4800, non-ECC or ECC
	Supports up to 128 GB of RAM in the following configurations:
	<ul style="list-style-type: none"> • 128 GB (32 × 4) • 64 GB (32 × 2) or (16 × 4) • 32 GB (32 × 1) or (16 × 2) or (8 × 4) • 16 GB (16 × 1) or (8 × 2) • 8 GB (8 × 1)
Storage	Solid-state drive, M.2 2280, Peripheral Component Interconnect Express (PCIe®)-4×4, Non-Volatile Memory Express (NVMe®), three-layer cell (TLC)
	4 TB
	2 TB
	2 TB, self-encrypted (SED), OPAL2
	1 TB
	1 TB, SED, OPAL2
	512 GB
	512 GB, SED, OPAL2
	Redundant Array of Independent Disks (RAID)
	NVMe RAID 0
	NVMe RAID 1
Audio and video	Audio brand: BANG and OLUFSEN
	Support for dual speakers
	HP camera: integrated, 5 MP, USB 2.0, wide field-of-view (WFOV), fixed, infrared (IR) webcam
	Dual-array digital microphone
	Rear-facing microphone
Wired LAN	Intel I219LM (vPro) GbE PCIe NIC
	Intel I219V (non-vPro) GbE PCIe NIC

Table 1-1 Product components and their descriptions (continued)

Category	Description
Wireless	Wireless Local Area Network (WLAN)
	<ul style="list-style-type: none"> Intel AX211 Wi-Fi® 6E + Bluetooth® 5.3, vPro® Intel AX211 Wi-Fi 6E + Bluetooth 5.3, non-vPro
	Supports UEFI Wi-Fi
	Supports HP Connection Optimizer
	Supports HP Extended Range Wireless LAN
	Supports Indonesia New Band
	Supports Time Average Power for WLAN (select SAR products only)
	Supports WLAN and BT PLDR
	Supports dynamic antenna gain. (EU and China only)
	Supports BT Audio Offload for A2DP
	Supports SAR solution using motion (select SAR products only)
	Supports DTT RFIM (selected products only)
	Supports 2.4 GHz/5 GHz/6 GHz
	UNII-4 5 GHz channel (US only)
	Wireless Wide Area Network (WWAN) (select products only)
	Intel XMM 7560 R+ LTE-Advanced Pro (Cat 16) WWAN module
	Intel 5000 5G solution WWAN module
	Near field communications (NFC) (select products only)
	WNC XRAV-1 (NXP NPC300 I2C)
	Ports
Smart card reader	
Audio-out (headphone)/Audio-in (microphone) combo jack	
RJ-45 (network) jack	
Memory card reader	
USB SuperSpeed 5 Gbps port	
USB SuperSpeed 5 Gbps port with HP Sleep and Charge	
USB Type-C® Thunderbolt™ ports with HP Sleep and Charge and DisplayPort™ output (2)	
HDMI port	
Mini DisplayPort connector	
Power connector	

Table 1-1 Product components and their descriptions (continued)

Category	Description
Keyboard/pointing devices	Keyboard (with numeric keypad)
	Backlit, spill-resistant, premium
	Backlit, spill-resistant, premium, privacy
	RGB backlit, spill-resistant, quiet keyboard, per-key lighting
	Touchpad
	Touchpad with image sensor
	Multitouch gestures enabled
	Precision touchpad support
Taps enabled as default	
Power requirements	Battery
	8 cell, 95 WHr, XL-Long Life, polymer
	HP Fast Charge Technology
	HP Smart AC adapter (slim, power factor correction (PFC), 3 pin, 4.5 mm, slim, right angle barrel)
	230 W
	200 W
	150 W
	Power cord
	C13, 1.83 m (6.0 ft), halogen free (HF), straight, conventional
	C13, 1.0 m (3.3 ft), premium with tag
C5, 1.0 m (3.3 ft), HF, straight, conventional	
C5, 1.0 m (3.3 ft), premium with tag	
Security	Active SmartCard
	Fingerprint sensor
Sensors	HP Sure Platform
	Motion AI LSM6DSOX

Table 1-1 Product components and their descriptions (continued)

Category	Description
Operating system	Windows® 11 Pro
	Windows 11 Pro Education
	Windows 11 Home - HP recommends Windows 11 Pro for Business
	Windows 11 Home Single Language - HP recommends Windows 11 Pro for Business
	Windows 11 Pro (Windows 11 Enterprise or Windows 10 Enterprise available with a Volume Licensing Agreement)
	Windows 11 Pro (preinstalled with Windows 10 Pro Downgrade)
	FreeDOS
	Red Hat Enterprise Linux® 8 Workstation
	Red Hat Enterprise Linux 9 Workstation
	Ubuntu Linux 22.04
Serviceability	End user replaceable parts
	AC adapter
	Battery
	Solid-state drive
	System memory
	WLAN module
	WWAN module

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right

Use the illustration and table to identify the components on the right side of the computer.

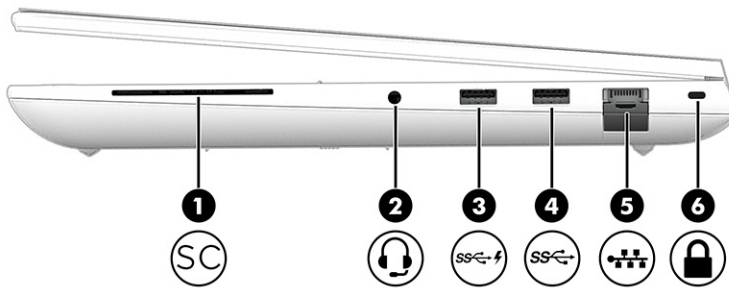


Table 2-1 Right-side components and their descriptions






Component	Description
(1) SC	Smart card reader Supports optional smart cards.
(2) 	Audio-out (headphone)/Audio-in (microphone) combo jack Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none">Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(3) 	USB SuperSpeed port with HP Sleep and Charge Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.

Table 2-1 Right-side components and their descriptions (continued)

Component	Description
(4)  USB SuperSpeed port	<p>Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode.</p> <p>NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.</p>
(5)  RJ-45 (network) jack/status lights	<p>Connects a network cable.</p> <ul style="list-style-type: none"> • Green (left): The network is connected. • Amber (right): Activity is occurring on the network.
(6)  Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p>NOTE: The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.</p>

Left

Use the illustration and table to identify the components on the left side of the computer.

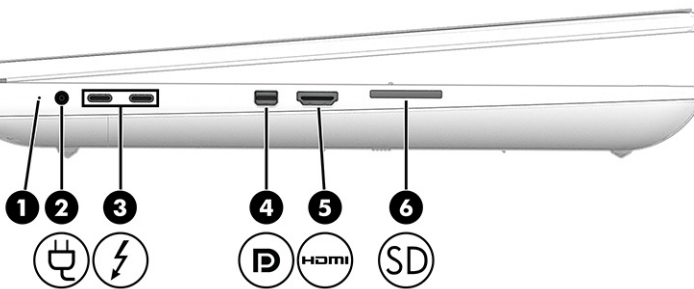


Table 2-2 Left-side components and their descriptions






Component	Description
(1) Battery light	<p>When AC power is connected:</p> <ul style="list-style-type: none"> • White: The battery charge is greater than 90 percent. • Amber: The battery charge is from 0 to 90 percent. • Off: The battery is not charging. <p>When AC power is disconnected (battery not charging):</p> <ul style="list-style-type: none"> • Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. • Off: The battery is not charging.
(2)  Power connector	Connects an AC adapter.

Table 2-2 Left-side components and their descriptions (continued)

Component	Description
<p>(3)  USB Type-C® Thunderbolt™ ports with HP Sleep and Charge and DisplayPort™ output (2)</p>	<p>Connect USB devices, provide high-speed data transfer, and charge small devices (such as a smartphone), even when the computer is off.</p> <p>NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device.</p> <p>- and -</p> <p>Connect display devices that have a USB Type-C connector, providing DisplayPort output.</p> <p>NOTE: Your computer might also support a Thunderbolt docking station.</p> <p>NOTE: On select computer models, the Mini DisplayPort and second USB Type-C Thunderbolt port cannot display connected devices simultaneously. If a device is connected to both of these ports, only the device connected to the USB Type-C Thunderbolt port is displayed.</p>
<p>(4)  Mini DisplayPort connector</p>	<p>Connects an optional digital display device, such as a high-performance monitor or projector.</p> <p>NOTE: On select computer models, the Mini DisplayPort and second USB Type-C Thunderbolt port cannot display connected devices simultaneously. If a device is connected to both of these ports, only the device connected to the USB Type-C Thunderbolt port is displayed.</p>
<p>(5)  HDMI® port</p>	<p>Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface® (HDMI) device.</p>
<p>(6)  Memory card reader</p>	<p>Reads optional memory cards that store, manage, share, or access information.</p> <p>To insert a card:</p> <ol style="list-style-type: none"> 1. Hold the card label-side up, with the connectors facing the computer. 2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. <p>To remove a card:</p> <ul style="list-style-type: none"> ■ Press in on the card, and then remove it from the memory card reader.

Display

Use the illustration and table to identify the display components.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

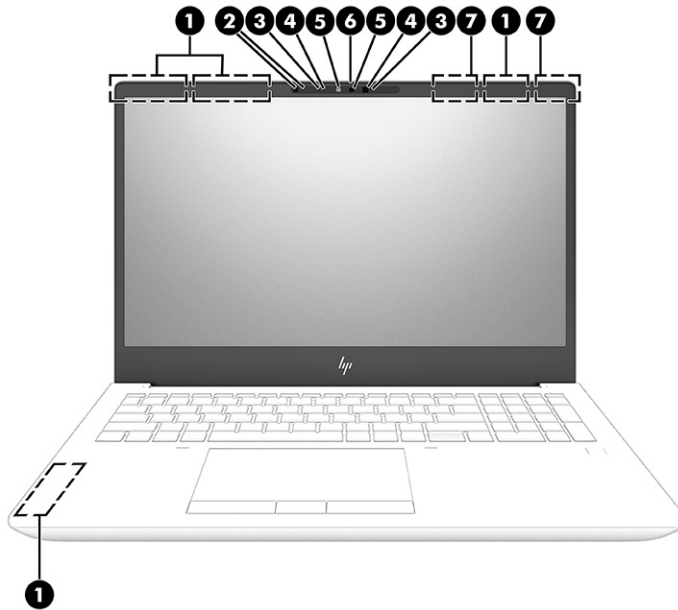


Table 2-3 Display components and their descriptions

Component	Description
(1) WWAN antennas* (4) (select products only)	Send and receive wireless signals to communicate with wireless wide area networks (WWANs).
(2) Ambient light sensors	Adjust the brightness of the display, depending on the ambient light. NOTE: Depending on your computer model, there might be one or two ambient light sensors.
(3) Internal microphones (2) (select products only)	Record sound.
(4) Camera lights (select products only)	On: One or more cameras are in use.
(5) Cameras (select products only)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(6) Camera privacy cover (select products only)	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
(7) WLAN antennas* (2) (select products only)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).

Table 2-3 Display components and their descriptions (continued)

Component	Description
*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.	
For wireless regulatory notices, see the section of the <i>Regulatory, Safety, and Environmental Notices</i> that applies to your country or region.	
To access this guide:	
<ul style="list-style-type: none">■ Select the Search icon in the taskbar, type <code>HP Documentation</code> in the search box, and then select HP Documentation.	

Top cover

Use the illustration and table to identify the top cover component.

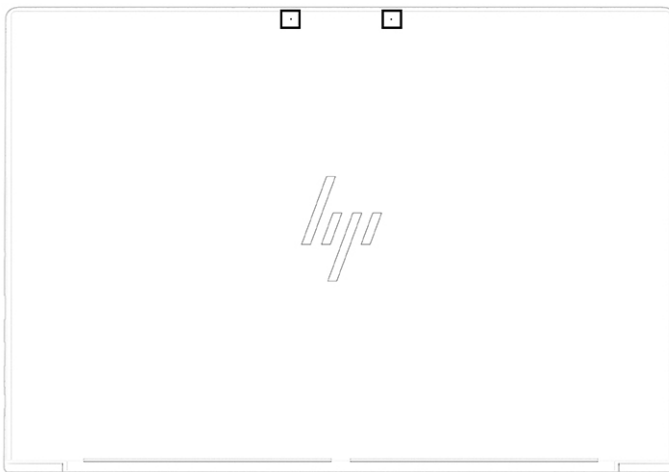



Table 2-4 Top cover component and its description

Component	Description
Internal microphones (2) (select products only)	Record sound.

Keyboard area

Keyboards can vary by language.

 **NOTE:** The keyboard, including the function keys and power key (select products only), is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad

The touchpad settings and components are described here.

Touchpad settings

You learn how to adjust the touchpad settings and components here.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the `Tab` key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

Touchpad components

Use the illustration and table to identify the touchpad components.

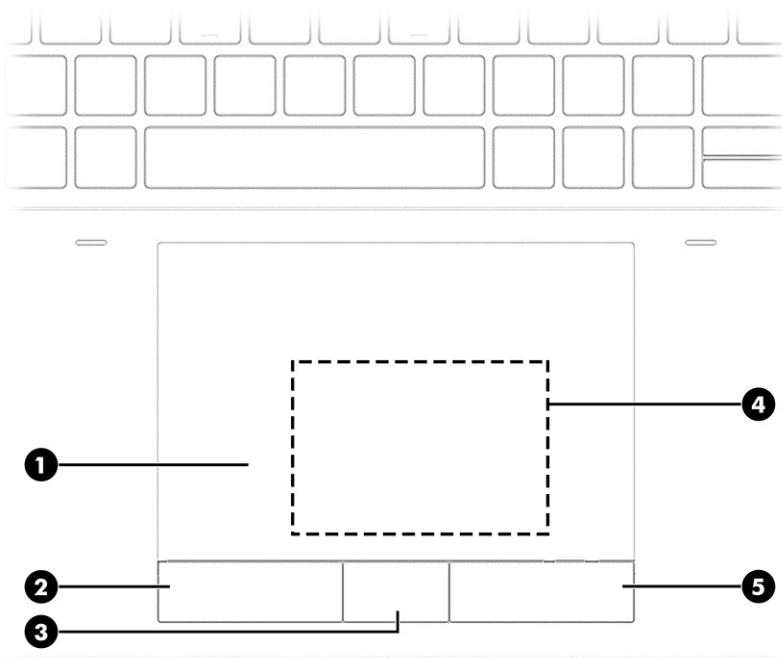


Table 2-5 Touchpad components and their descriptions

Component	Description
(1) Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2) Left touchpad button	Functions like the left button on an external mouse.
(3) Center touchpad button	Functions like the center button on an external mouse.
(4) Near Field Communications (NFC) tapping area and antenna (select products only)*	Allows you to wirelessly share information when you tap the area with an NFC-enabled device.

Table 2-5 Touchpad components and their descriptions (continued)

Component	Description
(5) Right touchpad button	Functions like the right button on an external mouse.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type **HP Documentation** in the search box, and then select **HP Documentation**.

Lights

Use the illustration and table to identify the lights on the computer.

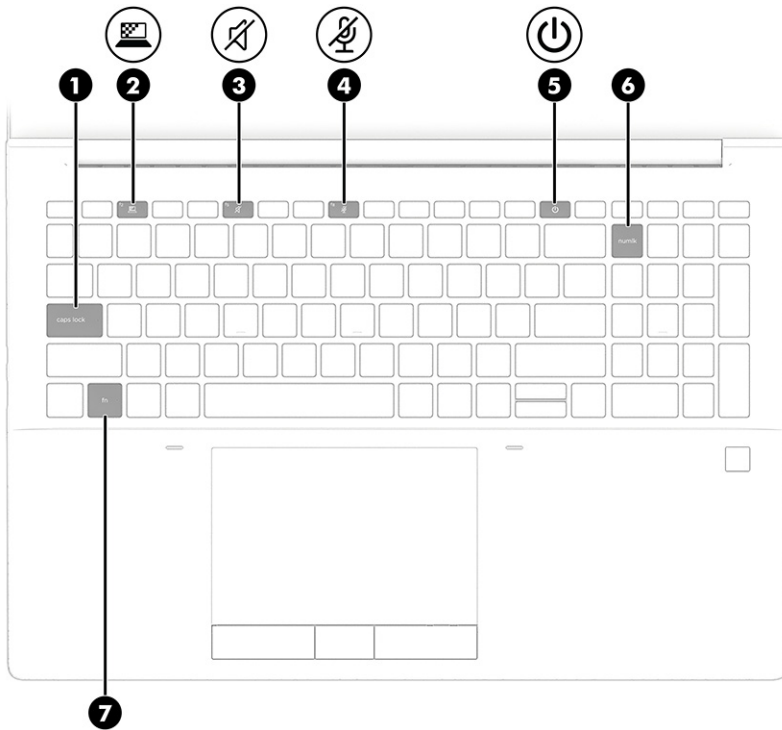


Table 2-6 Lights and their descriptions







Component	Description
(1) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2) Privacy key light (select products only)	On: Privacy screen is on, which helps prevent side-angle viewing.
(3)  Mute light	<ul style="list-style-type: none"> On: Computer sound is off. Off: Computer sound is on.

Table 2-6 Lights and their descriptions (continued)

Component	Description
(4)  Microphone mute light	<ul style="list-style-type: none">• On: Microphone is off.• Off: Microphone is on.
(5)  Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components.• Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.
(6)  Num Lk light	On: Num Lk is on.
(7)  Fn lock light	On: The fn key is locked.

Button and fingerprint reader

Fingerprint readers can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

 **IMPORTANT:** To verify that your computer supports fingerprint reader sign-in, select the **Search** icon in the taskbar, type `Sign-in options` in the search box, and then select the **Sign-in options** app. If **Fingerprint recognition** is not listed as an option, then your notebook does not include a fingerprint reader.

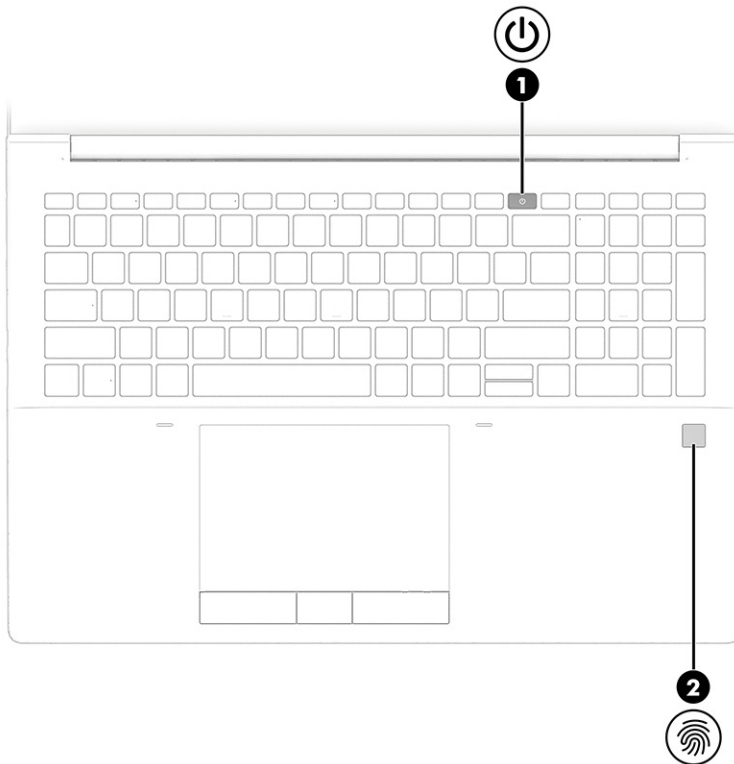


Table 2-7 Button and fingerprint reader and their descriptions



Component	Description
(1)  Power button	<ul style="list-style-type: none"> • When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings, use the Power icon.</p> <ul style="list-style-type: none"> • Right-click the Power icon , and then select Power and sleep settings.

Table 2-7 Button and fingerprint reader and their descriptions (continued)

Component	Description
(2) Fingerprint reader (select products only)	<p>Allows a fingerprint logon to Windows, instead of a password logon.</p> <ul style="list-style-type: none"> Touch your finger to the fingerprint reader. <p>IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.</p>

Special keys

Use the illustration and table to identify the special keys.

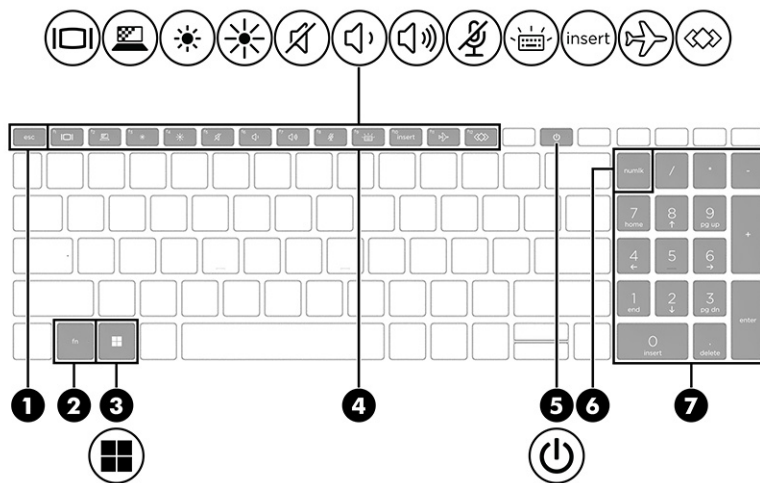


Table 2-8 Special keys and their descriptions




Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .
(3)  Windows key	<p>Opens the Start menu.</p> <p>NOTE: Pressing the Windows key again will close the Start menu.</p>
(4) Action keys	Execute frequently used system functions.

Table 2-8 Special keys and their descriptions (continued)

Component	Description
<p>(5)  Power button</p>	<ul style="list-style-type: none"> • When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings, use the Power icon.</p> <ul style="list-style-type: none"> • Right-click the Power icon , and then select Power and sleep settings.
<p>(6) <code>num lk</code> key</p>	<p>Alternates between the navigational and numeric functions on the integrated numeric keypad.</p>
<p>(7) Integrated numeric keypad</p>	<p>A separate keypad to the right of the alphabet keyboard. When <code>num lk</code> is pressed, the integrated keypad can be used like an external numeric keypad.</p> <p>NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.</p>

Bottom

Use the illustration and table to identify the bottom components.

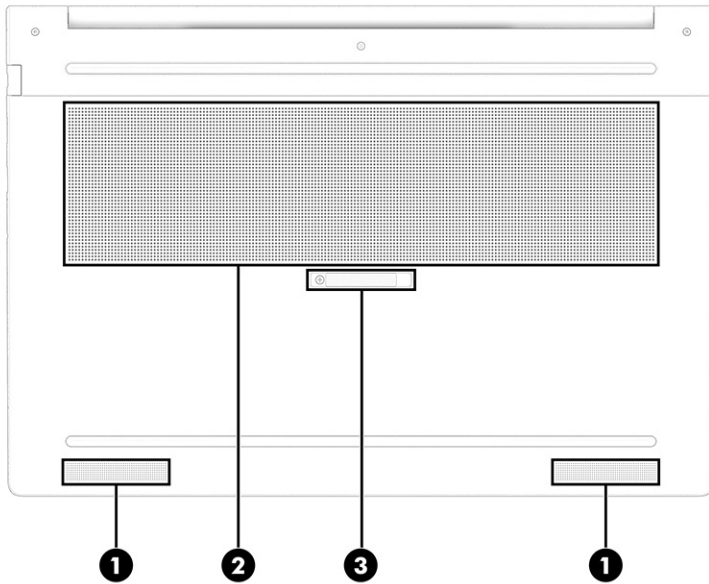


Table 2-9 Bottom components and their descriptions

Component		Description
(1)	Speakers (2)	Produce sound.
(2)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)	Service door release latch and security screw	Releases the service door.

Rear

Use the illustration and table to identify the rear component.




Table 2-10 Rear component and its description

Component	Description
Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information you might need when you troubleshoot system problems or travel internationally with the computer. Labels might be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.

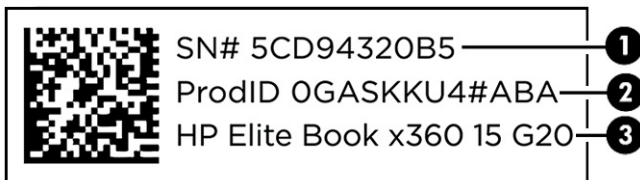


Table 2-11 Service label components

Component	
(1)	Serial number
(2)	Product ID
(3)	HP product name

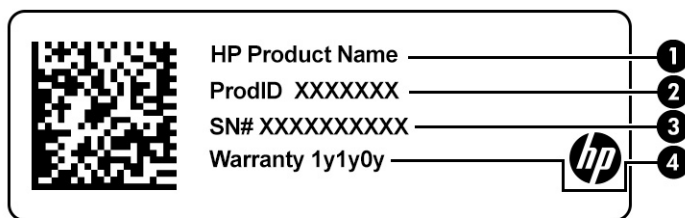


Table 2-12 Service label components

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

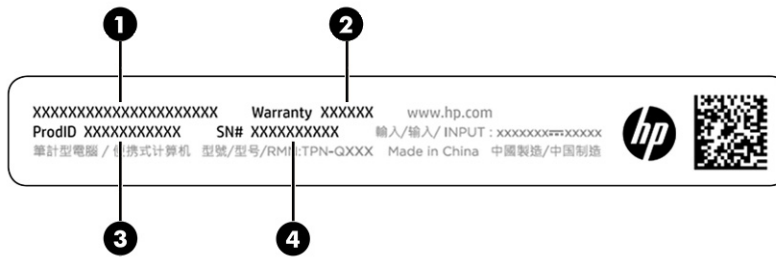


Table 2-13 Service label components

Component	
(1)	HP product name
(2)	Warranty period
(3)	Product ID
(4)	Serial number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.


Inserting a SIM card in the service bay


To insert a SIM card, follow these steps.


1. Turn off the computer by using the Shut down command.
2. Close the display.
3. Disconnect all external devices connected to the computer.
4. Unplug the power cord from the AC outlet.
5. Turn the computer upside down on a flat surface, with the service cover toward you.
6. Remove the service cover, and then remove the battery.

For steps on removing the service cover and battery, see [Service cover on page 41](#) and [Battery on page 42](#).


7. Slide the SIM tray cover to the left **(1)**, open the cover **(2)**, and then insert the SIM card into the SIM tray **(3)**.

 **NOTE:** The SIM card or the SIM card slot in your computer might look different from the illustration in this section.

 **NOTE:** The SIM card slot might have an icon to show which way the card should be inserted into the computer.

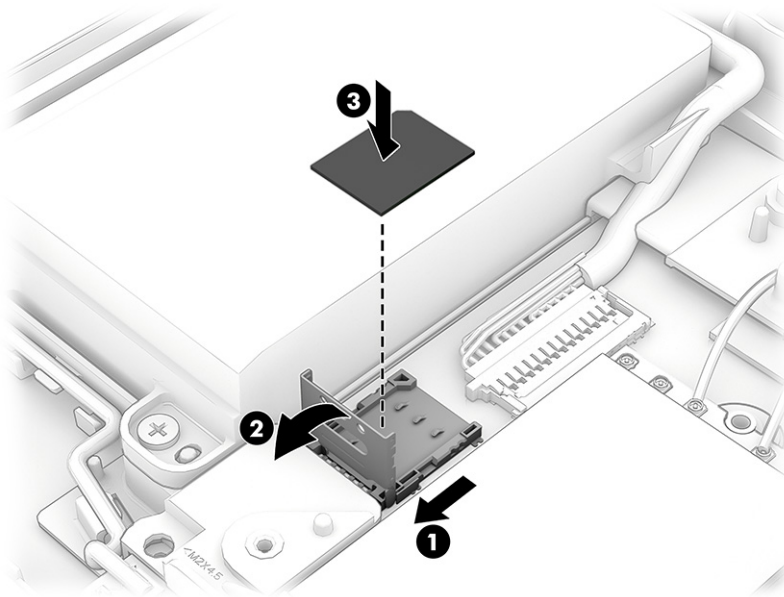

8. Close the SIM tray cover (1) and slide it to the right (2).

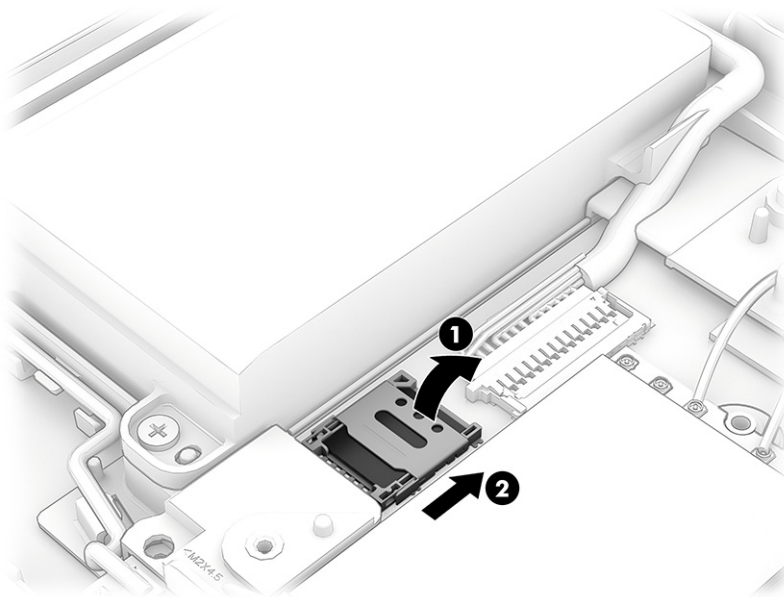

To remove the SIM card, reverse the procedures as described previously.

9. Replace the battery and service cover.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

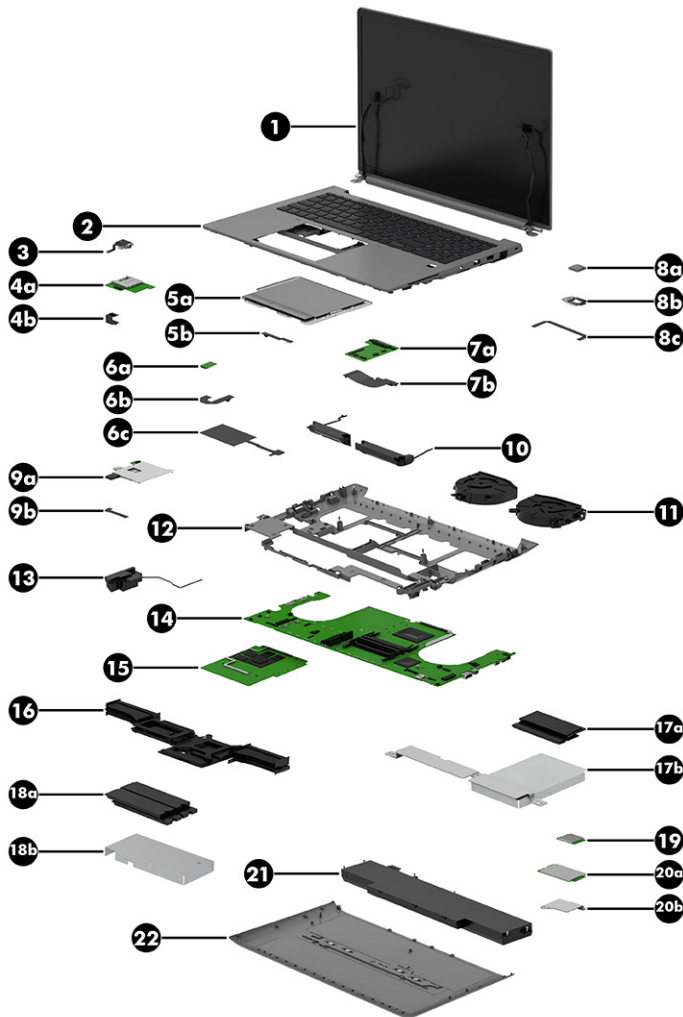


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly	
	NOTE: Display assemblies are available both as whole units and as subcomponents. For information on display subcomponent spare parts, see Display assembly subcomponents on page 25 .	
	40.6 cm (16.0 in), HP DreamColor, WQUXGA, antiglare, 500 nits, models without a camera	N50677-001
	40.6 cm (16.0 in), HP DreamColor, WQUXGA, antiglare, 500 nits, models with a camera	N50678-001
	40.6 cm (16.0 in), WQUXGA, OLED, BrightView, low blue light, 400 nits, touch screen	N50680-001
	40.6 cm (16.0 in), WQUXGA, OLED, BrightView, 400 nits, models with a camera and WWAN, touch screen	N54294-001
	40.6 cm (16.0 in), WUXGA, LCD, antiglare, 400 nits, models with a camera and WWAN, touch screen	N54293-001
	40.6 cm (16.0 in), WUXGA, LCD, antiglare, 400 nits, models out a camera and WWAN, touch screen	N54295-001
	40.6 cm (16.0 in), WUXGA, WLED + low blue light, antiglare, 400 nits, touch screen	N50679-001
(2)	Top cover with keyboard (includes cable)	
	NOTE: For a detailed list of country codes, see Top cover with keyboard on page 89 .	
	N57446-041 and N57447-041 are specific to Germany. The other keyboards are not available in Germany.	
	RGB per-key lighting	N19205-xxx
	Backlit, privacy filter	N19206-xxx
	Backlit	N19204-xxx
	Backlit, privacy filter, for use in Germany	N57446-041
	Backlit, for use in Germany	N57447-041
(3)	Audio jack (includes cable)	N22026-001
(4a)	SD card reader (includes cable)	N19241-001
	NOTE: The SD card reader cable is also included in the Cable Kit, spare part number N19223-001.	
(4b)	SD card reader cable (included in the Cable Kit, spare part number N19223-001)	
(5a)	Touchpad (does not include cable)	
	NOTE: The touchpad cable is included in the Cable Kit, spare part number N19223-001.	
	With NFC module antenna	N50690-001
	Without NFC module antenna	N50689-001
(5b)	Touchpad cable (included in the Cable Kit, spare part number N19223-001)	
(6a)	NFC module (does not include the antenna or cable)	N19236-001
(6b)	NFC module cable (included in the Cable Kit, spare part number N19223-001)	
(6c)	NFC module antenna (included with the touchpad spare part kit as spare part number N50690-001)	
	RTC battery (not illustrated, includes cable and double-sided adhesive)	N19214-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(7a)	Keyboard hub (does not include cable)	N19239-001
(7b)	Keyboard hub cable (included in the Cable Kit, spare part number N19223-001)	
(8a)	Fingerprint reader (does not include cable)	N19235-001
(8b)	Fingerprint reader bracket (included with the fingerprint reader spare part kit)	
(8c)	Fingerprint reader cable (included in the Cable Kit, spare part number N19223-001)	
(9a)	Card reader (includes cable)	N54296-001
(9b)	Card reader cable (included in the Cable Kit, spare part number N19223-001)	
(10)	Speakers (includes left and right speakers, cables, and four rubber isolators)	N19218-001
(11)	Fans (2, include captive screws and cables)	N19217-001
(12)	Bottom case	N19248-001
(13)	WWAN antenna (includes WWAN antenna cable and transceiver and double-sided adhesive)	N19221-001
(14)	System board (includes integrated processor and replacement thermal material)	
	All system boards use the following part numbers:	
	xxxxxx-001: Non-Windows operating system	
	xxxxxx-601: Windows operating system	
	NOTE: Replacement thermal pads are also available in the Thermal Pad Kit, spare part number N19245-001.	
	Intel Core i9-13950HX, models with WLAN, without WWAN	N50676-xxx
	Intel Core i9-13950HX, models without WLAN, Bluetooth, or WWAN	N50675-xxx
	Intel Core i9-13950HX, models with WLAN and WWAN	N50674-xxx
	Intel Core i9-13900HX, models with WLAN, without WWAN	N50673-xxx
	Intel Core i9-13900HX, models without WLAN, Bluetooth, or WWAN	N50672-xxx
	Intel Core i9-13900HX, models with WLAN and WWAN	N50671-xxx
	Intel Core i7-13850HX, models with WLAN, without WWAN	N50670-xxx
	Intel Core i7-13850HX, models without WLAN, Bluetooth, or WWAN	N50669-xxx
	Intel Core i7-13850HX, models with WLAN and WWAN	N50668-xxx
	Intel Core i7-13700HX, models with WLAN, without WWAN	N50667-xxx
	Intel Core i7-13700HX, models without WLAN, Bluetooth, or WWAN	N50666-xxx
	Intel Core i7-13700HX, models with WLAN and WWAN	N50665-xxx
	Intel Core i5-13600HX, models with WLAN, without WWAN	N50664-xxx
	Intel Core i5-13600HX, models without WLAN, Bluetooth, or WWAN	N50663-xxx
	Intel Core i5-13600HX, models with WLAN and WWAN	N50662-xxx
(15)	Graphics card	
	NVIDIA GeForce RTX 4090	N54297-001
	NVIDIA RTX A1000	N54298-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	NVIDIA RTX 5000 Ada	N54302-001
	NVIDIA RTX 4000 Ada	N54301-001
	NVIDIA RTX 3500 Ada	N54300-001
	NVIDIA RTX 2000 Ada	N54299-001
	Beam connector (not illustrated)	N19429-001
(16)	Heat sink (includes captive screws and replacement thermal material)	
	NOTE: Replacement thermal pads are also available in the Thermal Pad Kit, spare part number N19245-001.	
	For use on models with an NVIDIA high-range graphics card	N19230-001
	For use on models with an NVIDIA mid-range graphics card	N50687-001
	For use on models with a graphic subsystem with UMA memory	N19228-001
(17a)	Memory modules	
	32 GB (DDR5-4800, ECC)	N08504-001
	32 GB (DDR5-4800, NECC)	N05331-001
	16 GB (DDR5-4800, ECC)	N08503-001
	16 GB (DDR5-4800, NECC)	N97596-001
	8 GB (DDR5-4800, NECC)	N97595-001
	32 GB (DDR5-5600, NECC)	N50075-001
	16 GB (DDR5-5600, NECC)	N38627-001
	8 GB (DDR5-5600, NECC)	N37792-001
(17b)	Memory module compartment cover (included in the Bracket Kit, spare part number N50688-001)	
(18a)	Solid-state drive	
	4 TB, PCIe-4×4, TLC	N06219-001
	NOTE: To ensure correct operation, the 4 TB solid-state drive must be installed in solid-state drive slot 2 or 4. For information on solid-state drive removal and replacement, see Solid-state drive on page 51 .	
	2 TB, PCIe-4×4, ZTurbo, TLC	M52027-001
	2 TB, PCIe-4×4, SED, TLC	M23414-001
	1 TB, PCIe-4×4, TLC	N16560-001
	1 TB, PCIe-4×4, SED, TLC	M23415-001
	512 GB, PCIe-4×4, TLC	N17436-001
	512 GB, PCIe-4×4, SED, TLC	M52031-001
(18b)	Solid-state drive shield (included in the Bracket Kit, spare part number N50688-001)	
(19)	WLAN module	
	Intel AX211 Wi-Fi 6E + Bluetooth 5.3 vPro	M53363-001
	Intel AX211 Wi-Fi 6E + Bluetooth 5.3 non-vPro	M53366-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	WLAN module plate (not illustrated, includes double-sided adhesive; component included in the Plastics Kit, spare part number N19226-001)	
(20a)	WWAN module	
	Intel XMM 7560 R+ LTE-Advanced Pro (Cat 16)	N00182-001
	Intel 5000 5G solution	N00181-001
	Cat-M	M78607-005
	WWAN module plate (not illustrated, includes double-sided adhesive; component included in the Plastics Kit, spare part number N19226-001)	
(20b)	WWAN module thermal cover. This component is included in the Bracket Kit, spare part number N50688-001.	
(21)	Battery (4 cell, 56 Whr)	M86087-001
(22)	Service cover	
	For use on models with WWAN capability	N50686-001
	For use on models not with WWAN capability	N50685-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

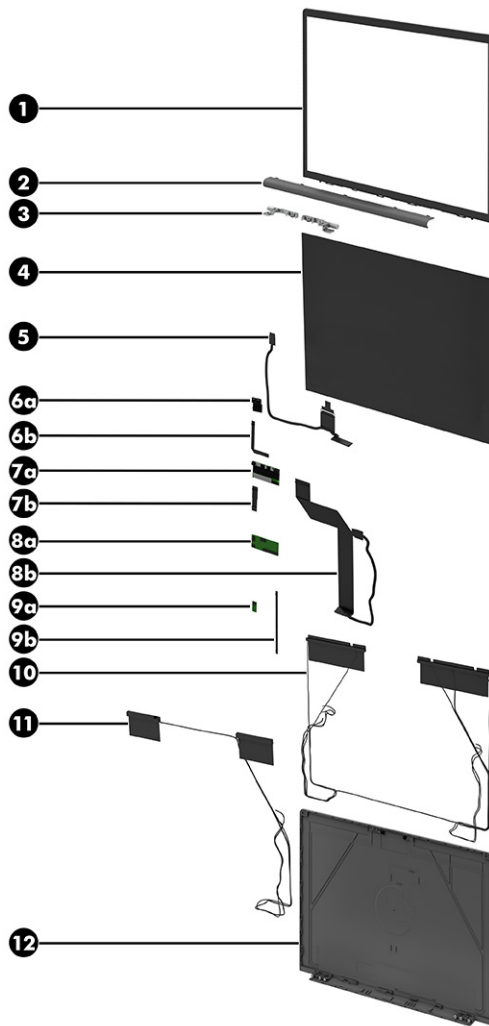


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display bezel	
	For use on models with a 40.6 cm (16.0 in) display assembly and a camera	N19209-001
	For use on models with a 40.6 cm (16.0 in) display assembly without a camera	N19210-001
	For use on models with a 39.6 cm (15.6 in) display assembly and a camera	N19207-001
	For use on models with a 39.6 cm (15.6 in) display assembly without a camera	N19208-001
(2)	Display hinge cover	N19234-001
(3)	Display Hinge Kit (includes display hinge cover and left and right hinges)	N19233-001
(4)	Display panel	
	40.6 cm (16.0 in), antiglare, privacy, 1000 nits	N19251-001
	40.6 cm (16.0 in), BrightView, 400 nits	N19252-001
	39.6 cm (15.6 in), FHD, 250 nits	N19249-001
(5)	Display panel cable (included in the Display Cable Kit)	N19224-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
(6a)	Ambient light sensor module (includes double-sided adhesive; does not include cable)	
	For use in models with a camera module	N19237-001
	For use in models without a microphone	N32747-001
(6b)	Ambient light sensor module cable (included in the Display Cable Kit)	N19224-001
(7a)	Camera module (includes double-sided adhesive; does not include cable)	N50684-001
(7b)	Camera module cable (included in the Display Cable Kit)	N19224-001
(8a)	Display hub board (includes double-sided adhesive; does not include cable)	N50683-001
(8b)	Display hub board cable (included in the Display Cable Kit)	N19224-001
(9a)	Sensor module (does not include cable)	N50682-001
(9b)	Sensor module cable (included in the Display Cable Kit)	N19224-001
(10)	WWAN antennas (includes four WWAN antenna cables and transceivers and double-sided adhesive).	N19220-001
(11)	WLAN antennas (includes left and right WLAN antenna cables and transceivers and double-sided adhesive).	N19219-001
(12)	Display back cover	
	For use on models with a 40.6 cm (16.0 in) display assembly with WWAN capability	N54292-001
	For use on models with a 40.6 cm (16.0 in) display assembly without WWAN capability	N54291-001
	For use on models with a 39.6 cm (15.6 in) display assembly	N54290-001

Cables

To identify the Cable Kit components, use this illustration and table.

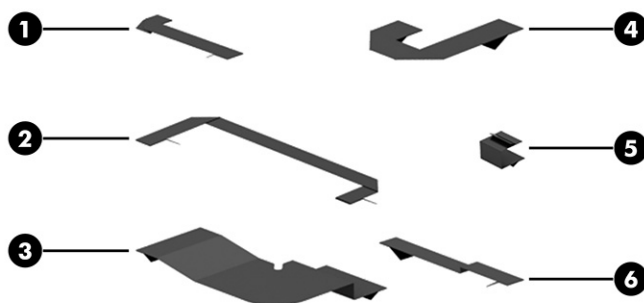


Table 3-3 Cable Kit components descriptions

Item	Component
	The cables listed below are available in the Cable Kit, spare part number N19223-001.
(1)	Card reader cable

Table 3-3 Cable Kit components descriptions (continued)

Item	Component
(2)	Fingerprint reader cable
(3)	Keyboard hub cable
(4)	NFC module cable
(5)	SD card reader cable
(6)	Touchpad cable

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-4 Miscellaneous part descriptions and part numbers

Component	Spare part number
HP Smart AC adapter	
230 W (PFC, 3 pin, 4.5 mm, slim barrel)	N22367-001
200 W (PFC, RC, 3 pin, 4.5 mm, slim barrel)	L74881-001
150 W (PFC, 4.5 mm, slim barrel)	L32661-001
Adapter	
HP HDMI-to-VGA Adapter	701943-001
HP USB Type-C-to-DisplayPort adapter	831753-001
HP USB Type-C-to-HDMI 2.0 adapter	935325-001
HP USB Type-C-to-USB 3.0 adapter	814618-001
HP USB Type-C-to-VGA adapter	831751-001
HP USB Type-C-to-RJ-45 adapter	M95985-001
HP USB Type-C-to-RJ-45 adapter (TAA)	N22602-001
Backpack	
HP business 17.3 in laptop backpack	M55004-001
HP executive 15.6 in backpack	L59632-001
HP executive 15.6 in topload backpack	L59631-001
HP business 15.6 in laptop bag	M55006-001
Bracket Kit (includes interposer bracket, memory module cover, RJ-45 bracket, RJ-45 door, solid-state drive cover, and WWAN module thermal cover)	N50688-001
HP USB External DVD+RW Drive	747080-001
Duckhead adapter for use in Japan	L33157-001
HP USB slim SmartCard CCID keyboard (for use in the United States)	911725-001
HP Thunderbolt 280 W G4 docking station combo cable	M97106-001
HP Thunderbolt 280 W G4 docking station with combo cable (TAA)	N17491-001

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Cable for HP Thunderbolt 280 W G4 docking station	M88059-001
Lock	
HP nano lock	918431-001
HP SureKey cable lock	L65088-001
Mouse	
HP Bluetooth travel mouse	L62043-001
HP comfort grip wireless mouse	691922-001
HP USB laser mouse	674318-001
HP USB travel mouse	757770-001
Plastics Kit (includes fingerprint reader blank insert, SD card blank insert, WLAN plate, and WWAN plate)	N19226-001
Power cord (1.8 m [6.0 ft], 3 prong)	
For use in Brazil	491683-202
For use in Denmark	491683-081
For use in Europe	491683-021
For use in India	491683-D61
For use in Israel	491683-BB1
For use in Italy	491683-061
For use in North America	491683-001
For use in the People's Republic of China	491683-AA1
For use in South Africa	491683-L31
For use in South Korea	491683-AD1
For use in Switzerland	491683-111
For use in Taiwan	491683-AB1
For use in Thailand	491683-201
For use in the United Kingdom	491683-031
Power cord (C13, 1.0 m [3.3 ft], premium, HF)	
For use in Argentina	L32029-001
For use in Australia (LW)	N24670-001
For use in Brazil	L32030-001
For use in Denmark (LW)	N24672-001
For use in Europe (LW)	N24669-001
For use in India (LW)	N24679-001
For use in Israel (LW)	N24678-001
For use in Italy	L32031-001

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in Japan (LW)	N24680-001
For use in North America (LW)	N24671-001
For use in the People's Republic of China (LW)	N24676-001
For use in South Africa (LW)	N24674-001
For use in South Korea (LW)	N24675-001
For use in Switzerland (LW)	N24673-001
For use in Taiwan (LW)	N24677-001
For use in Thailand (LW)	N51106-001
For use in Thailand (bundle)	M85413-001
For use in the United Kingdom (LW)	N24668-001
Power cord (C13, 1.83 m [6.0 ft], conventional)	
For use in Argentina	L82622-001
For use in Australia	L82623-001
For use in Denmark (HF)	M54992-001
For use in Europe (HF)	M54990-001
For use in Japan	L82624-001
For use in Switzerland (HF)	M54994-001
Power cord (C5, 1.0 m [3.3 ft], conventional with tag)	
For use in Argentina	L31379-001
For use in Australia	L31380-001
For use in Brazil	L31381-001
For use in Denmark	L31382-001
For use in Europe	L31383-001
For use in India	L31385-001
For use in Israel	L31384-001
For use in Italy	L31386-001
For use in Japan	L31387-001
For use in North America	L31389-001
For use in the People's Republic of China	L31390-001
For use in South Africa	L31391-001
For use in South Korea	L31388-001
For use in Switzerland	L31392-001
For use in Taiwan	L31394-001
For use in Thailand (bundle)	M85422-001

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in the United Kingdom	L31395-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker, HF)	
For use in Denmark	M79264-001
For use in Europe	M79266-001
For use in Switzerland	M79265-001
Power cord (C5, 1.0 m [3.3 ft], premium with sticker, HF)	
For use in Denmark	N17810-001
For use in Europe	N17812-001
For use in Switzerland	N17811-001
Rubber Kit (includes display bumper rubber)	N19244-001
Screw Kit	N19227-001
Cable Kit (includes keyboard hub cable, touchpad cable, smart card cable, SD card cable, NFC cable, and fingerprint reader cable)	N19223-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.


Tools required

You need the following tools to complete the removal and replacement procedures:

- Nonconductive, nonmarking pry tool
- Phillips P0 screwdriver
- Phillips P1 screwdriver
- Tweezers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.


 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors


Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.

 **IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
 - Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 34](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V
Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.			



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of 1 M Ω \pm 10% resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of 1 M Ω \pm 10% resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages

- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.


1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - or -
 - Select the **HP Easy Clean** icon in the taskbar.
 - or -
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 36](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 37](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer


Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 38](#).


1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 37](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.


Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.


After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 36](#), [Caring for wood veneer \(select products only\) on page 38](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.


Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.


 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 36](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 37](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.

- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations



Service consideration	Path to access information
Records of reported failure incidents stored on the computer	<p>Windows®:</p> <p>Preoperating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> 3. Press f10 to enter the BIOS setup. 4. (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. <p>- or -</p> <p>(On consumer products) Under the Main tab, select System Log.</p> <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. <p>Chrome™:</p> <ol style="list-style-type: none"> 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins	<p>To locate technical bulletins:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.


Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Repair professionals	To locate repair professionals: <ol style="list-style-type: none"><li data-bbox="679 310 906 338">1. Go to www.hp.com.<li data-bbox="679 359 1337 386">2. Place the cursor over Support resources to display more options.<li data-bbox="679 407 1066 434">3. Select Authorized service providers.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: <ol style="list-style-type: none"><li data-bbox="679 506 1177 533">1. Go to http://www.hp.com/go/techcenter/pcdiags.<li data-bbox="679 554 911 581">2. Select Get Support.<li data-bbox="679 602 1422 653">3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for authorized service provider parts


This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

See [Removal and replacement procedures preliminary requirements on page 32](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Service cover

To remove the service cover, use this procedure and illustration.


Table 5-1 Service cover descriptions and part numbers

Description	Spare part number
For use on models with WWAN capability	N50686-001
For use on models not with WWAN capability	N50685-001

Before removing the service cover, prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).

Remove the service cover:

1. Slide the service cover release latch **(1)** to the right far enough to access the security screw.
2. If present, remove the Phillips M2.0 × 6.0 security screw **(2)** that secures the service cover release latch in place.
3. Slide the service cover release latch **(3)** all the way to the right to release the service cover.
4. Slide the service cover **(4)** toward the front of the computer, and then remove the service cover.

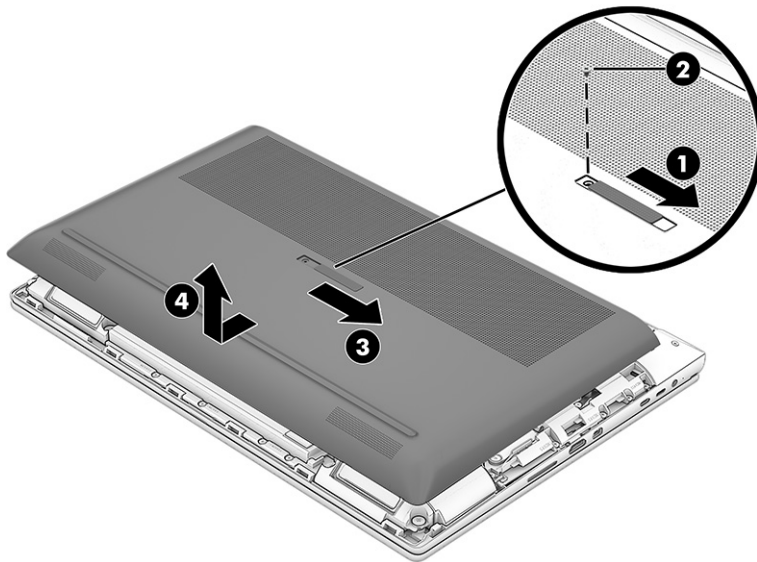

To replace the service cover, reverse the removal procedures.

Battery

To remove the battery, use this procedure and illustration.

Table 5-2 Battery description and part number

Description	Spare part number
Battery (4 cell, 56 Whr)	M86087-001

⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. Punctures and ruptures can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.

- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

📄 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable (1) from the system board.
2. Loosen the five captive Phillips screws (2) that secure the battery to the computer.
3. Swing the battery rear edge (3) up and forward until it rests at an angle.
4. Slide the battery (4) up and away from the computer and remove it.

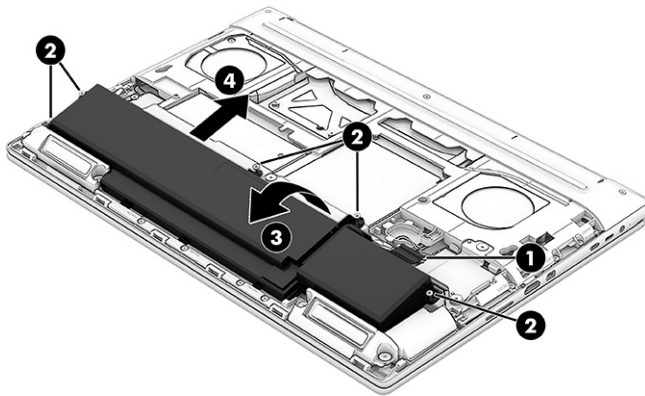

To replace the battery, reverse the removal procedures.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-3 WLAN module descriptions and part numbers

Description	Spare part number
Intel AX211 Wi-Fi 6E + Bluetooth 5.3 vPro	M53363-001
Intel AX211 Wi-Fi 6E + Bluetooth 5.3 non-vPro	M53366-001

📄 IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless


devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 42](#)).

Remove the WLAN module:


1. Remove the WLAN module plate **(1)** that secures the antenna cables to the module.
The WLAN module plate is included in the Plastics Kit, spare part number N19226-001.
2. Carefully disconnect the two antenna cables **(2)** from the module.
Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.
3. Remove the Phillips M2.0 × 3.0 screw **(3)** that secures the WLAN module to the system board. The WLAN module tilts up.
4. Remove the WLAN module **(4)** by pulling the module away from the slot at an angle.

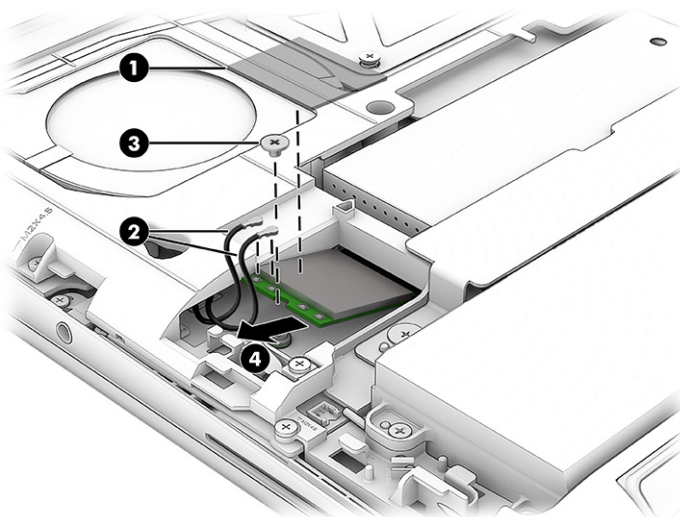

5. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

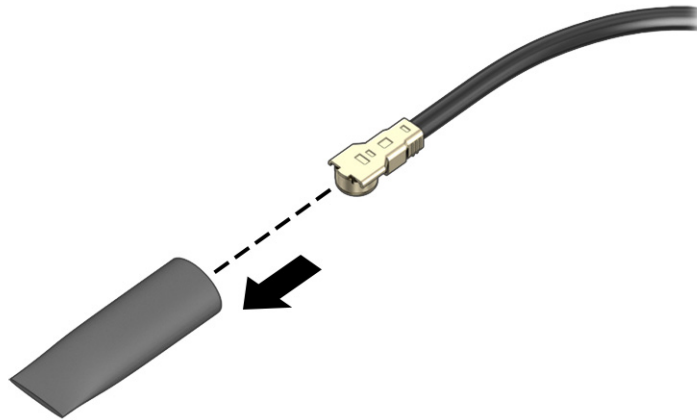

To replace the WLAN module, reverse the removal procedures.


 **NOTE:** The WLAN module is designed with a notch to prevent incorrect insertion.

WWAN module

To remove the WWAN module, use this procedure and illustration.

Table 5-4 WWAN module description and part number

Description	Spare part number
Intel XMM 7560 R+ LTE-Advanced Pro (Cat 16)	N00182-001
Intel 5000 5G solution	N00181-001
Cat-M	M78607-005

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WWAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 42](#)).

Remove the WWAN module:

1. Remove the two Phillips M2.0 × 5.0 screws **(1)** that secure the WWAN module thermal cover to the computer.


2. Remove the cover (2).

The WWAN module thermal cover is included in the Bracket Kit, spare part number N50688-001.

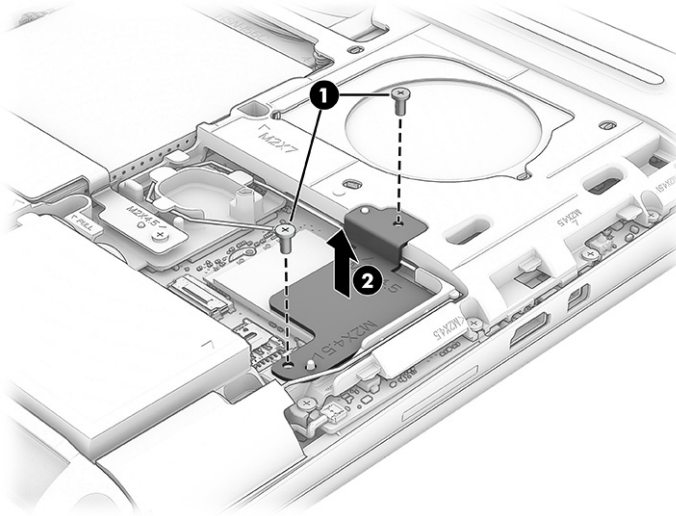

3. Thoroughly clean the thermal material from the surfaces of the WWAN module thermal cover and the WWAN module components each time the WWAN module thermal cover is removed. Replacement thermal material is included with the WWAN module thermal cover kit. The following illustrations show the replacement thermal material locations.

A thermal pad is used on the WWAN module (1) and on the WWAN module thermal cover (2) that services it.

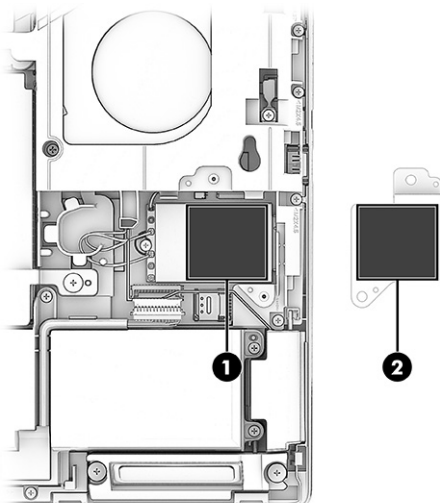


4. Remove the WWAN module plate (1) that secures the antenna cables to the module.

The WWAN module plate is included in the Plastics Kit, spare part number N19226-001.


5. Disconnect the WWAN antenna cables (2) from the terminals on the WWAN module.

Computer models have one to four WWAN antenna cables. The antenna cables have tags that identify them with a number that corresponds to a terminal on the WWAN module. Connect the antenna cable to the corresponding WWAN module terminal.


6. Remove the Phillips M2.0 × 3.0 screw (3) that secures the WWAN module to the system board. The WWAN module tilts up.
7. Remove the WWAN module (4) by pulling the module away from the slot at an angle.

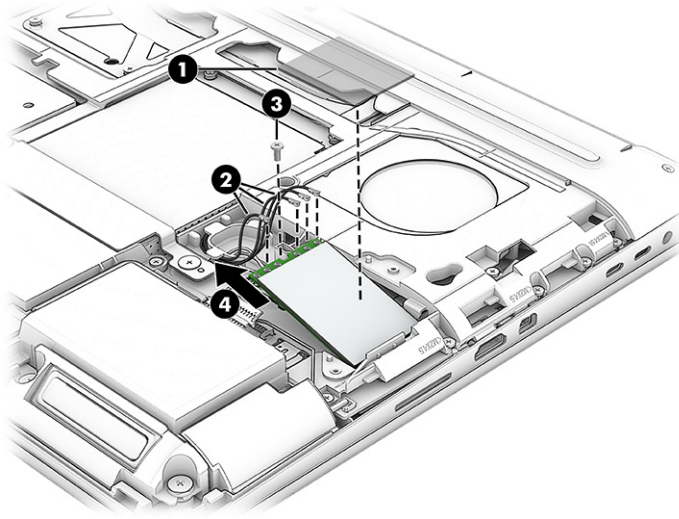

8. If the WWAN antenna is not connected to the terminal on the WWAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.

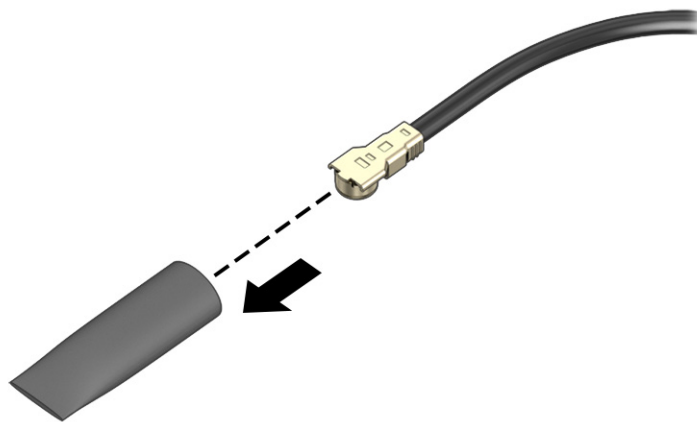

To replace the WWAN module, reverse the removal procedures.

 **NOTE:** The WWAN module is designed with a notch to prevent incorrect insertion.

Memory modules

To replace memory modules, use this procedure and illustration.

Table 5-5 Memory module descriptions and part numbers


Description	Spare part number
32 GB (DDR5-4800, ECC)	N08504-001
32 GB (DDR5-4800, NECC)	N05331-001
16 GB (DDR5-4800, ECC)	N08503-001
16 GB (DDR5-4800, NECC)	N97596-001
8 GB (DDR5-4800, NECC)	N97595-001
32 GB (DDR5-5600, NECC)	N50075-001
16 GB (DDR5-5600, NECC)	N38627-001
8 GB (DDR5-5600, NECC)	N37792-001

Before removing memory modules, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 42](#)).


If you are replacing a memory module, remove the existing memory module:

1. Remove the three Phillips M2.0 × 5.3 screws **(1)** that secure the memory module compartment cover to the computer.
2. Use the release tab **(2)** to remove the memory module compartment cover **(3)**.

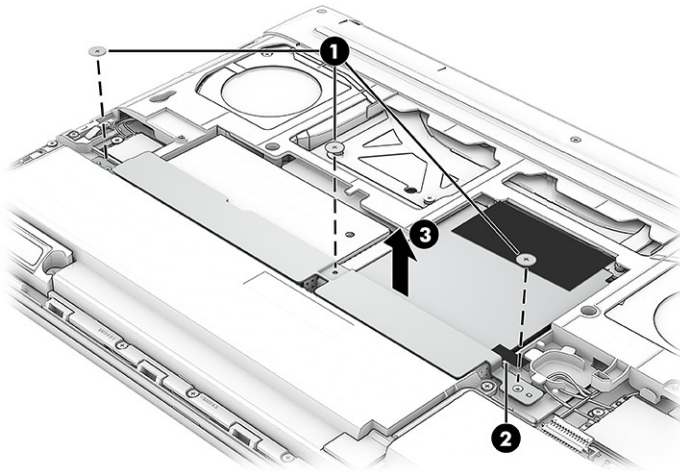


3. Detach the grounding tape **(1)** that secures the memory module compartment cover to the computer, and then remove the cover **(2)**.

The memory module compartment cover is included in the Bracket Kit, spare part number N50688-001.

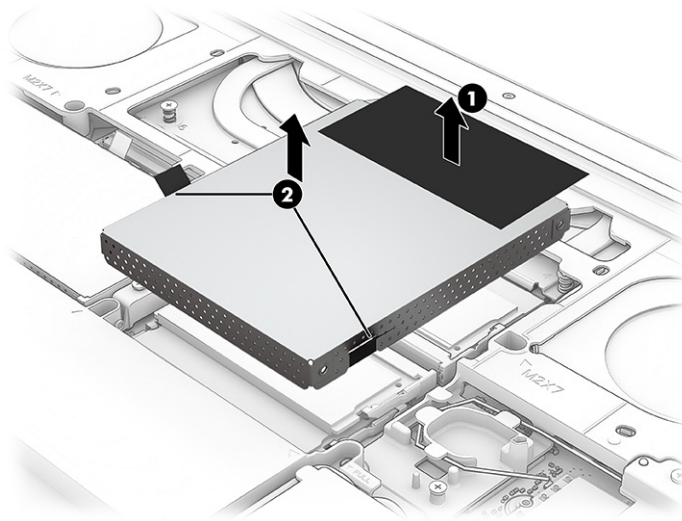


4. Thoroughly clean the thermal material from the surfaces of the memory module and the memory module compartment cover each time the compartment cover is removed. The following illustration shows the replacement thermal material locations.

Thermal pads are used on the memory modules (1) and on the memory module compartment cover areas (2) that service them.

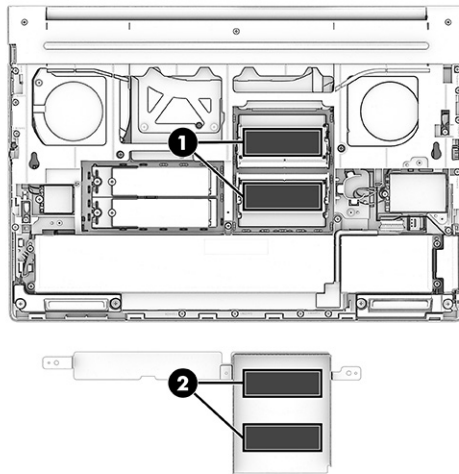


5. Spread the two retention clips outward (1) until the memory module tilts up at a 45° angle, and then remove the module (2). Use the same procedure to remove all memory modules.

To protect a memory module after removal, place it in an electrostatic-safe container.

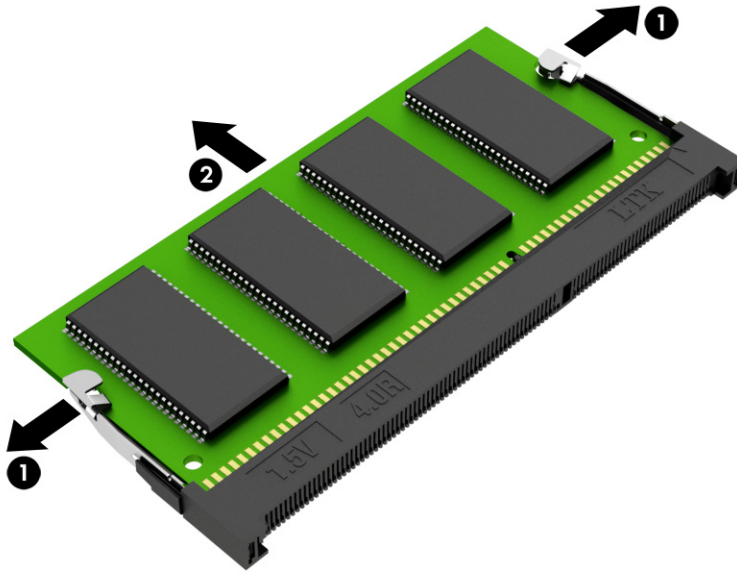


To install a memory module:

1. To install a memory module, align the notched edge of the module with the tab in the slot (1), and then press the module into the slot at an angle until it is seated (2).
2. Press down on the module until the side retention clips snap into place (3).

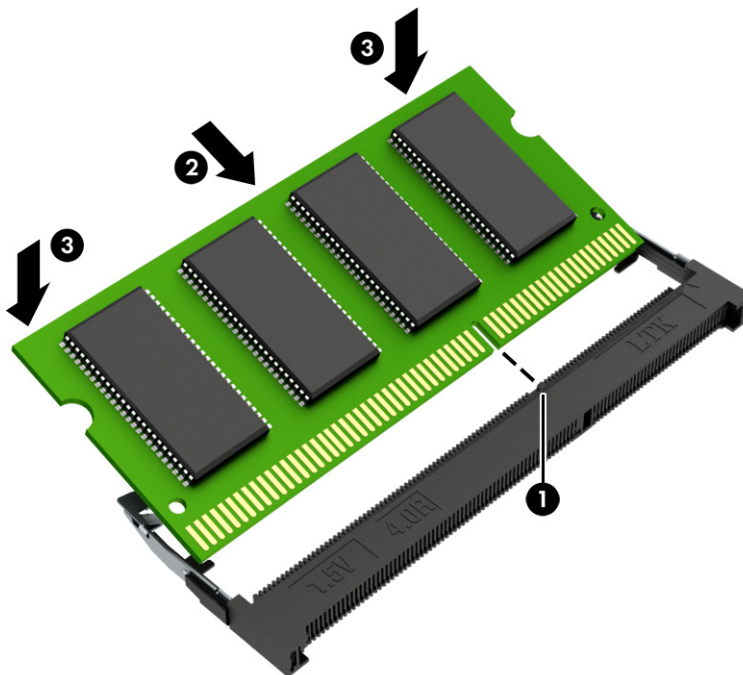

- When installing memory modules, be sure to install the memory modules into the memory module slots in sequential order, as shown in the following illustration.

The first memory module is installed in memory module slot (1), the second memory module is installed in memory module slot (2), the third memory module is installed in memory module slot (3), and the fourth memory module is installed in memory module slot (4).

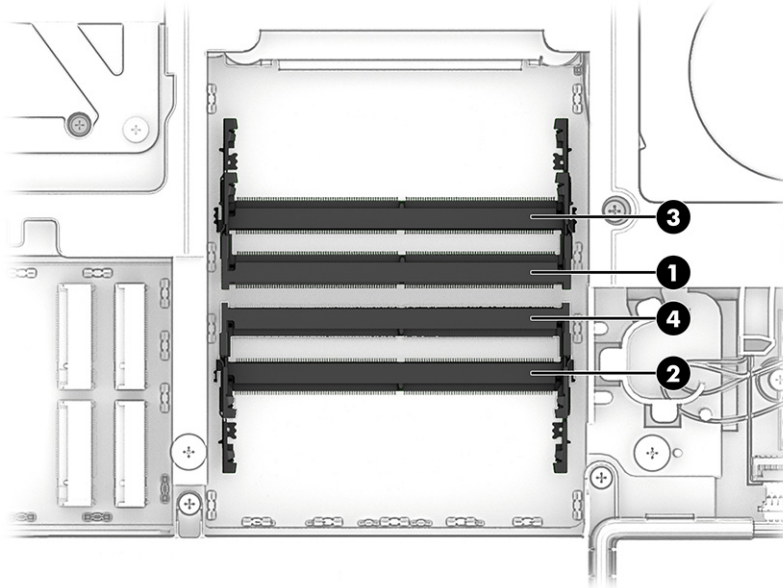

Solid-state drive

To remove a solid-state drive, use this procedure and illustration.

Table 5-6 Solid-state drive descriptions and part numbers

Description	Spare part number
4 TB, PCIe-4x4, TLC	N06219-001
NOTE: To ensure correct operation, the 4 TB solid-state drive must be installed in the computer's solid-state drive slots 2 or 4. For information on solid-state drive removal and replacement, see Solid-state drive on page 51 .	
2 TB, PCIe-4x4, ZTurbo, TLC	M52027-001
2 TB, PCIe-4x4, SED, TLC	M23414-001
1 TB, PCIe-4x4, TLC	N16560-001
1 TB, PCIe-4x4, SED, TLC	M23415-001
512 GB, PCIe-4x4, TLC	N17436-001
512 GB, PCIe-4x4, SED, TLC	M52031-001

Before removing a solid-state drive, follow these steps:


- Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
- Remove the service cover (see [Service cover on page 41](#)).

3. Disconnect the battery cable from the system board (see [Battery on page 42](#)).

Remove a solid-state drive:


1. Use the release tabs **(1)** to remove the solid-state drive shield **(2)** from the system board.

The solid-state drive shield is included in the Bracket Kit, spare part number N50688-001.

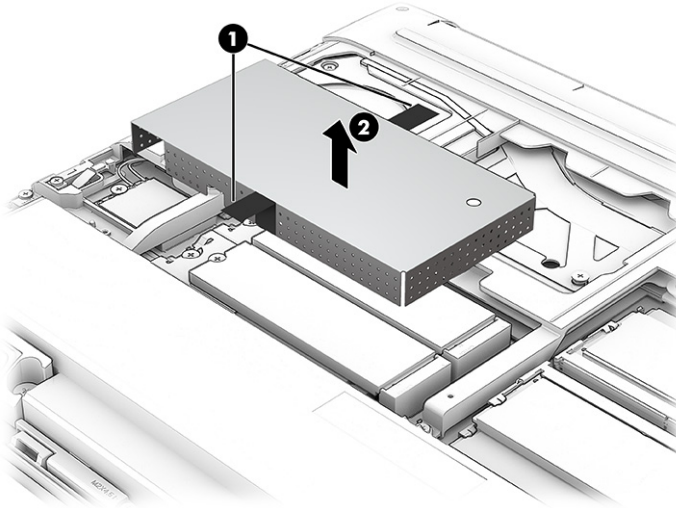


2. To remove a solid-state drive from slots 2 or 4, remove the Phillips M2.0 × 2.5 broad head screw **(1)** that secures the solid-state drive to the system board. The solid-state drive tilts up **(2)**.
3. Slide the solid-state drive **(3)** away from the slot at an angle.

 **NOTE:** Solid-state drives are designed with a notch **(4)** to prevent incorrect installation.

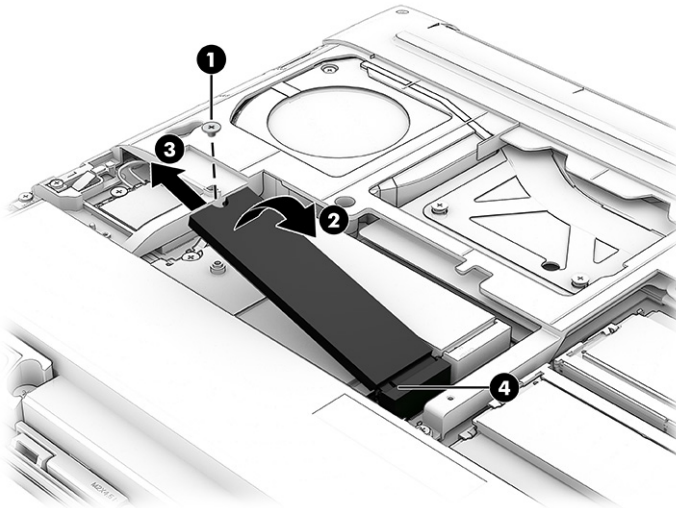


4. To remove a solid-state drive from slots 1 or 3, first remove the solid-state drive from slots 2 or 4.
5. Remove the Phillips M2.0 × 2.5 screw **(1)** from the left side of the retention cover and the Phillips M2.0 × 2.5 screw **(2)** from the middle of the retention cover.

6. Swing the solid-state drive retention cover **(3)** up and away from the solid-state drive. The solid-state drive tilts up.
7. Slide the solid-state drive **(4)** away from the slot at an angle.

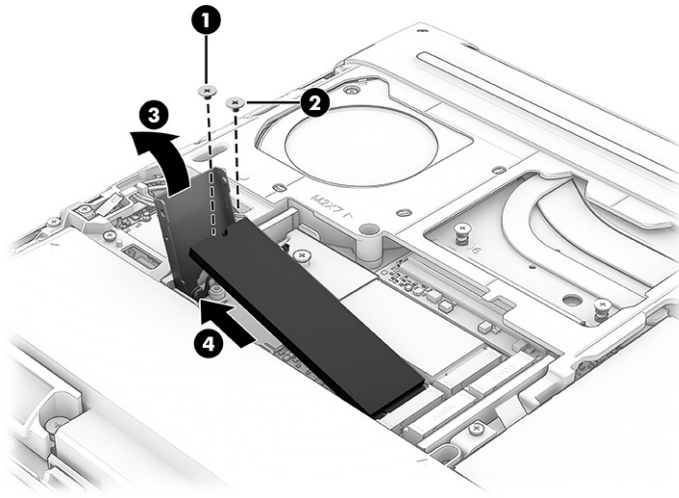


8. Thoroughly clean the thermal material from the surfaces of the solid-state drive and the system board each time the drives are removed. The following illustration shows the replacement thermal material locations.

Thermal pads are used on the solid-state drives installed in slots 1 and 3.

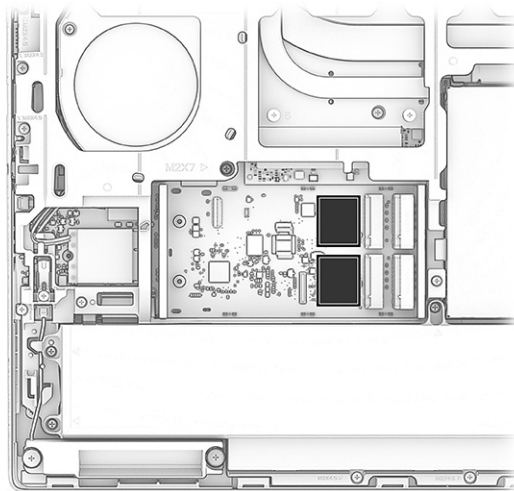

9. When installing solid-state drives, be sure to install the solid-state drives into the solid-state drive slots in sequential order, as shown in the following illustration.

The first solid-state drive is installed in solid-state drive slot **(1)**, the second solid-state drive is installed in solid-state drive slot **(2)**, the third solid-state drive is installed in solid-state drive slot **(3)**, and the fourth solid-state drive is installed in solid-state drive slot **(4)**.

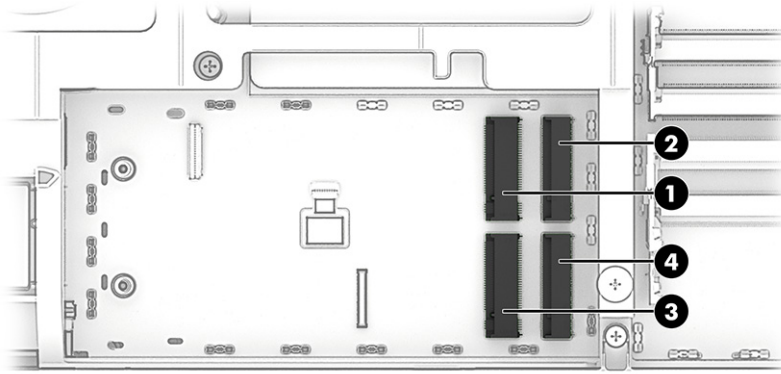

Touchpad cable

To remove the touchpad cable, use this procedure and illustration.


The touchpad cable is available in the Cable Kit, spare part number N19223-001.

Before removing the touchpad cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).
3. Remove the battery (see [Battery on page 42](#)).

Remove the touchpad cable:


1. Disconnect the touchpad cable (1) from the system board.
2. Disconnect the touchpad cable (2) from the touchpad.
3. Detach the touchpad cable (3) from the computer. The cable is attached with double-sided adhesive.

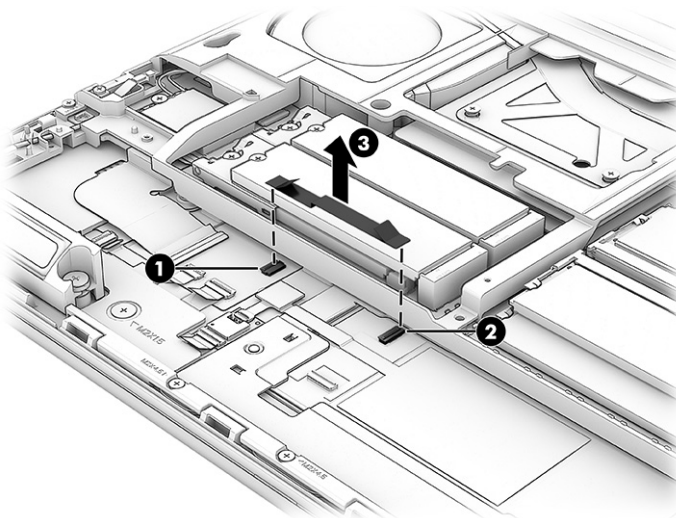

To replace the touchpad cable, reverse the removal procedures.

NFC module antenna

To remove the NFC module antenna, use this procedure and illustration.


 **NOTE:** The NFC module antenna is included with the touchpad spare part kit with spare part number N50690-001.

Before removing the NFC module antenna, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).
3. Remove the battery (see [Battery on page 42](#)).

Remove the NFC module antenna:

1. Disconnect the NFC module antenna (1) from the NFC module.
2. Detach the NFC module antenna (2) from the touchpad. The antenna is attached with double-sided adhesive.

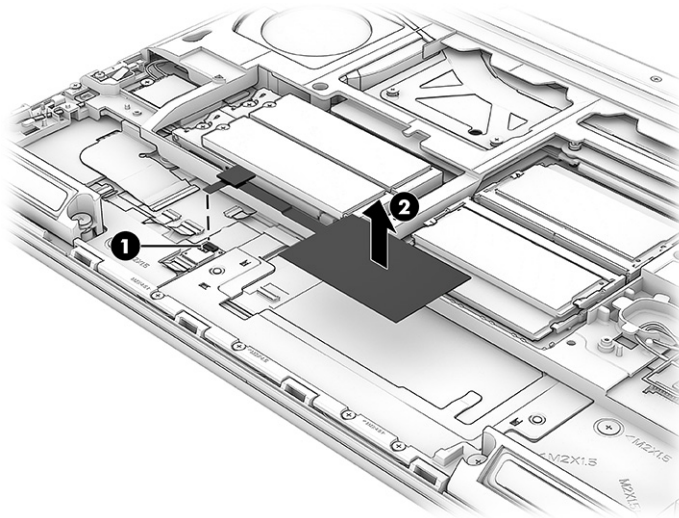

To replace the NFC module antenna, reverse the removal procedures.

NFC module

To remove the NFC module, use this procedure and illustration.

Table 5-7 NFC module description and part number

Description	Spare part number
NFC module	N19236-001

NOTE: The NFC module antenna is included with the touchpad spare part kit with spare part number N50690-001. The NFC module cable is included in the Cable Kit, spare part number N19223-001.


Before removing the NFC module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).

2. Remove the service cover (see [Service cover on page 41](#)).
3. Remove the battery (see [Battery on page 42](#)).

Remove the NFC module:


1. Disconnect the NFC module antenna **(1)** from the NFC module.
2. Disconnect the NFC module cable **(2)** from the NFC module.
3. Detach the NFC module **(3)** from the computer. The module is attached with double-sided adhesive.

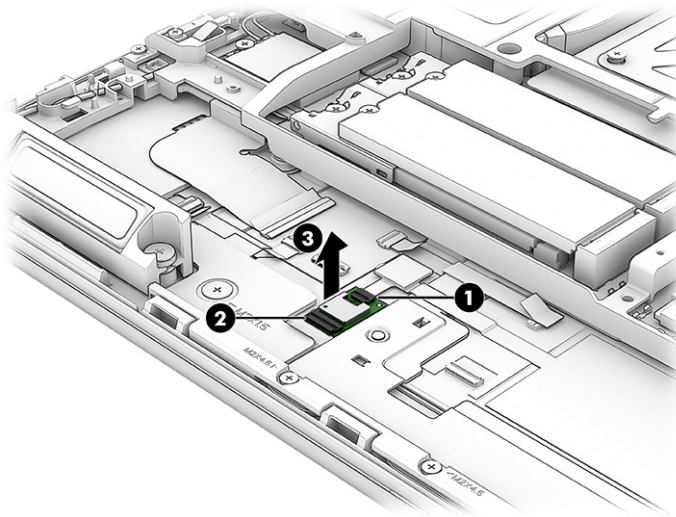

To install the NFC module, reverse the removal procedures.

WWAN antenna

To remove the WWAN antenna, use this procedure and illustration.

 **NOTE:** The WWAN antenna is included in the Cable Kit, spare part number N19223-001.

Before removing the WWAN antenna, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)).
3. Remove the battery (see [Battery on page 42](#)).


Remove the WWAN antenna:

1. Disconnect the WWAN antenna cable **(1)** from the terminal on the WWAN module.

Computers have up to four WWAN antenna cables. The cables have tags that identify them with a number that corresponds to a terminal on the WWAN module. Connect the antenna cable to the corresponding WWAN module terminal.

2. Release the WWAN antenna cable from the retention clips **(2)** and routing channel that secures it.

3. Detach the WWAN antenna transceiver **(3)** from the computer. The transceiver is attached with double-sided adhesive.

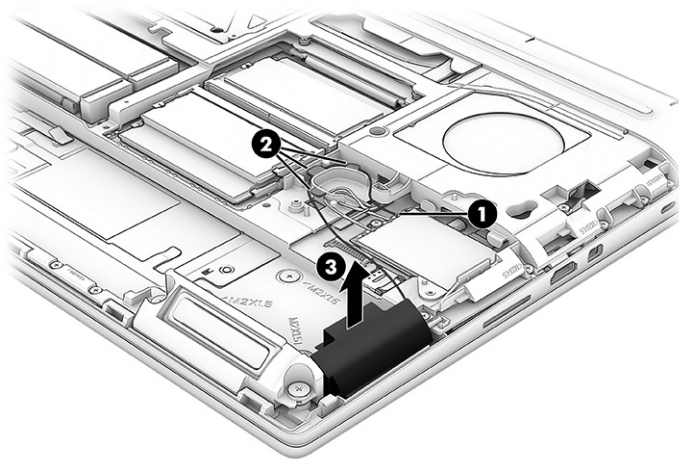

To install the WWAN antenna, reverse the removal procedures.

Speakers

To remove the speakers, use this procedure and illustration.

Table 5-8 Speaker description and part number

Description	Spare part number
Speaker Kit (includes left and right speakers, cables, and four rubber isolators)	N19218-001

Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))


Remove the speakers:

1. Disconnect the speaker cables **(1)** from the system board.
2. Release the left **(2)** and right **(3)** speaker cables from the retention clips built into the computer.
3. Remove the four Phillips M2.0 × 5.3 screws **(4)** that secure the speakers to the computer.

4. Remove the speakers (4) from the computer.



NOTE: When removing the speakers, make note of the location of the rubber isolator locations. The absence of or damage to these isolators can result in degraded speaker performance.

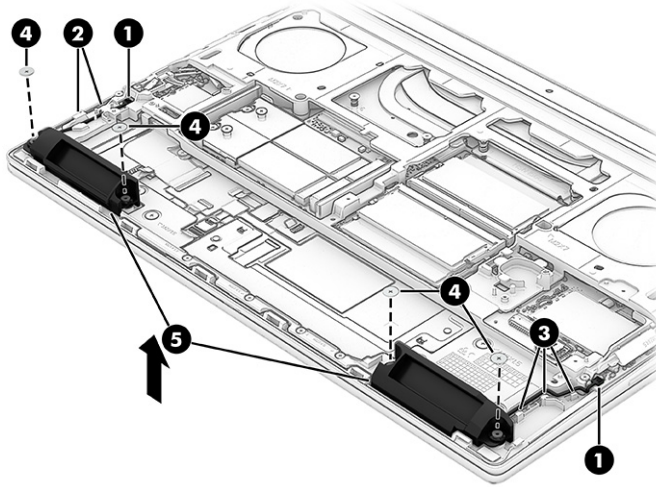

To replace the speakers, reverse the removal procedures.

Bottom case

To remove the bottom case, use this procedure and illustration.

Table 5-9 Bottom case description and part number

Description	Spare part number
Bottom case	M82071-001


Before removing the bottom case, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))


Remove the bottom case:

1. Remove the following screws that secure the bottom case to the computer:
 - Thirteen Phillips M2.0 × 5.3 screws (1)
 - Five Phillips M2.0 × 1.9 broad head screws (2)
 - Two Phillips M2.0 × 7.6 screws (3)

- Loosen the three Torx5 screws **(4)** that secure the bottom case to the computer.

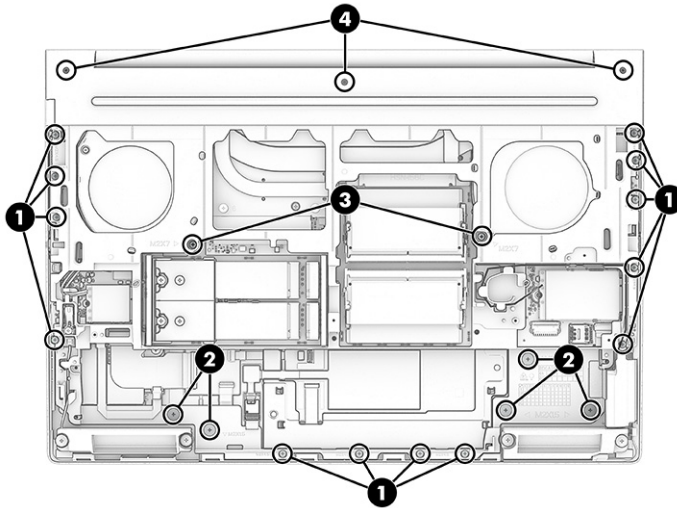


- Disconnect the antenna cables **(1)** from the WLAN module.
- Release the WLAN antenna cables from the retention clip **(2)** built into the bottom case.
- Disconnect the antenna cables **(3)** from the WWAN module.
- Release the WWAN antenna cables from the retention clips **(4)** built into the bottom case.
- Disconnect the speaker cable **(5)** from the system board.
- Remove the speaker cable from the clips **(6)** built into the bottom of the case.
- Remove the bottom case **(7)**.

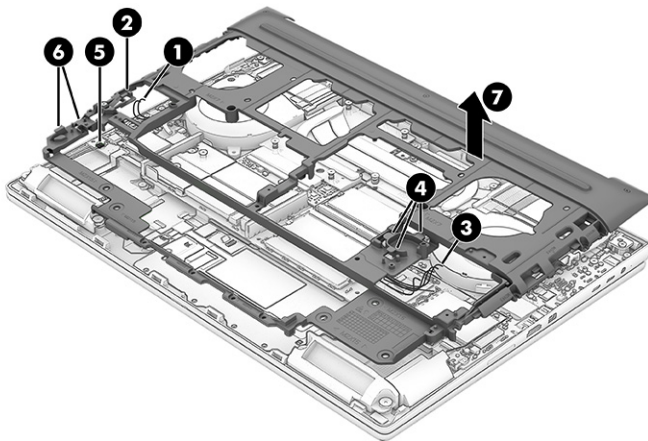

- Thoroughly clean the thermal material from the surfaces of the bottom case and the system board each time the bottom case is removed. The following illustration shows the bottom case replacement thermal material locations.


A thermal pad is used on the bottom case area **(1)** that services the system board component **(2)**.

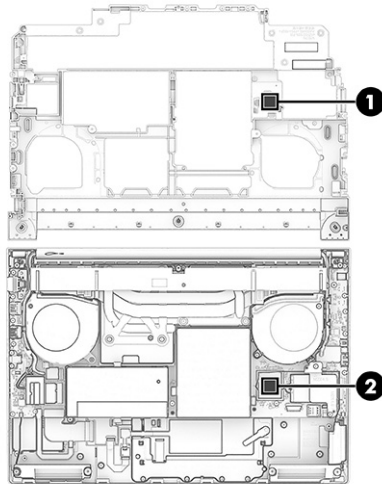

To replace the bottom case, reverse the removal procedures.

Card reader cable

To remove the card reader cable, use this procedure and illustration.

 **NOTE:** The card reader cable is included in the Cable Kit, spare part number N19223-001.


Before removing the card reader cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))

Remove the card reader cable:

1. Disconnect the card reader cable **(1)** from the system board.
2. Disconnect the card reader cable **(2)** from the card reader board.

3. Detach the card reader cable (3) from the computer. The cable is attached with double-sided adhesive.

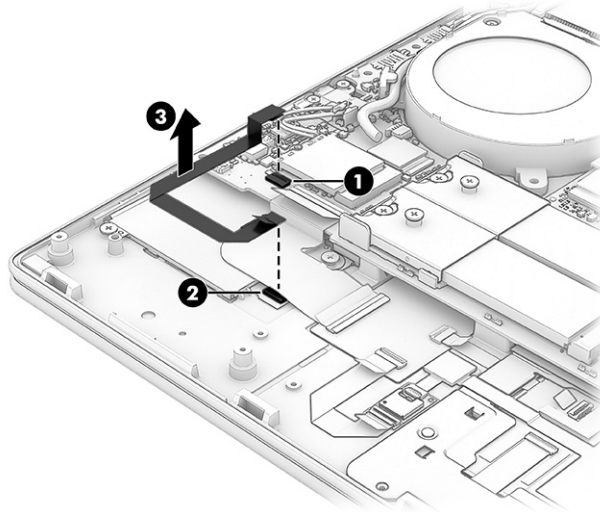

To replace the card reader cable, reverse the removal procedures.

Keyboard hub cable

To remove the keyboard hub cable, use this procedure and illustration.

Table 5-10 Keyboard hub cable description and part number

Description	Spare part number
Keyboard hub cable	N19223-001

NOTE: The keyboard hub cable is included in the Cable Kit.


Before removing the keyboard hub cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))

Remove the keyboard hub cable:

1. Disconnect the keyboard hub cable (1) from the keyboard hub board.
2. Disconnect the keyboard hub cable (2) from the system board.

3. Detach the keyboard hub cable (3) from the computer. The cable is attached to the computer with double-sided adhesive.

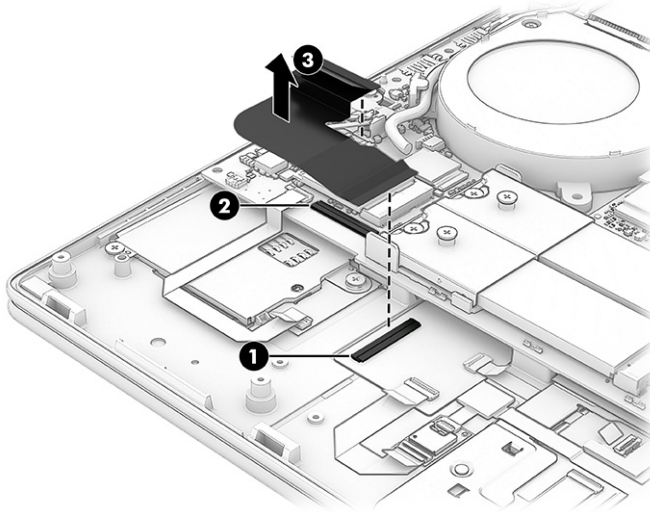

To replace the keyboard hub cable, reverse the removal procedures.

Fan

To remove the fans, use this procedure and illustration.

Table 5-11 Fan description and part number

Description	Spare part number
Fans	N19217-001


Before removing the fans, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))

Remove the fans:

1. Release the cables from the retention clips (1) that are built into the fans.
2. Disconnect the fan cables (2) from the system board.
3. Loosen the captive Phillips screw (3) that secures each fan to the computer.

4. Remove the fans (4) from the computer.

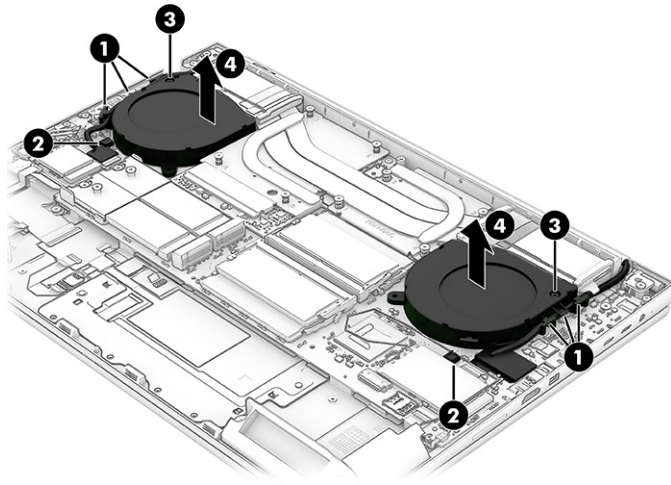

To replace the fans, reverse the removal procedures.

Graphics card

To remove the graphics card, use this procedure and illustration.

Table 5-12 Graphics card descriptions and part numbers


Description	Spare part number
NVIDIA GeForce RTX 4090	N54297-001
NVIDIA RTX A1000	N54298-001
NVIDIA RTX 5000 Ada	N54302-001
NVIDIA RTX 4000 Ada	N54301-001
NVIDIA RTX 3500 Ada	N54300-001
NVIDIA RTX 2000 Ada	N54299-001
Beam connector	N19429-001

Before removing the graphics card, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))

Remove the graphics card:

1. Remove the three Phillips M2.0 × 7.6 screws (1) that secure the graphics card to the system board.
2. Remove the four Phillips M2.0 × 5.3 screws (2) that secure the graphics card to the system board.
3. Remove the graphics card (3) from the system board.
4. Remove beam connector (4) that sits between card and system board.

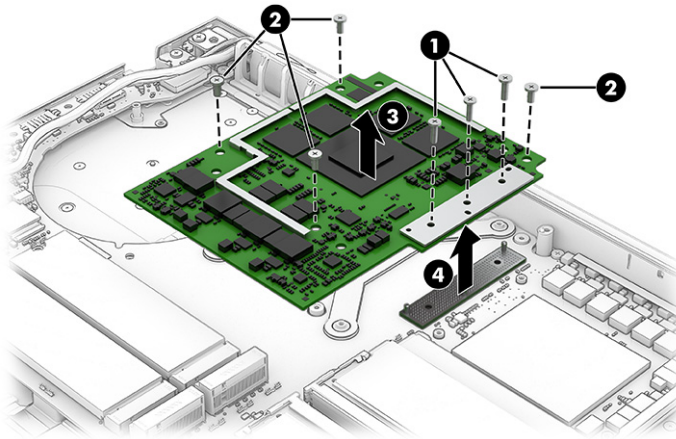

To replace the graphics card, reverse the removal procedures.

System board

To remove the system board, use these procedures and illustrations.

Table 5-13 System board descriptions and part numbers

Description	Spare part number
NOTE: All system board spare part kits include the processor and replacement thermal material. Replacement thermal pads are also available in the Thermal Pad Kit, spare part number N19245-001.	
All system boards use the following part numbers:	
xxxxxx-001: Non-Windows operating system	
xxxxxx-601: Windows operating system	
Intel Core i9-13950HX, models with WLAN, without WWAN	N50676-xxx
Intel Core i9-13950HX, models without WLAN, Bluetooth, or WWAN	N50675-xxx
Intel Core i9-13950HX, models with WLAN and WWAN	N50674-xxx
Intel Core i9-13900HX, models with WLAN, without WWAN	N50673-xxx
Intel Core i9-13900HX, models without WLAN, Bluetooth, or WWAN	N50672-xxx
Intel Core i9-13900HX, models with WLAN and WWAN	N50671-xxx
Intel Core i7-13850HX, models with WLAN, without WWAN	N50670-xxx
Intel Core i7-13850HX, models without WLAN, Bluetooth, or WWAN	N50669-xxx

Table 5-13 System board descriptions and part numbers (continued)

Description	Spare part number
Intel Core i7-13850HX, models with WLAN and WWAN	N50668-xxx
Intel Core i7-13700HX, models with WLAN, without WWAN	N50667-xxx
Intel Core i7-13700HX, models without WLAN, Bluetooth, or WWAN	N50666-xxx
Intel Core i7-13700HX, models with WLAN and WWAN	N50665-xxx
Intel Core i5-13600HX, models with WLAN, without WWAN	N50664-xxx
Intel Core i5-13600HX, models without WLAN, Bluetooth, or WWAN	N50663-xxx
Intel Core i5-13600HX, models with WLAN and WWAN	N50662-xxx

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))


When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- WLAN module (see [WLAN module on page 43](#)).
- WWAN module (see [WWAN module on page 45](#)).
- Memory modules (see [Memory modules on page 47](#)).
- Solid-state drives (see [Solid-state drive on page 51](#)).
- Heat sink (see [Heat sink on page 67](#)).
- Graphics card (see [Graphics card on page 63](#)).


Remove the system board:

1. Disconnect the following cables from the system board:
 - Audio jack **(1)**
 - Speaker cables **(2)**
 - SD card reader cable (ZIF) **(3)**
 - Keyboard hub cable (ZIF) **(4)**

- Card reader cable (ZIF) (5)

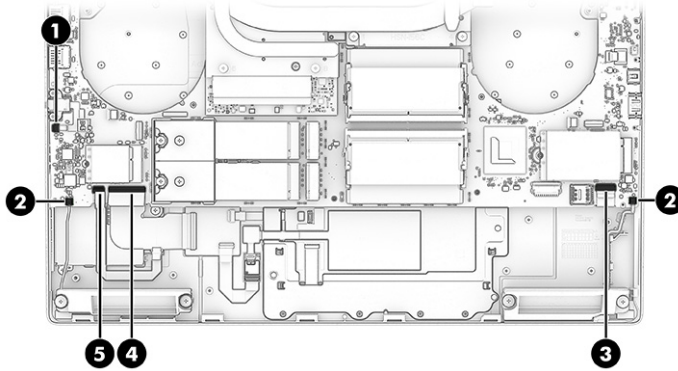


2. Remove the seven Phillips M2.0 × 5.3 screws (1) that secure the system board to the computer.
3. Remove the Phillips M2.0 × 2.3 broad head screw (2) that secures the system board to the computer.

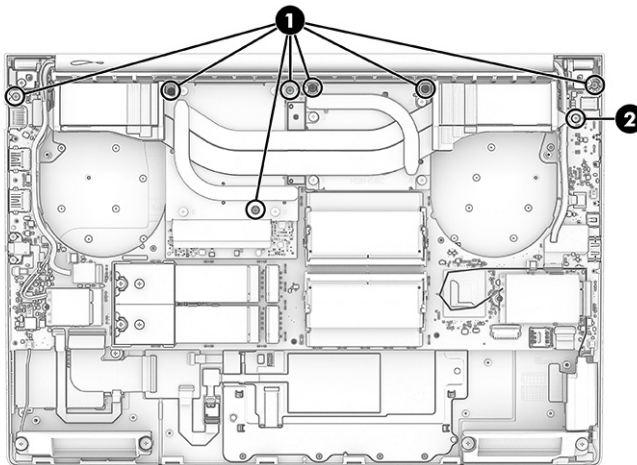

4. Lift the left edge of the system board (1) until it rests at an angle.

5. Remove the system board (2) by sliding it up and to the left at an angle.

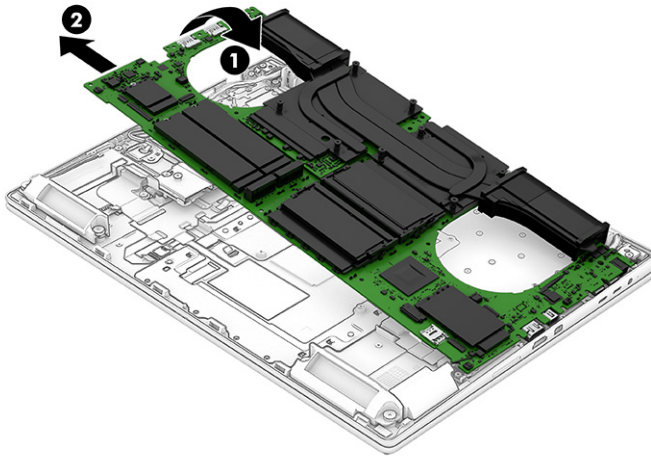

To install the system board, reverse the removal procedures.

Heat sink

To remove the heat sink, use these procedures and illustrations.

Table 5-14 eHat sink descriptions and part numbers


Description	Spare part number
NOTE: All heat sink spare part kits include captive screws and replacement thermal material. Replacement thermal pads are also available in the Thermal Pad Kit, spare part number N19245-001.	
For use on models with an NVIDIA high-range graphics card	N19230-001
For use on models with an NVIDIA mid-range graphics card	N50687-001
For use on models with a graphic subsystem with UMA memory	N19228-001

Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))

Remove the heat sink:

1. In the order indicated on the heat sink, loosen the eight captive Phillips screws (1) that secure the the heat sink to the system board.


 **NOTE:** Computer models equipped with a graphics subsystem with UMA memory have only four captive screws securing the heat sink to the computer.

2. Remove the heat sink (2).

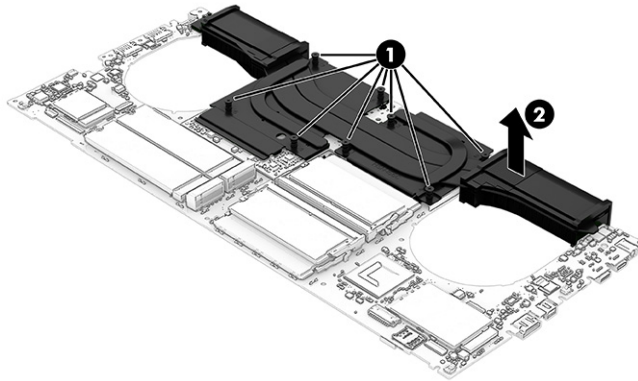

3. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

Thermal pads (1) and thermal paste (2) is used on the bottom of the heat sink.

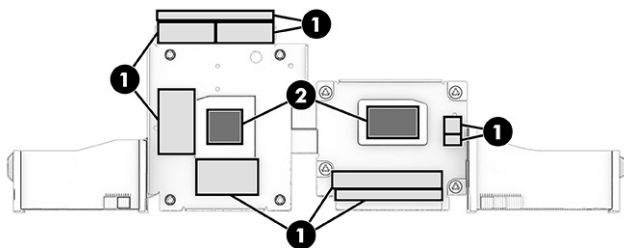

To replace the heat sink, reverse the removal procedures.

Audio jack

To remove the audio jack, use this procedure and illustration.

Table 5-15 Audio jack description and part number

Description	Spare part number
Audio jack (includes audio jack, board, and cable)	N22026-001


Before removing the audio jack, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).

2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))

Remove the audio jack:

1. Remove the two Phillips M2.0 × 5.3 screws (1) that secure the audio jack to the computer.
2. Remove the audio jack (2) from the computer.

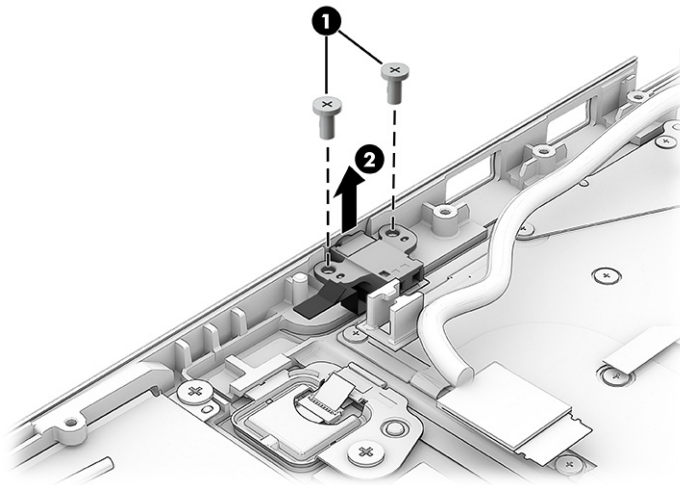

To replace the audio jack, reverse the removal procedures.

Fingerprint reader

To remove the fingerprint reader, use this procedure and illustration.

Table 5-16 Fingerprint reader description and part number

Description	Spare part number
Fingerprint reader	N19235-001

NOTE: The fingerprint reader cable is included in the Cable Kit, spare part number N19223-001.


Before removing the fingerprint reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).

2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))

Remove the fingerprint reader :

1. Disconnect the fingerprint reader cable (1) from the system board.
 2. Remove the Phillips M2.0 × 2.3 broadhead screw (2) that secures the fingerprint reader and bracket to the computer.
 3. Detach the fingerprint reader cable (3) from the computer. The cable is attached with double-sided adhesive.
 4. Remove the fingerprint reader bracket (4).
- The fingerprint reader bracket is included with the fingerprint reader spare part kit.
5. Remove the fingerprint reader (5) and cable.

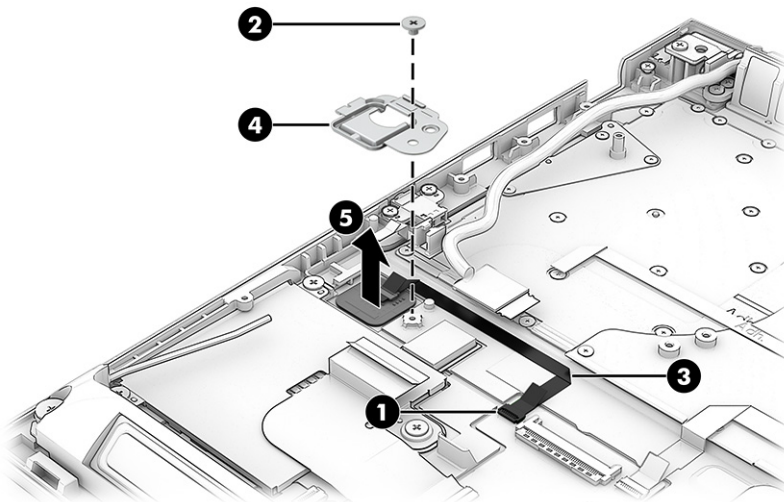

To replace the fingerprint reader, bracket, and cable, reverse the removal procedures.

Fingerprint reader cable

To remove the fingerprint reader cable, use this procedure and illustration.


The fingerprint reader cable is available in the Cable Kit, spare part number N19223-001.

Before removing the fingerprint reader cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))
 - g. Fingerprint reader (see [Fingerprint reader on page 69](#))

Remove the fingerprint reader cable:

- Release the ZIF connector (1), and then disconnect the fingerprint reader cable from the fingerprint reader (2).

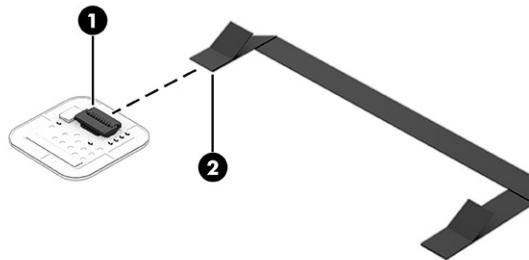

To install the fingerprint reader cable, reverse the removal procedures.

Card reader

To remove the card reader, use this procedure and illustration.

Table 5-17 Card reader description and part number


Description	Spare part number
Card reader	N54296-001

Before removing the card reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))
 - g. Card reader cable (see [Card reader cable on page 60](#))

Remove the card reader:

1. Remove the three Phillips M2.0 × 2.3 broadhead screws **(1)** that secure the card reader to the computer.
2. Remove the card reader **(2)** from the computer.

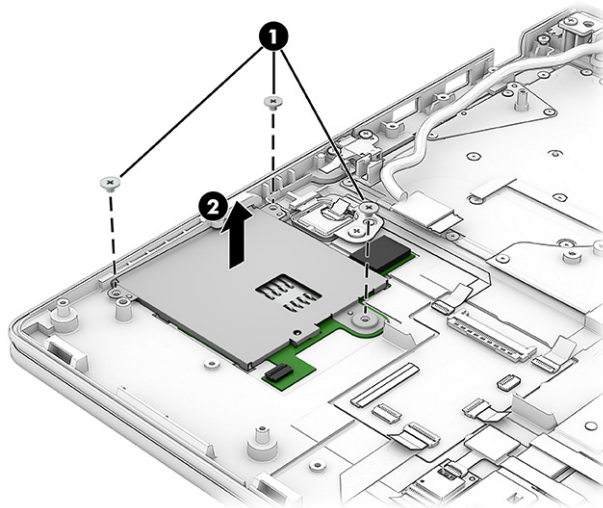

To replace the card reader, reverse the removal procedures.

NFC module cable

To remove the NFC module cable, use this procedure and illustration.

The NFC module cable is available in the Cable Kit, spare part number N19223-001.


Before removing the NFC module cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))

- b. WWAN module thermal module (see [WWAN module on page 45](#))
- c. Memory module cover (see [Memory modules on page 47](#))
- d. Bottom case (see [Bottom case on page 58](#))

Remove the NFC module cable:

1. Disconnect the NFC module cable **(1)** from the keyboard hub.
2. Disconnect the NFC module cable **(2)** from the NFC module.
3. Detach the NFC module cable **(3)** from the computer. The cable is attached with double-sided adhesive.

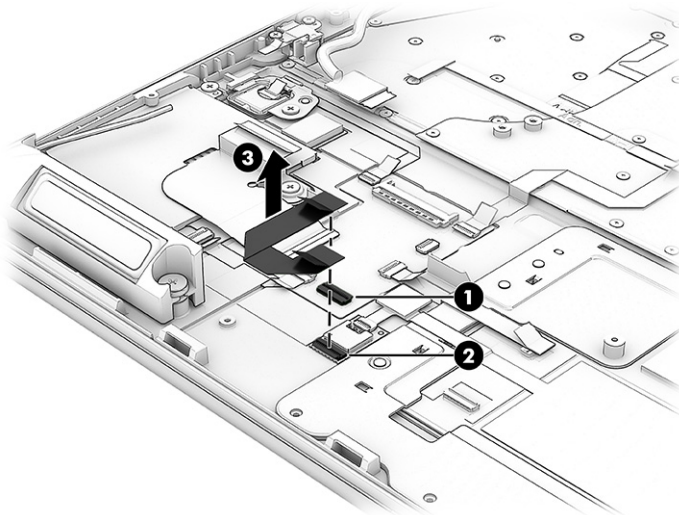

To install the NFC module cable, reverse the removal procedures.

Keyboard hub

To remove the keyboard hub, use this procedure and illustration.


The keyboard hub is available in the Cable Kit, spare part number N19223-001.

Before removing the keyboard hub, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))

Remove the keyboard hub:

1. Disconnect the following cables from the keyboard hub:
 - Fingerprint reader cable (ZIF) (1)
 - Keyboard cable (ZIF) (2)
 - RGB cable (ZIF) (3)
 - Backlight cable (ZIF) (4)
 - Touchpad cable (ZIF) (5)
 - NFC module cable (ZIF) (6)
 - Keyboard hub cable (ZIF) (7)
2. Detach the keyboard hub (8) from the computer. The keyboard hub is attached with double-sided adhesive.

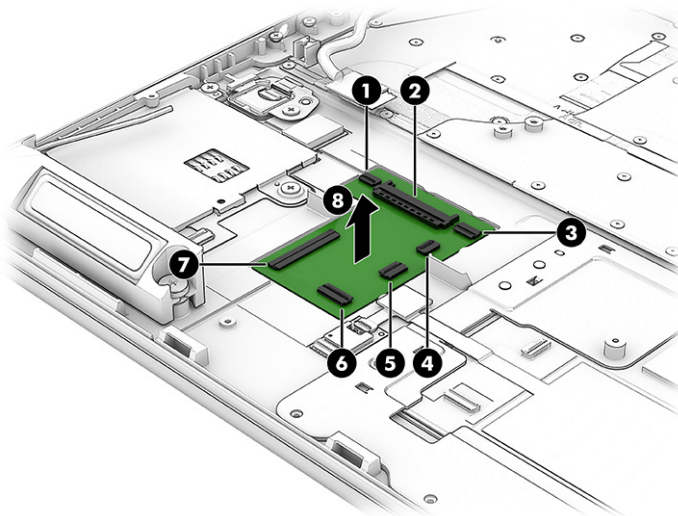

To install the keyboard hub, reverse the removal procedures.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 5-18 Touchpad descriptions and part numbers


Description	Spare part number
Touchpad	
NOTE: The touchpad spare part kit does not include the touchpad cable. The touchpad cable is available in the Cable Kit, spare part number N19223-001.	
With NFC module antenna	N50690-001
Without NFC module antenna	N50689-001

Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))
 - g. Touchpad cable (see [Touchpad cable on page 54](#))

Remove the touchpad:

1. Disconnect the cable **(1)** from the NFC module.
2. Detach the NFC antenna cable **(2)** from the computer. The cable is attached with double-sided adhesive.
3. Disconnect the cable **(3)** from the touchpad module.
4. Remove the eight Phillips M1.6 × 1.8 screws **(4)** that secure the touchpad to the computer.
5. Remove the touchpad **(5)**.

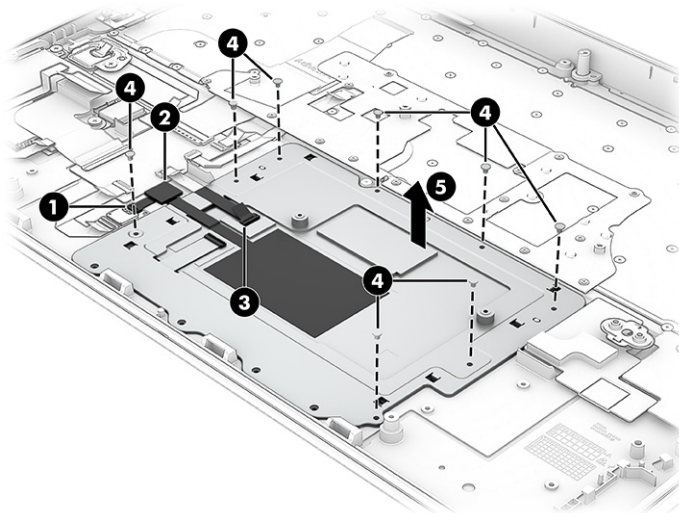

To replace the touchpad, reverse the removal procedures.

SD card reader

To remove the SD card reader, use this procedure and illustration.

Table 5-19 SD card reader description and part number

Description	Spare part number
SD card reader	N19241-001


NOTE: The SD card reader spare part kit does not include the SD card reader cable. The SD card reader cable is available in the Cable Kit, spare part number N19223-001.

Before removing the SD card reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))

Remove the SD card reader:

1. Remove the three Phillips M1.5 × 2.7 screws (1) that secure the SD card reader to the computer.
2. Remove the SD card reader (2).

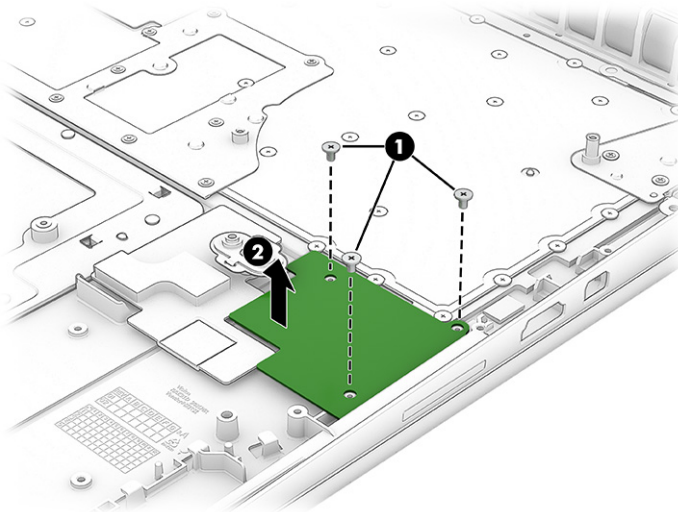

To replace the SD card reader, reverse the removal procedures.

SD card reader cable

To remove the SD card reader cable, use this procedure and illustration.


The SD card reader cable is available in the Cable Kit, spare part number N19223-001.

Before removing the SD card reader cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))
 - e. Fans (see [Fan on page 62](#))
 - f. System board (see [System board on page 64](#))
 - g. SD card reader (see [SD card reader on page 75](#))

Remove the SD card reader cable:

- Release the ZIF connector (1), and then disconnect the SD card reader cable from the SD card reader (2).

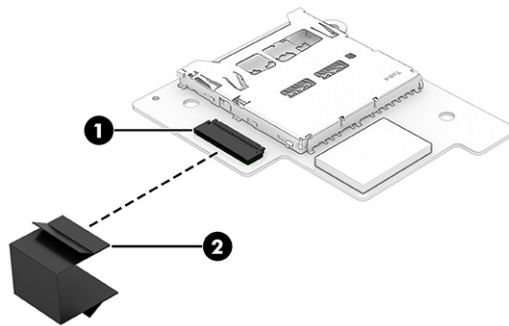

To replace the SD card reader cable, reverse the removal procedures.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.

The display assembly is available as both a full hinge-up assembly and at the subcomponent level. Full hinge-up assembly spare part information is presented in the following table. Subcomponent level spare part information is available in the following procedures.

Table 5-20 Display assembly descriptions and part numbers

Description	Spare part number
40.6 cm (16.0 in) display assembly:	
HP DreamColor, WQUXGA, antiglare, 500 nits, models without a camera	N50677-001
HP DreamColor, WQUXGA, antiglare, 500 nits, models with a camera	N50678-001
WQUXGA, OLED, BrightView, low blue light, 400 nits, touch screen	N50680-001

Table 5-20 Display assembly descriptions and part numbers (continued)

Description	Spare part number
WQUXGA, OLED, BrightView, 400 nits, models with a camera and WWAN, touch screen	N54294-001
WUXGA, LCD, antiglare, 400 nits, models with a camera and WWAN, touch screen	N54293-001
WUXGA, LCD, antiglare, 400 nits, models out a camera and WWAN, touch screen	N54295-001
WUXGA, WLED + low blue light, antiglare, 400 nits, touch screen	N50679-001

Before removing the display assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 41](#)).
2. Remove the service cover (see [Service cover on page 41](#)), and then remove the following components:
 - a. Battery (see [Battery on page 42](#))
 - b. WWAN module thermal module (see [WWAN module on page 45](#))
 - c. Memory module cover (see [Memory modules on page 47](#))
 - d. Bottom case (see [Bottom case on page 58](#))

Remove the display assembly:

1. Remove the WWAN module plate **(1)**.


The WWAN module plate is included in the Plastics Kit, spare part number N19226-001.
2. Disconnect the wireless antenna cables **(2)** from the WWAN module.



NOTE: Computer models have one to four WWAN antenna cables. The antenna cables have tags that identify them with a number that corresponds to a terminal on the WWAN module. Connect the antenna cable to the corresponding WWAN module terminal.

3. Disconnect the camera module cable **(3)** from the system board.


4. Release the camera module cable and the wireless antenna cables from the retention clips **(4)** built into the fan.

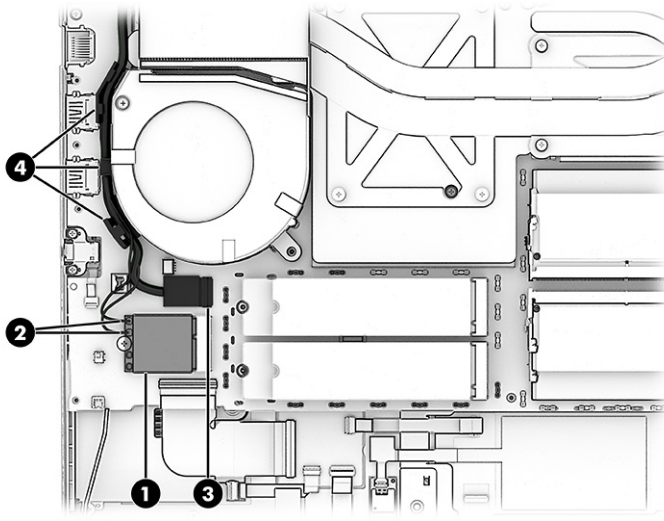

5. Remove the WLAN module plate **(1)**.


The WLAN module plate is included in the Plastics Kit, spare part number N19226-001.

6. Disconnect the wireless antenna cables **(2)** from the WLAN module.


 **NOTE:** Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.

7. Disconnect the display panel cable **(3)** from the system board.


8. Release the display panel cable and the wireless antenna cables from the retention clips **(4)** built into the fan.

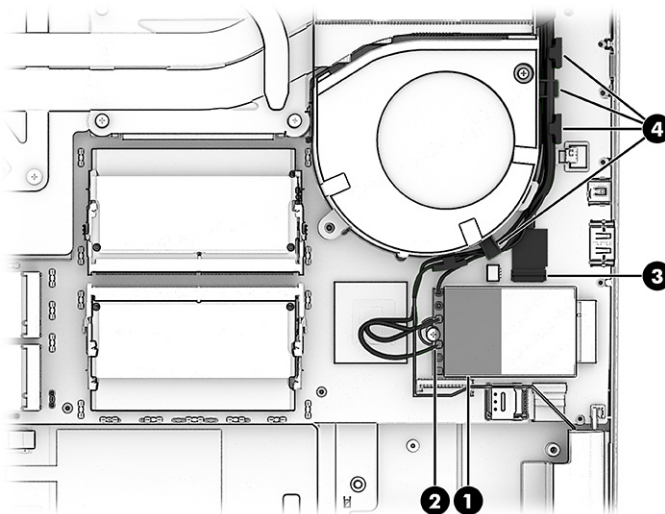


9. Remove the six Phillips M2.5 × 4.6 screws that secure the display assembly to the computer.

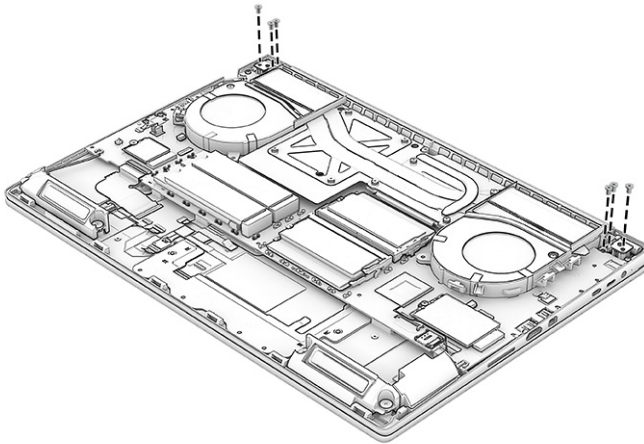

10. Swing the front edge of the computer (1) up and away from the display assembly until it rests at a 90-degree angle.
11. Separate the display assembly from the computer (2).

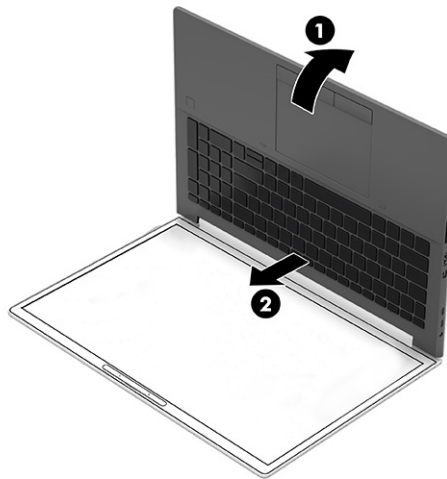


12. To replace the hinge cover or the display assembly subcomponents:
 - Remove the hinge cover from the bottom edge of the display assembly.
The hinge cover is available using spare part number N19234-001.

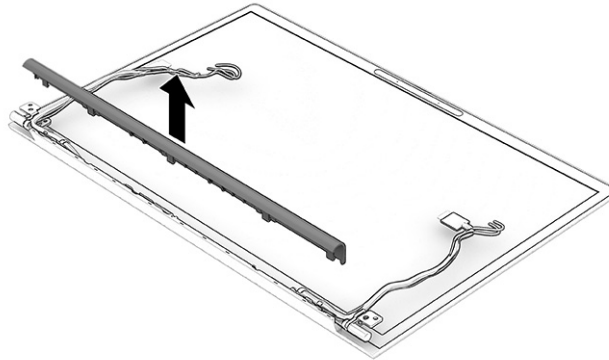


13. To replace the display bezel:

- a. Flex the outside edge of the top of the bezel **(1)** away from the display assembly to release it from the display assembly.
- b. Flex the outside edges of the left and right sides **(2)** of the bezel to release them from the display assembly.
- c. Flex the outside edge of the bottom of the bezel **(3)** away from the display assembly to release it from the display assembly.
- d. Remove the display bezel **(4)**.

 **IMPORTANT:** To avoid damaging the panel, **do not use a tool** to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

The display bezel is available using the following spare part numbers:


- N19209-001: For use on models with a 40.6 cm (16.0 in) display assembly and a camera
- N19210-001: For use on models with a 40.6 cm (16.0 in) display assembly without a v
- N19207-001: For use on models with a 39.6 cm (15.6 in) display assembly and a camera
- N19208-001: For use on models with a 39.6 cm (15.6 in) display assembly without a camera

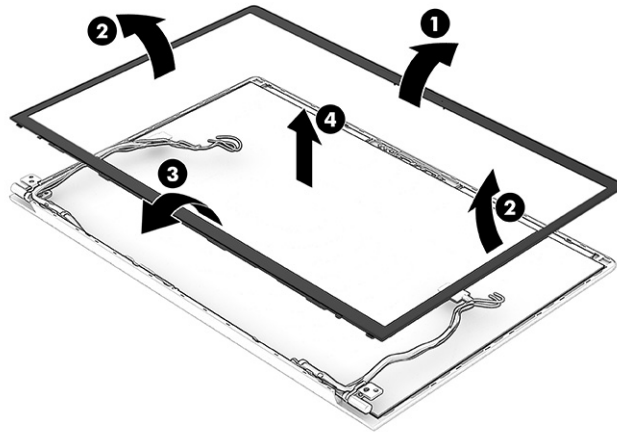

14. To replace the display hinges:

- a. Remove the six Phillips M2.5 × 6.7 screws (1) that secure the hinges to the display back cover.
- b. Remove the hinges (2).


The display hinges are available using spare part number N19233-001.

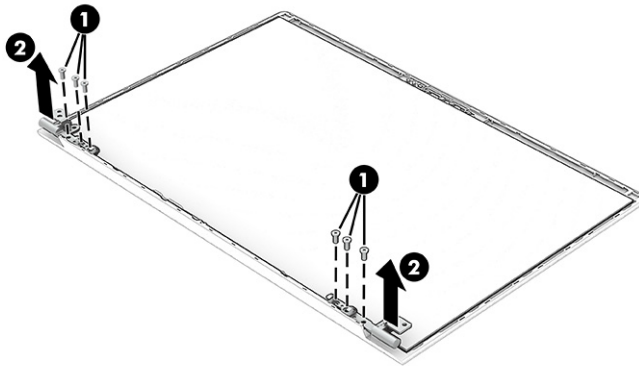

15. To replace the display panel:

- a. Release the display panel cable from the retention clips (1) that are built into the left hinge area.
- b. The display panel is secured to the display back cover with double-sided tape that is installed under the lower-left and lower-right corners (2) of the panel. To remove the panel, use tweezers to grasp the end of the tape.

- c. While turning the tweezers, wrap the tape around the tweezers **(3)** as you continue to pull the tape out from behind the display panel **(4)**. You must pull the tape multiple times before it is completely removed.

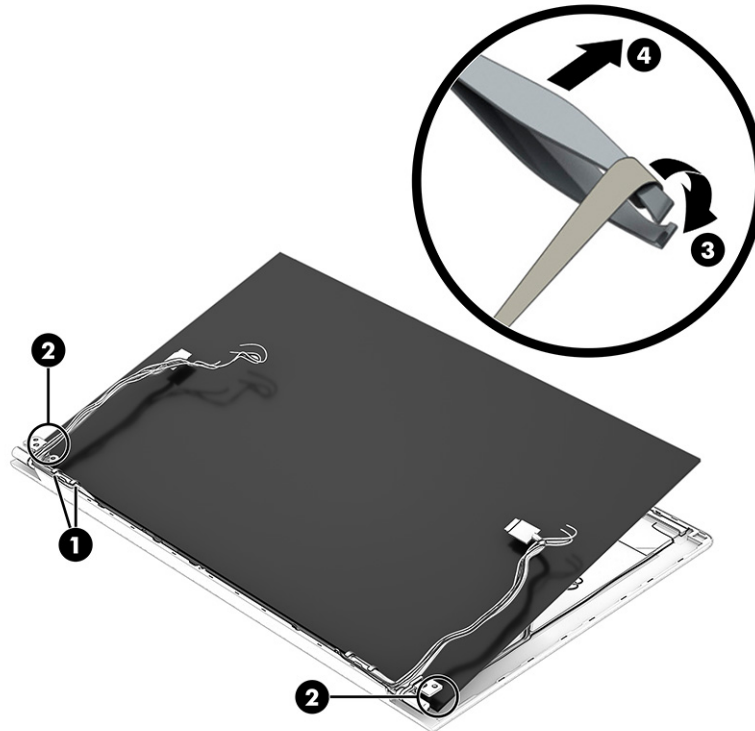


- d. Remove the display panel from the display back cover.
- e. Place the display panel on the work surface with the panel side facing down.
- f. Detach the adhesive support strip **(1)** that secures the display panel cable to the display panel connector.
- g. Release the support bar **(2)** that secures the display panel cable to the display panel connector.
- h. Disconnect the display panel cable **(3)** from the display panel.

The display panel is available using the following spare part numbers:


- N19251-001: **40.6 cm** (16.0 in), antiglare, privacy, 1000 nits
- N19252-001: **40.6 cm** (16.0 in), BrightView, 400 nits
- N19249-001: **39.6 cm** (15.6 in), FHD, 250 nits

The display panel cable is included in the Display Cable Kit, spare part number N19224-001.

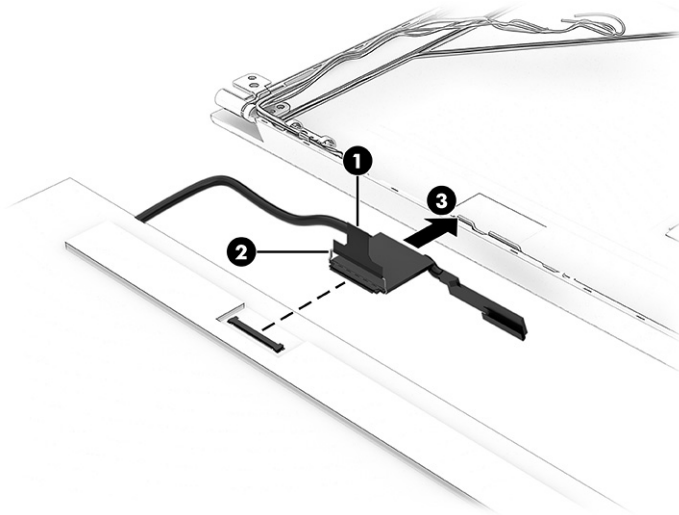


- 16.** To replace the ambient light sensor (ALS) module cable:
- a.** Disconnect the ALS module cable **(1)** from the ALS module.
 - b.** Disconnect the ALS module cable **(2)** from the display hub board.
 - c.** Detach the ALS module cable **(3)** from the display back cover. The cable is attached with double-sided adhesive.

The ALS module cable is included in the Display Cable Kit, spare part number N19224-001.

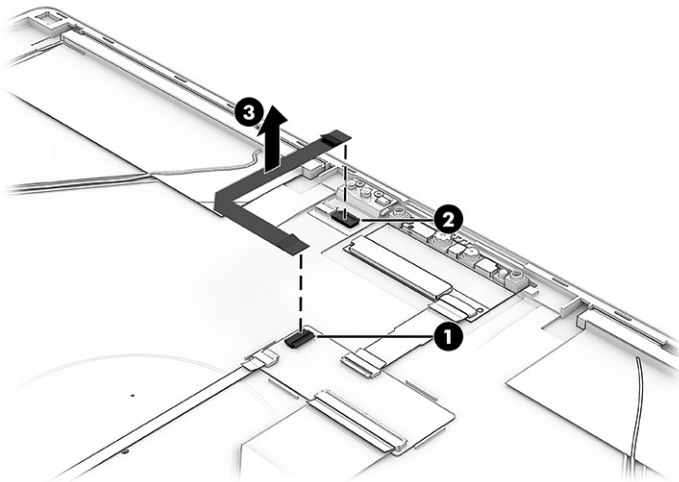

- 17.** To replace the ambient light sensor (ALS) module:
- a.** Remove the two Phillips M1.5 × 2.1 screws **(1)** that secure the ALS module to the display back cover.
 - b.** Remove the ALS module **(2)** from the display back cover.


The ALS module is available using spare part number N19237-001 for models with a camera module and N32747-001 for models without a microphone.

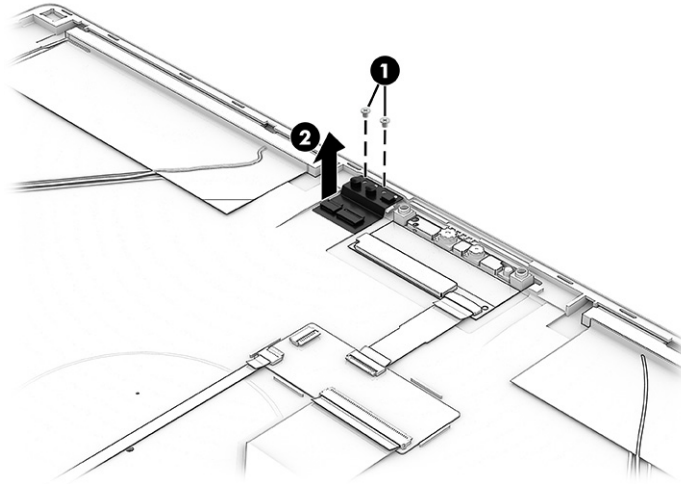

18. To replace the camera module cable:

- a. Disconnect the camera module cable (1) from the display hub board.
- b. Disconnect the camera module cable (2) from the camera module.
- c. Detach the camera module cable (3) from the display back cover. The cable is attached with double-sided adhesive.


The camera module cable is included in the Display Cable Kit, spare part number N19224-001.

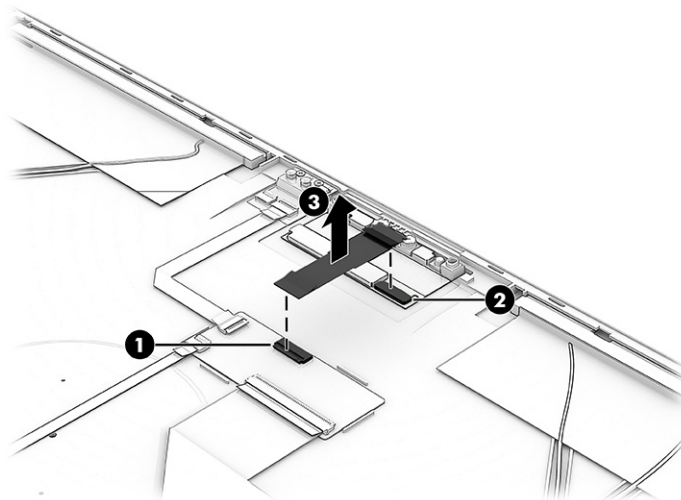

19. To replace the camera module:

- Detach the camera module from the display back cover. The camera module is attached to the display back cover with double-sided adhesive.


The camera module is available using spare part number N50684-001 and includes double-sided adhesive.

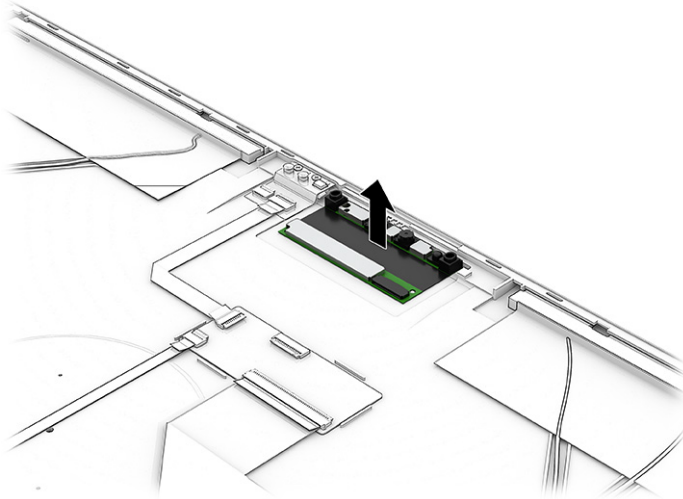

20. To replace the sensor module cable:

- a.** Disconnect the sensor module cable **(1)** from the display hub board.
- b.** Disconnect the sensor module cable **(2)** from the sensor module.
- c.** Detach the sensor module cable **(3)** from the display back cover. The cable is attached with double-sided adhesive.


The sensor module cable is included in the Display Cable Kit, spare part number N19224-001 and includes double-sided adhesive.

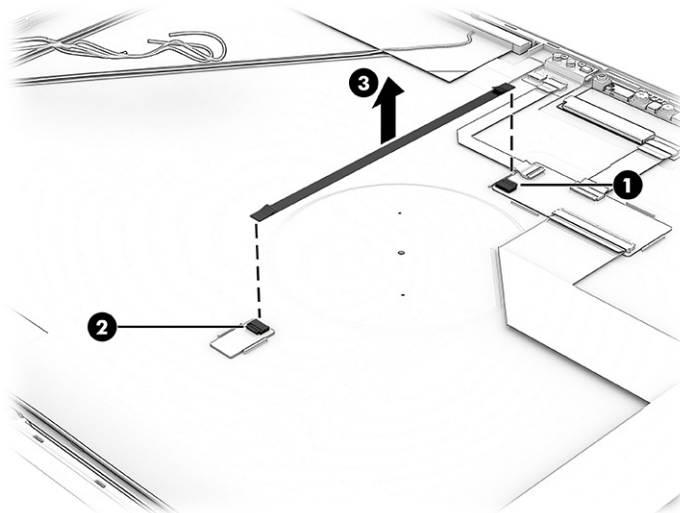

21. To replace the sensor module:

- Detach the sensor module from the display back cover. The sensor module is attached to the display back cover with double-sided adhesive.


The sensor module is available using spare part number N50682-001.

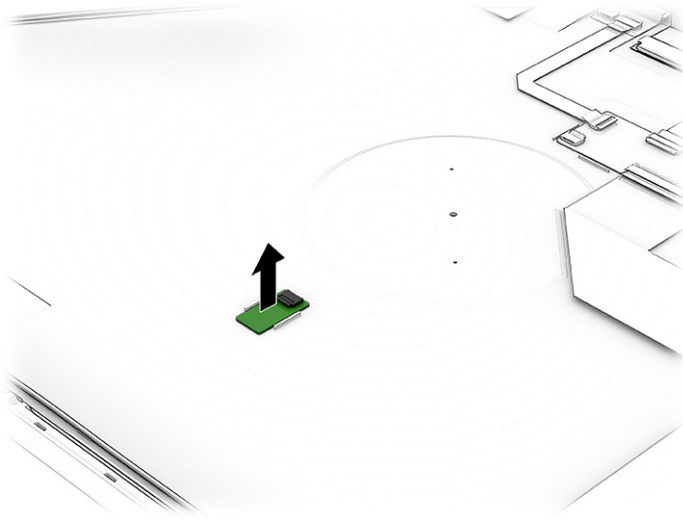

22. To replace the display hub board cable:

- a.** Disconnect the display hub board cable **(1)** from the display hub board.
- b.** Detach the display hub board cable **(2)** from the display back cover. The cable is attached with double-sided adhesive.

The display hub board cable is included in the Display Cable Kit, spare part number N19224-001 and includes double-sided adhesive.

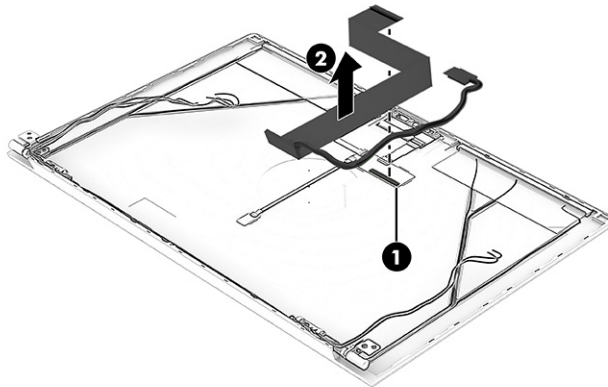


23. To replace the display hub board:

- a.** Disconnect the ambient light sensor module cable **(1)** from the display hub board.
- b.** Disconnect the camera module cable **(2)** from the display hub board.
- c.** Disconnect the sensor module cable **(3)** from the display hub board.


- d. Detach the display hub board (4) from the display back cover. The board is attached with double-sided adhesive.

The display hub board is available using spare part number N50683-001.

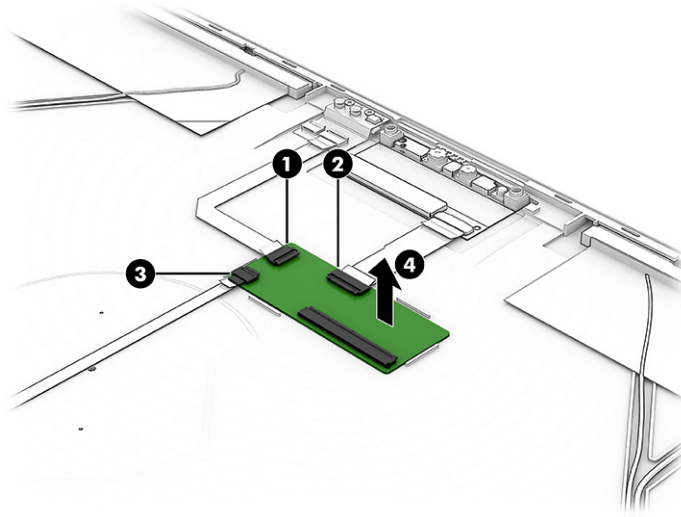

- 24. To replace the WLAN antenna cables and transceivers:

- a. Detach the WLAN antenna transceivers (1) from the display back cover. The transceivers are attached to the display back cover with double-sided adhesive.
- b. Release the WLAN antenna cables from the routing clips (2) and channels that are built into the right hinge area.

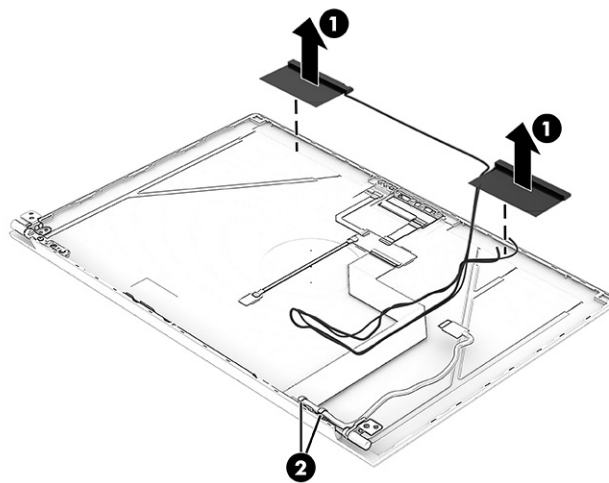


The WLAN antenna cables and transceivers are available using spare part number N19219-001.

- 25. To replace the WWAN antenna cables and transceivers:

- a. Detach the WWAN antenna transceivers (1) from the display back cover. The transceivers are attached with double-sided adhesive.

- b. Release the WWAN antenna cables from the routing clips (2) and channels that are built into the left and right hinge areas and bottom edge of the display back cover.

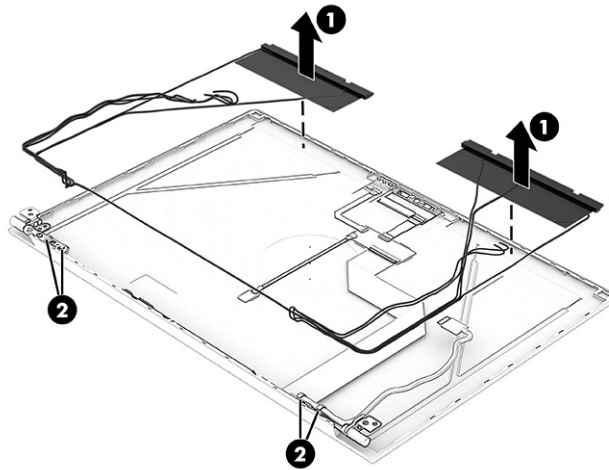

The WWAN antenna cables and transceivers are available using spare part number N19220-001.

To replace and reassemble the display assembly, reverse the removal procedures.

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers with keyboards. The second table provides the country codes.


 **NOTE:** N57446-041 and N57447-041 are specific to Germany. The other keyboards are not available in Germany.

Table 5-21 Top cover with keyboard descriptions and part numbers

Description	Spare part number
RGB per-key lighting	N19205-xxx
Backlit, privacy filter	N19206-xxx
Backlit	N19204-xxx
Backlit, privacy filter, for use in Germany	N57446-041
Backlit, for use in Germany	N57447-041

Table 5-22 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Israel	-BB1	Slovenia	-BA1
Brazil	-201	Italy	-061	South Korea	-AD1
Bulgaria	-261	Japan	-291	Spain	-071


Table 5-22 Spare part country codes (continued)

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
The Czech Republic and Slovakia	-FL1	Kazakhstan	-DF1	Sweden and Finland	-B71
Denmark	-081	Latin America	-161	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Taiwan	-AB1
France	-051	North Africa	-FP1	Thailand	-281
French Canada	-DB1	Norway	-091	Turkey	-141
Greece	-151	Portugal	-131	Turkey F	-541
Hungary	-211	Romania	-271	Ukraine	-BD1
Iceland	-DD1	Russia	-251	United Kingdom	-031
India	-D61	Saudi Arabia	-171	United States	-001


6 Troubleshooting guide

This chapter primarily focuses on troubleshooting HP Mobile Workstations. The information is provided so that you can solve problems yourself or at least narrow down the number of possible causes.


Based on some of the most common symptoms, this chapter identifies logical steps and available resources or tools for resolving an issue. HP recommends that you follow the instructions carefully, observe safety precautions, and note any observations or results. Capturing this information can help identify and resolve the problem more quickly.

 **WARNING!** To reduce the risk of electric shock or damage to the equipment:

- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) outlet that is easily accessible at all times.
- Disconnect power from the equipment by unplugging the power cord from the AC outlet.
- Before disassembling notebooks, always disconnect power and remove the battery.

 **IMPORTANT:** Static electricity can damage the electronic components of the computer. To prevent damage to the computer, carefully observe the electrostatic discharge precautions.

- Discharge static electricity by briefly touching a grounded metal object before you begin.
- Work on a static-free mat.
- Wear a static strap to ensure that any accumulated electrostatic charge is discharged from your body to the ground.
- Create a common ground for the equipment that you are working on by connecting the static-free mat, static strap, and peripheral units to that piece of equipment.
- For more information, see [Electrostatic discharge information on page 33](#).

 **IMPORTANT:** The computer includes customer self-repair parts and parts that should be accessed only by an authorized service provider. Accessing parts described in the chapter titled "Removal and replacement procedures for authorized service provider only parts" can damage the computer or void the computer warranty.

Resources

Use this table to locate troubleshooting resources.

Table 6-1 Troubleshooting resources and their descriptions

HP Resource Tool	Description	Link
HP Elite Support	Provides live HP Premium support (available 24/7) to Elite computers.	http://www8.hp.com/us/en/ads/elite-products/overview.html
HP Customer Support	Provides important support, such as warranty, support cases, drivers, Customer Advisories, Customer and Security Bulletins, and Product Change Notices.	https://support.hp.com/us-en/contact-hp

Table 6-1 Troubleshooting resources and their descriptions (continued)

HP Resource Tool	Description	Link
Subscribers Choice	Allows you to sign up for HP product updates.	http://www8.hp.com/us/en/subscribe/
HP Support Forums	Provide discussions about HP products and issues.	http://h30434.www3.hp.com/psg/
Service Access Workbench (SAW) (available for technicians and Business Partners only)	Provides navigable content intended for use by internal and outsourced call center staff and can be a resource for support and product division professionals.	http://sawpro.atlanta.hp.com/km/saw/home.do
Vendors' web sites	Provide additional information for associated components such as Intel (processor, WLAN), Microsoft® (Windows 7, 8, 10), AMD®/NVIDIA® (GPU), and so on.	http://www.intel.com/content/www/us/en/homepage.html http://www.amd.com http://www.nvidia.com

General troubleshooting steps

This section helps you become familiar with troubleshooting methodology and efficiently resolve problems.

Proceed through the steps in the following table until the issue is resolved, and then move on to the next step that is relevant to the issue. For example, if you resolve a memory issue using the HP PC Diagnostics (UEFI) tool in step 6, you can then move on to step 10 to reseat the memory into its memory slot.



NOTE: You can ignore troubleshooting steps that do not apply to your issue.

Table 6-2 Troubleshooting methodology and general troubleshooting steps

Identify issue	Analyze issue	Resolve issue	Verify solution
1. Understand the issue on page 93	5. Remove or uninstall recently added hardware, software on page 96	8. Hard reset on page 102	Verify solution on page 106
2. Examine the environment on page 95	6. HP Hardware Diagnostics and Tools on page 96	9. Soft reset (Default Settings) on page 103	
3. Perform a visual inspection of hardware on page 95	7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99	10. Reseat cables and connections on page 103	
4. Update BIOS and drivers on page 96		11. Test with minimum configuration on page 104	
		12. Test with verified working configuration (hardware or operating system) on page 105	
		13. Replace the system board on page 105	

Identify the issue

Use these guidelines to correctly determine the problem.

1. Understand the issue

It is important to understand the issue that occurred, including related symptoms. It helps to understand the basic computer boot-up sequence as well as the failure itself.

Boot-up sequence

The computer performs several steps after you press the power button or restart the computer.

It is important to understand where in the boot-up sequence the symptoms occur. The following table lists the phases of the boot-up sequence and explains the symptoms that may occur in each phase. For example, a blue screen error (BSOD) often occurs during the performance phase.

Table 6-3 Boot-up sequence and associated failures

Item	Procedure
Startup	<p>After you press the power button, the computer boots after all internal power rails (such as 5 V, 3.3 V) are stable.</p> <p>Confirm that power lights are on and fan is spinning.</p> <p>Common issues: all lights are off; troubleshooting lights are on; computer does not boot; video is absent.</p>
POST (UEFI/BIOS)	<p>Power-On Self-Test (POST) verifies that hardware components (such as processor, hard drive, memory) are functional. When POST is complete, the HP logo appears briefly and then disappears.</p> <p>If there are errors, the computer may exhibit blinking lights and POST error messages, and so on.</p> <p>Common issues: lights blink; error message appears; system hangs (lock up or freezes)</p>
Performance (operating system)	<p>System boots to operating system, and Windows logo screen appears.</p> <p>Common issues: hangs, blue screen, distorted video, driver conflict, slow performance, display issue (dead pixel), I/O issue (no speaker sound), wireless/audio unavailable, noise.</p> <p>See Analyze the issue on page 96 table for detailed troubleshooting information.</p>

Failure classification

Failure classification is a breakdown of different types of failures and symptoms that could occur during the boot-up sequence.

[Failure classification by boot-up sequence on page 94](#) and [Failure classification by hardware devices on page 94](#) represent the failure classification for common notebook failures.

[Failure classification by boot-up sequence on page 94](#) categorizes failures by the boot-up sequence.

1. Power-on: Common issues are no power, recycle, or reboot.
2. POST: Common issues are no boot (despite power), light flash, or diagnostics error.
3. Performance: Common issues are Intermittent Loss of Power, Blue Screen, Hang. In many cases, issues can be identified and associated with particular hardware (for example, display or storage).

[Failure classification by hardware devices on page 94](#) categorizes failures by hardware:

- Display
- I/O (input/output) devices
- Storage

- Mechanical

A single symptom can be listed under different groups. For example, No Video can belong to (1) power-on or (4) display; but flickering when turned on should be listed in (4) display. Or, in another example, a blue screen can be caused by a driver conflict in performance (4), but it can also be caused by a defective hard drive under (6) storage. Therefore, failures that share similar symptoms are noted.

If possible, make a record of the failure symptom, the phase of the boot-up sequence where the failure occurs, and the most likely location in the failure tree ([Failure classification by boot-up sequence on page 94](#) and [Failure classification by hardware devices on page 94](#)). This record helps isolate the issue and indicate the next steps. For example, when the computer is running the operating system, it can experience an issue with (4) display, (5) I/O devices (keyboard, wireless, and so on), (6) storage, or (7) mechanical components (stuck buttons, thermal shutdown, and so on).



NOTE: *Uncategorized* is used if an issue found is not listed. For example, Bluetooth is offered on certain hardware configurations; therefore, you can classify a Bluetooth issue under I/O Device if needed.

Failure classification by boot-up sequence

Use this table to locate failure classification information.

Table 6-4 Failure classification by boot-up sequence

1. Power-on	2. POST	3. Performance
1. No power on page 109	1. No video (with power) on page 116	1. Intermittent power-on, shutdown, reboot on page 111^a
2. Intermittent shutdown on page 119^a	2. Blinking lights on page 117	2. Blue screen on page 121^b
3. AC adapter issue on page 112	3. Diagnostic error messages on page 118	3. Freeze at Windows Logo (hang or lockup) on page 122
4. Battery not recognized, not charging on page 113	4. BIOS password on page 118	4. Electromagnetic Interference (EMI) on page 123
5. Battery discharges too fast on page 115		5. No wake up on page 124
6. Burnt smell on page 115		6. Unresponsive on page 125
		7. Slow performance on page 126^c
		8. HP Smart Adapter warning message on page 126
		9. Incorrect time and date on page 127

^{a,b,c} similar symptoms

Failure classification by hardware devices

To determine failure by device, use this table.

Table 6-5 Failure classification by hardware devices

4. Display	5. I/O devices	6. Storage	7. Mechanical
1. Display anomalies on page 128	1. Keyboard on page 134	1. Hard drive or solid-state drive not recognized on page 143	1. Noise (sound) on page 147
2. Dead pixel on page 130	2. Keyboard pointing stick (select products only) on page 135	2. No boot to operating system (no read-write error) on page 144	2. Fan runs constantly on page 148
3. No video (internal) on page 130^d	3. Keyboard backlight on page 136	3. Read-write error on page 145	3. Thermal shutdown (hot) on page 149
4. No video (external) on page 130^d	4. Touchpad on page 136	4. Slow performance on page 146^c	
5. DisplayPort/VGA on page 131	5. Network connectivity (RJ-45 jack) on page 137	5. Blue screen (BSOD) error on page 146^b	
6. HDMI on page 131	6. Network connectivity wireless (WLAN) on page 137	6. Noisy hard drive on page 146	
7. No or bad external video via docking on page 132	7. WWAN on page 138		
8. Incorrect or missing color/distorted image on page 132	8. USB on page 138		
9. Touch screen on page 133	9. Smart card reader on page 139		
	10. Speaker, headphone - audio issues on page 140		
	11. Thunderbolt (TB) on page 141		

^{b,c,d} similar symptoms

2. Examine the environment

It is important to examine the computer's environment. If you can quickly identify the cause of the issue, fewer resolution steps might be needed. Perform the following environment inspections:

- Check all cables and connections to be sure that no connections are loose.
- Confirm that power sources are good, such as AC outlet or adapter (110 V/220 V ac), power strip. Test with a verified working AC outlet.
- Check for compatibility issues between the computer and third-party devices, peripherals, uncertified devices, incompatible hardware (for instance, Mac OS device). Incompatibility can result in blue screen errors, improper operation, and so on.
- Isolate the computer from sources of electromagnetic interference (EMI), such as cell phones, two-way radios, floor mats, fans (and other electronic motors). EMI may contribute to a display freeze issue or lock-up.

3. Perform a visual inspection of hardware


Perform a physical inspection of the computer.

- Look for abnormalities such as a cracked display, dented battery, broken latches for battery bay, keyboard key caps popped out, dust over connectors, liquid spill over keyboard.

- Look for signs of drop, movement, or vibration that may cause internal and external loose connections.

4. Update BIOS and drivers

Whenever possible, update to the latest BIOS, firmware, and drivers before troubleshooting.

 **IMPORTANT:** Note that some customer company policies prohibit updates. Check your company policy before taking action.

The updates may include fixes for your computer issues, and they may also enhance system performance. HP continually improves the update process to make it easier. You can update the BIOS locally through a manual process, through an automatic installation, or through a remote installation on multiple units.

Manually updating BIOS and drivers

Use this information to update the BIOS.

- To manually update the BIOS and drivers, see the Setup Utility (BIOS) chapter.
- See the specific BIOS update installation instructions that accompany the download.

Remotely deploying the BIOS and drivers

Instead of manually searching for and downloading each SoftPaq, users and IT personnel can use two tools to identify and download all appropriate SoftPaqs for the selected HP models.

- HP SoftPaq Download Manager (SDM) is a software tool that streamlines the download, extraction, and installation process of SoftPaqs, including BIOS and drivers.
- HP System Software Manager (SSM) is a software tool that simplifies the deployment of SoftPaqs to HP computers.


Analyze the issue

Use these steps to evaluate and interpret the problem.

5. Remove or uninstall recently added hardware, software

HP has designed this computer and validated it using a full-range hardware and software qualification matrix. If an issue appears to have started recently, it may be related to the recent addition of hardware or software.

A good method to determine the root cause is to remove recently added components or uninstall applications one at a time and restart the computer when necessary.

 **IMPORTANT:** After you have completed the process of uninstalling hardware or software and are ready to reinstall, be sure that the new device is seated properly and all cables are correctly connected. After installing the device, restart the computer, and be sure that the new device is turned on. In addition, if the new device is a root cause of a problem, it could cause a conflict in drivers or incompatibility issues with other installed programs. For any new hardware you have added, be sure to install the latest drivers available from the device vendor website.

6. HP Hardware Diagnostics and Tools

HP offers diagnostics and tools to diagnose hardware failure. This section describes how to use some of these tools. Check for the latest versions before use.

HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly.

The HP PC Hardware Diagnostics (UEFI) tool is built within BIOS (basic memory and hard drive diagnostics only), or within new hard drives themselves. These drives contain more advanced versions of the diagnostic tool than the BIOS-based version.

In addition, for HP authorized service partners and IT professionals who need to support a mixed environment of older and newer HP/Compaq PCs, the HP PC Hardware Diagnostics Tool (<https://support.hp.com/us-en/help/hp-pc-hardware-diagnostics>) supports a wide range of HP computers.

The tool runs outside the operating system so that it can isolate hardware failures from software issues, whether caused by the operating system or applications. In reality, you can determine many problems using this tool if the issue is a defective part or a loose connection (for example, reseating the keyboard cable after the tool reports a keyboard error).



The tool has three major functions:

- System Tests check the computer's hardware to verify that everything is functioning properly. If your system won't boot into Windows, try the Quick System Test. For more comprehensive testing, use the Extensive System Test option. If the System Test did not detect a hardware problem, continue with the Component Tests.
 - Component Tests focus on selected hardware components in your computer.
 - Firmware Management update your computer's BIOS to the latest version (available separately) or rolls back to a previous version.
1. Turn on or restart the computer, quickly press the **esc** key on the computer, and then press **f2**.


The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive
 - b. Hard drive
 - c. BIOS
2. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Screen capture appearance may vary.

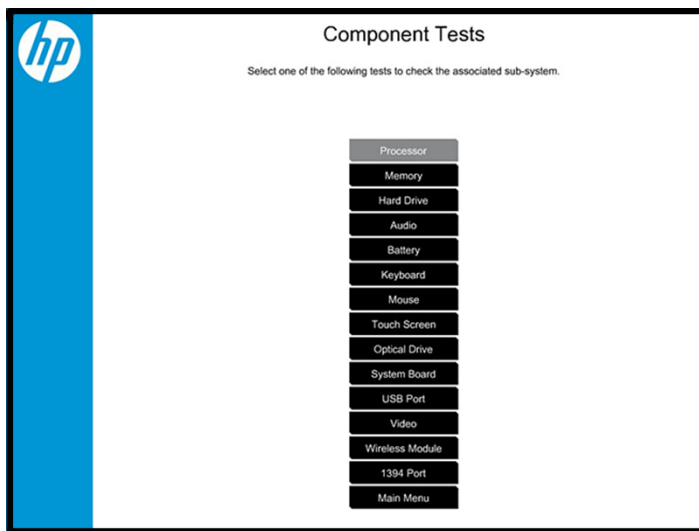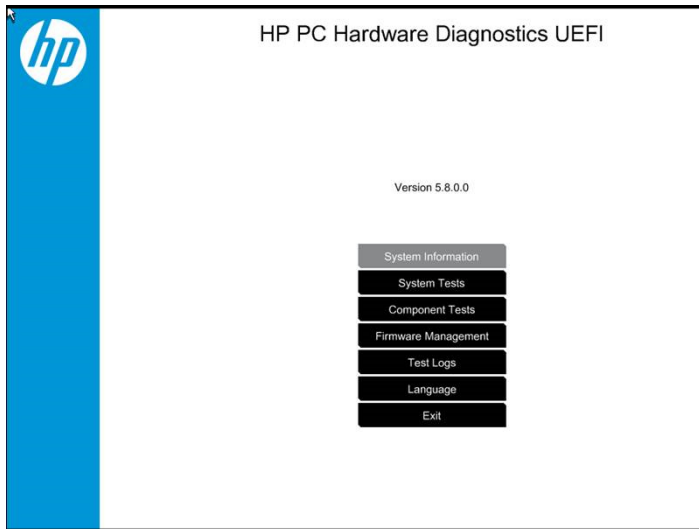

 **NOTE:** Use this tool, especially when the computer cannot boot to Windows.

 **NOTE:** If a component fails a test, write down the information so that it is available when you contact support. The information is also available in **Test Logs** on the Main Menu.


For more information, see [Using HP PC Hardware Diagnostics on page 173](#)

HP BIOS Configuration Utility (BCU)

HP BCU is a free utility that captures the BIOS settings and their values. This tool provides a text file of the computer's BIOS configuration. This file can help identify any settings that may be contributing to an issue.

In some cases, it may help to compare this BIOS text file to the default settings of the computer.

For more information, see the http://ftp.hp.com/pub/caps-softpaq/cmit/whitepapers/BIOS_Configuration_UTILITY_User_Guide.pdf.

 **NOTE:** HP recommends that you reset BIOS before trying BCU. Resetting the BIOS is always available and relatively quick to try, whereas BCU takes extra time and effort.

HP Image Diagnostic Tool

Available to HP Authorized Support Partners (ASPs) and users, this tool collects information about the current state of the computer, including product serial number, platform and BIOS information, and information about user-installed software and hardware components.

Access this tool at <ftp://ftp.hp.com/pub/idr/ImageDiags/>. HP encourages you to review the report before sending it to support. The report may assist you with diagnostics and solutions to problems you encounter.

HP Thermal Monitor

You can use HP Thermal Monitor to stress the processor and GPU and monitor the temperature values of various components in the system.



NOTE: Available only to authorized service providers and technicians.

The components that are currently monitored include the processor, GPU, ACPI thermal zones, hard drive, and battery. The tool reads the temperatures of the components, logs the data, and helps to determine whether the computer would overheat in the event of thermal shutdown, fan spinning loud, and so on.

Non HP diagnostics tools

Refer to the following diagnostic tools for troubleshooting help.

Windows-To-Go USB

Windows-To-Go USB is a Microsoft-based tool for Enterprise editions of Windows that can help in troubleshooting. You can find a process online about how to create a live Windows USB drive. For more information, see <https://technet.microsoft.com/en-us/library/hh831833.aspx>.

Intel Processor Diagnostic Tool

Determine what processor is in your computer and verify the processor operating frequency. The tool also tests specific processor features and performs a stress test on the processor. For more information, see http://www.intel.com/support/processors/sb/CS-031726.htm?iid=subhdr+tools_procdiagtool.

7. Status lights, blinking light codes, troubleshooting lights, and POST error messages

Carefully observe any behavior that the computer may be exhibiting: status lights, blinking lights, and POST error messages during boot. It is important to understand what these indicators mean.

Status lights

The following table describes basic lights on the computer.

Table 6-6 Power button functions and lights and their descriptions

Component	Description
Power button	<p>When the computer is off, press the button to turn on the computer.</p> <p>When the computer is on, press the button briefly to initiate Sleep (Windows) or Suspend (Linux®).</p> <p>When the computer is in the Sleep state, press the button briefly to exit Sleep (Windows) or Suspend (Linux).</p> <p>When the computer is in Hibernation, press the button briefly to exit Hibernation.</p> <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer stops responding and operating system shutdown procedures are ineffective, press and hold the power button.</p>
Front power light	<p>On: The computer is on.</p> <p>Blinking: The computer is in the Sleep state.</p> <p>Off: The computer is off.</p>
Front AC adapter and battery light	<p>White: The computer is connected to external power, and the battery is charged from 90% to 99%.</p> <p>Amber: The computer is connected to external power, and the battery is charged from 0 to 90%.</p> <p>Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light blinks rapidly. By default, the critical battery level is defined in Power Options as 5%.</p> <p>Off: The battery is fully charged.</p>
Front hard drive light	<p>Blinking white: The hard drive is being accessed.</p> <p>Amber: HP 3D DriveGuard has temporarily parked the hard drive.</p>
Rear AC adapter light	<p>White: The computer is connected to external power.</p> <p>Off: The computer is not connected to external power.</p>

Blinking light codes

During startup, the computer may not boot properly. If this occurs, blinking light codes can help identify the cause.

The computer uses the following blinking lights to identify a hardware component that reports an error during startup. For more information, see [Blinking lights and boot error codes on page 151](#).

Table 6-7 Blinking light codes and what they mean

Blink codes	Error
Amber battery light: blinks 1 Hz continuously	Embedded controller unable to load firmware
Caps and num lk lights = 1 blink	Processor not executing code
Caps and num lk lights = 2 blinks	BIOS recovery code unable to find valid BIOS recovery image
Caps and num lk lights = 3 blinks	Memory module error
Caps and num lk lights = 4 blinks	Graphics controller error

Table 6-7 Blinking light codes and what they mean (continued)

Blink codes	Error
Caps and num lk lights = 5 blinks	System board error
Caps and num lk lights = 6 blinks	Intel Trusted Execution Technology (TXT) Error
Caps and num lk lights = 7 blinks	Sure Start unable to find valid BIOS Boot Block image
Caps and num lk lights = 8 blinks	Sure Start has identified a problem (Manual Recovery Policy Set)

POST error messages

The Power-On Self-Test (POST) is a series of diagnostic tests that runs automatically when the computer is turned on. If the POST encounters a problem, visual error messages are displayed before the operating system starts.

POST checks the following items to ensure that the computer system is functioning properly:

- Memory
- Processors
- BIOS
- Mass storage devices
- Fans

The following table describes errors encountered during HP PC Hardware Diagnostics (UEFI).

Table 6-8 System diagnostics failure codes and actions to address the failure

Test description	Failure description	Error code	Suggested user actions
Startup Test	Memory module	200	Attempt to reseat the memory module, and then repeat the test. For details on troubleshooting issues related to the memory module, search for support documentation at http://www.hp.com/support .
Startup Test	Hard Disk 1 SMART	301	Attempt to reseat the hard drive, and repeat the test. The hard drive may have failed.
Boot Device Manager	Boot device not found	3F0	Reset BIOS. Then reseat the hard drive, and repeat the test.
BIOS Recovery	BIOS Recovery Occurred	500	This message indicates that BIOS recovery was completed successfully. No further action is required.
BIOS Application	BIOS Application Error	501	The BIOS installation may have become corrupted. Download the latest version of the BIOS and install it. If reinstalling the BIOS fails, contact support for further assistance.
CMOS Recovery	CMOS Recovery Occurred	502	This message indicates that CMOS recovery was completed successfully. No further action is required.

Table 6-8 System diagnostics failure codes and actions to address the failure (continued)

Test description	Failure description	Error code	Suggested user actions
Battery Check	Primary Battery Replace	601	This message indicates that the primary battery has very low capacity. Search for support documentation at http://www.hp.com/support for details on using the HP Support Assistant to verify the battery capacity and, if necessary, order a replacement.
Wireless Modules	Not installed or responding	701	Reseat the wireless LAN adapter module and antennas. Because seating or reseating a wireless LAN adapter is unique to each computer model, see the WLAN module removal section in the removal and replacement chapter for further details. Contact support if third-party wireless adapters are installed in the computer.
Fan	Fan not operating correctly	90B	The system fan may be malfunctioning. Replace the fan.

Resolve the issue

The following sections help you fix the issue.

8. Hard reset

A hard reset (or forced reset) erases all information in the computer's memory and may restore functionality. Resetting the computer forces the system to clear and reestablish the connections between the BIOS and the hardware.

For more information, see <http://support.hp.com/us-en/document/c01684768>.

Performing a hard reset might fix the following common conditions:


- Windows stops responding.
- Computer stops before Windows loads, indicated by incomplete startup, blinking cursor on a black background, and errors relating to operating system not found or a missing drive.
- Display suddenly goes blank and stays blank.
- Software freezes.
- Keyboard stops responding.
- The computer does not exit Sleep or Suspend state.
- An external device stops responding. Turn off the power to that device in addition to performing the steps in this document.

Before performing a hard reset, you must disconnect or remove all peripheral devices. Start and test the computer by itself, and if the problem is not resolved, reconnect one peripheral device at a time. To resolve the startup or operational problem, run HP Support Assistant, or manually install all updated drivers from Microsoft and HP.

Before beginning, turn the computer over and look for a battery compartment door (service door). On some platforms, the battery is considered removable but not accessible.

1. Turn off the computer.
2. Remove the computer from any port replicator or docking station.
3. Disconnect all external connected peripheral devices such as USB storage devices, external displays, and printers.
4. Unplug the AC adapter from the computer.
5. Disconnect the battery.
6. Press and hold the power button for at least 15 seconds to drain residual power.
7. Reconnect the battery and plug the AC adapter back into the computer, but do not connect any of the peripheral devices.
8. Press the power button to turn on the computer.
9. If a startup menu appears, use the arrow keys to select **Start Windows Normally**, and then press the **enter** key.
10. After reconnecting each of the peripheral devices, run Windows Update and HP Support Assistant to update all device drivers.


CMOS refers to the battery-powered semiconductor chip located on computer's system board. Notebooks store low-level settings like the system time and hardware settings in CMOS. Sometimes you must clear CMOS, which requires removing and reinserting the 3 V RTC battery for a short time (a few minutes before reinserting), in addition to removing the AC adapter and battery.

 **NOTE:** Clearing the CMOS should only be performed for troubleshooting purposes. There is no reason to clear CMOS if the computer is working properly.

You must remove the notebook service door to access the CMOS battery. If the computer has a replaceable RTC battery, see the RTC battery replacement section for the battery removal or replacement.

9. Soft reset (Default Settings)


If your computer has issues booting, has errors during boot, has issues after you add hardware, or has other abnormal system behaviors that you cannot resolve through any other methods (for example, hard reset), it may be necessary to reset the system BIOS to default settings.

 **NOTE:** Some company policies prohibit updates or changes. Check whether the computer has custom BIOS settings before taking action.

To load BIOS to default settings: Reboot the computer, and then press **f10 > Main > Restore defaults**. For more information, see <http://support.hp.com>, and the search for **BIOS Setup Utility Information and Menu Options**.

10. Reseat cables and connections

Many problems are caused by improper connections or loose connections because of abnormal movement and vibration.

 **NOTE:** Before disassembling the computer to reseat cables and connections, always disconnect power and remove the battery, or disconnect a nonremovable battery.

See [Cable management on page 163](#) and [Connector types on page 163](#) for suggested cable management practices when you remove and install components.

You can access and reseal connections for Customer Self-Repair (CSR) parts. Examples of reseating hardware include:

- Reseating the battery into the battery bay can resolve no-battery found and no-charging issues.
- Reseating memory modules can resolve memory error, no-boot, and blue screen issues.
- Reseating the hard drive can resolve a POST error 3F0 (no boot device) issue (see [POST error messages and user actions on page 154](#)).
- Reseating the keyboard cable can resolve an unrecognized keys error.
- Reseating the wireless module and antenna cable can resolve a wireless connection issue.

For field replaceable units (FRUs), authorized service providers can try the following steps:

- Reseating the fan cable can fix POST error 90B (no fan detected) issue (see [POST error messages and user actions on page 154](#)).
- Reseating the power cable can fix a no-boot issue.
- Reseating the daughterboards can resolve their functional issues. Some models may have items such as a power button board, VGA board, and others.
- Reseating graphics cables and panel connectors can fix distorted or flickering video.
- Replacing thermal pads may resolve thermal power-down issue.

11. Test with minimum configuration

The factory-shipped computer (hardware configuration and preinstalled operating system image) is well tested and ready for use. Therefore, using the original factory hardware configuration or booting to operating system safe mode often resolves issues quickly.

- Disconnect any external USB storage, remove any discs in optical drives, remove the computer from a docking station, remove external video, and others.
- In addition to removing recently added components, you can narrow the issue down further with a minimum configuration. For example, if HP PC Diagnostics reports a memory error, test one memory module at a time to isolate the defective module.
- If the computer does not successfully boot the operating system, booting to safe mode may help identify the following possible causes of the issue.

Essential hardware configuration

If none of the previous steps resolve the issue, start the computer with essential hardware only. The purpose is to remove as much hardware as possible while still maintaining the computer's ability to turn on.



NOTE: This step is to be used by authorized service providers only. HP will not honor the warranty for a system tested with the system board removed without the heat sink or fan.

This essential configuration is often used to troubleshoot power-on related issues, such as no-boot, reboot, and freezing issues.

The essential hardware consists of the following components:

- System board
- AC adapter (unplug nonremovable battery or remove battery)
- Processor (and heat sink or fan). The processor might be integrated into the system board.
- Memory (one verified working memory DIMM)
- Graphics card (if no VGA port is available on the system board). Platform may have both Intel integrated graphics and discrete graphics. Therefore, you might not need a discrete graphics card.
- External VGA monitor
- External USB keyboard
- External mouse



NOTE: After you remove the service door, disconnect all connections (internal keyboard, display, discrete GPU, hard drive or solid-state drive, daughterboards, and so on) to achieve the essential hardware configuration. **Do not** disassemble the system board from its enclosure at this time.

Reverse the previous procedure by reinstalling each piece of hardware removed, one piece at a time, and testing your computer after each installation. Because your computer works with only the essential hardware installed, those parts must be working properly. This means that one of the hardware components removed is causing the computer to fail. By installing each device back into the computer and testing each time, you eventually identify the failing hardware.

Safe mode

A driver conflict often results in a blue screen error message. Booting in safe mode can resolve many issues in Windows because safe mode forces the computer to load a limited version of Windows which contains only essential files.

Safe mode is useful for troubleshooting problems with programs and drivers that might not start correctly or that might prevent Windows from starting correctly. If a problem does not reappear when you start in safe mode, eliminate the default settings and basic device drivers as possible causes. For more information about how to start your computer in safe mode, see <http://support.hp.com/us-en/document/c03439317>.

12. Test with verified working configuration (hardware or operating system)

One troubleshooting technique that can quickly isolate an issue is using a verified working part while testing. A good example is to use an external keyboard, mouse, or VGA monitor when you have issues with an internal keyboard, touchpad, or display.

Testing with a verified working AC adapter can identify an error caused by a faulty one. Similarly, testing with a verified working operating system can determine bad behaviors of the current operating system. See [Non HP diagnostics tools on page 99](#) for instructions about obtaining and using a Windows-To-Go USB.




NOTE: In some situations, more than one item may contribute to a problem.


13. Replace the system board


Only authorized service providers may replace the system board. This should not be considered an initial step taken to resolve an issue.


Review and perform all steps discussed previously before replacing the system board. [4. Update BIOS and drivers on page 96](#), [7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99](#), [8. Hard reset on page 102](#), and [9. Soft reset \(Default Settings\) on page 103](#), or [10. Reseat cables and connections on page 103](#) can resolve many system board issues without requiring the effort of replacing unnecessary hardware.

Review [General troubleshooting steps on page 92](#) for appropriate troubleshooting steps.

 **IMPORTANT:** System board failure is not common. Do not replace the system board until you have tried all other troubleshooting options.

 **NOTE:** Determine whether a previous service case might be related to the current problem. For example, a fan detection issue could be caused by a loose connection resulting from previous service.

 **TIP:** Without an RTC battery (3 V coin-cell battery), the computer automatically reboots. This feature is useful when the power connector cable (between external AC adapter and system board) is defective.

 **NOTE:** Most of the time, effective troubleshooting can prevent a system board replacement.

Situations that can prevent resolution of the issue:

- The information provided about the issue omits key details, including any actions taken before the issue occurred.
- BIOS, software, and drivers have not been updated.
- Cables or connections are loose.
- Technician is unaware of information available from the HP Support website (CA - Customer Advisory).
- The issue is related to existing or known issues that might be identified in existing support articles.
- Technician might have omitted steps in the provided repair instructions (for example, Spare Part Replacement Instructions).
- Skipping one of steps from Troubleshooting Methodology table results in No Defect Found (NDF)/No Fault Found (NFF)/No Issue Detected (NID) messages.

Verify solution

Confirm that the implemented solution works.


- Reboot the system or device, and try to complete the task that produced the issue.
- If a part has been replaced, verify other basic functions. For example, GPU replacement requires keyboard removal. Therefore, it is good practice to verify all basic components to be sure that the solution is complete.
- Explain to the customer why the issue occurred and what was done to resolve it. If the solution you used was in an HP public document, provide the document information to the customer, letting them know they can locate it on <http://www.hp.com>. Also, tell them that there are other solutions available on the website. Advise the customer to check the website first when they have an issue. It might save them time calling in.
- Document the correct issue. Update the case with as many details as possible for other agents and engineers to analyze and study for lessons learned.

Helpful Hints

After you become familiar with the troubleshooting steps, use the helpful hints before running diagnostics and troubleshooting.

At startup

These steps provide simple, useful checks that you can perform when troubleshooting.


 **TIP:** If you have installed an operating system other than the factory-installed operating system, go to <http://www.hp.com/go/quickspecs> and verify that it is supported on your system.

1. Be sure that the computer is plugged into a working AC outlet.
2. Be sure that power is connected to the docking station if you use a dock.
3. Be sure that the AC adapter light is on.
4. Be sure that the AC adapter is connected when you update BIOS to avoid BIOS corruption.
5. Be sure that the computer is turned on, the rear power light is solid white (connected to an external power source), and the front power light is solid white (normal operation).
6. Remove all optical and flash drives from your system before turning it on.
7. Be sure that the boot option is set to a working operating system drive.
8. Be sure that externally connected monitors are turned on and their power lights are on. Not all monitors are equipped with lights to indicate their functionality.
9. Turn up the brightness and contrast controls of a display or external display device if the screen is dim.

During operation

The following steps provide simple, useful checks that you can perform when troubleshooting.

1. To wake the computer:
 - a. Press the power button or any key on the keyboard.
 - b. If the system remains in the Sleep (Windows), Suspend (Linux), or Hibernate state, shut down the system by pressing and holding the power button for at least 4 seconds.
 - c. If the system does not shut down, unplug the power cord, wait a few seconds, and then plug it in again. Then press the power button again to restart the system.
2. Look for blinking lights on the computer. The blinking lights could be error codes that help diagnose the problem.
3. Check all cables for loose or incorrect connections (external devices, power cords, dock, and so on).
4. After installing a non-Plug and Play expansion board or other option, reconfigure the computer. For example, if you upgrade to a solid-state drive, you might have to reconfigure the boot order.
5. Be sure that all required device drivers have been installed. For example, if you have connected a printer, you must install a printer driver.

6. If there is a network connection issue, plug another computer with a different cable into the network connection. There might be a problem with the network plug or cable.
7. If hardware has recently been installed, remove it and determine whether the computer functions properly.
8. If software has recently been installed, uninstall it and determine whether the computer functions properly.
9. If the screen is blank, confirm the display choice by pressing **Windows logo**  + **p** and set to screen only. Or plug an external monitor into a different video port on the computer, if one is available, and close the computer lid.
10. Verify that the latest version of BIOS, drivers, and software are installed. A new release might support new features or fix the problem.
11. Press the **caps lock** or **num lk** key. If the **caps lock** or **num lk** light toggles on or off, the keyboard is likely operating correctly.
12. Press the touchpad On/Off button light. If the light toggles on or off, the touchpad is likely operating correctly.

Consulting with HP Service

If further HP support is required, this information may be requested when you call. So it may be helpful to take notes.

- Technical support registration number (if applicable)
- Product serial number
- Product model name and number
- Product identification number
- Applicable error messages
- Add-on boards or hardware
- Third-party hardware or software
- Operating system type and revision level
- Description of symptom or failure

Common issues and possible solutions

This section contains common issues, symptoms, and a series of tables that describe possible solutions to issues from Failure Classification tables. The following sections identify the issue with symptoms and solutions to resolve an issue.

Power-on issues

Use the following sections to troubleshooting power issues.

No power

When a unit experiences no power, there are several contributing factors to consider. Be sure to consider all symptoms related to this behavior when troubleshooting.

Table 6-9 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• Computer does not start• Display is black or blank• No fan noise• No hard drive spinning• Lights do not glow	<p>Failed power input to the computer (external power source, AC adapter, faulty battery).</p> <p>Bad connection to the computer (bad power button, power connector).</p> <p>Defective parts (memory, hard drive, graphics) or failed system board.</p>
	<i>Troubleshooting steps</i>
	Perform quick check
	Remove all external devices, including docking station.
	Verify external power source (2. Examine the environment on page 95).
	Perform a hard reset (8. Hard reset on page 102).
	Verify AC adapter
	Verify the battery before verifying the AC adapter. However, you can verify the AC adapter first, before opening the service door for a battery check.
	<ul style="list-style-type: none">• Verify AC adapter is compatible with product. Verify that the part number is for this computer if possible.• Verify AC adapter and power cord are good (no physical damage, bent middle ID pin).• Verify AC adapter works on a verified working computer.• Plug in AC adapter and power on computer without battery.• Inspect power port on computer side for any damage, dust, or debris.• Check power light (7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99). Rear power light indicates external power to the computer is good.

Table 6-9 Issues, possible causes, and fixes (continued)


Items	Procedures
	<p>Verify battery condition and status</p> <ol style="list-style-type: none"> 1. Check battery condition (overall result, cycle life, voltage) using HP PC Hardware Diagnostics (UEFI) tool. 2. Verify that battery is installed properly in battery bay without a gap and that latch locks are tight (for models with removable batteries). 3. Check battery status light (7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99). Be sure that battery is not fully discharged, preventing system from booting. 4. Determine whether the computer can turn on with battery only. 5. Remove service door and test with a verified working battery. If the computer boots, inspect original battery before replacement. 6. Test battery with a verified working computer to verify that it works. 7. If the computer still does not boot, remove battery and boot on AC power only.
<p>The following steps are for authorized providers or technicians.</p>	
	<p>Verify AC adapter voltage</p> <ol style="list-style-type: none"> 1. Measure DC voltage output, which should be approximately 19.5 V dc. Acceptable voltage range is from 18.5 to 20.5 V dc. 2. If the DC voltage is out of range, replace the AC adapter. <p>NOTE: This action requires a digital voltmeter.</p>
<p>NOTE: Select models include a power cable between the system board and chassis power connector.</p> 	<p>Verify power button, power connector</p> <ol style="list-style-type: none"> 1. Be sure that power button is not stuck. 2. Reseat power connector cable (if applicable). 3. Replace new power connector cable (if the cable exists and is defective) 4. To isolate faulty power connector cable and power button, technicians can short power-on pads or pins to turn on the computer. Contact HP Engineering for this information.
	<p>Verify blinking lights (7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99)</p> <p>At this point, there should be sufficient power from the AC adapter to the system board. Expect to hear the fan spinning and see blinking lights or error messages (for example, faulty memory, HDD).</p>
	<p>Verify system board</p> <ol style="list-style-type: none"> 1. Test essential hardware configuration (11. Test with minimum configuration on page 104, 12. Test with verified working configuration (hardware or operating system) on page 105, 13. Replace the system board on page 105) by removing nonessential parts. 2. If the computer still does not boot, replace system board.

Table 6-9 Issues, possible causes, and fixes (continued)

Items	Procedures
Tips	<p>Computer automatically boots without pressing power button when the RTC 3 V battery is removed. Therefore, after the service door and RTC 3 V battery are removed, you do not have to press power button from top side.</p> <p>In essential hardware configuration, mWS G1 and G2 may require discrete graphics processing unit (GPU) to boot. However, mWS G3 can boot with integrated graphics.</p>

Intermittent power-on, shutdown, reboot

Use this information to troubleshoot power-on, shutdown, and reboot issues.

Table 6-10 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• Does not always turn on• Intermittently hangs• Intermittently shuts down• Spontaneously reboots	<p>Electrical short, fluctuating power source, unstable power rails, loose connections, bent pins, stray wires, dust, obvious damage, nearly faulty parts (bulging or leaking capacitor).</p> <p>Potentially turn into a no-power issue (No power on page 109).</p>
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. Visually check power ports on both AC adapter and computer sides.2. Inspect power sources:<ol style="list-style-type: none">a. Verify that the AC adapter is working correctly. Use a confirmed working adapter to test.b. Verify that battery is not depleted while system is in the Sleep state. Test with a confirmed working battery.
The following steps are for authorized providers or technicians.	

Table 6-10 Issues, possible causes, and fixes (continued)

Items	Procedures
	<ol style="list-style-type: none"> 1. Follow actions in No power on page 109. <ol style="list-style-type: none"> a. Be sure that AC adapter has correct DC voltage. b. Verify battery: test with a confirmed working battery. c. Verify that power button is not stuck. d. Verify that power connector is not loose. e. Remedy loose connections and reseat major components (processor, memory, GPU, hard drive, solid-state drive, and others). 2. Perform visual check for loose connections, bent pins, stray wires, dust, nearly faulty parts (bulging or leaking capacitor). 3. Test essential hardware configuration (11. Test with minimum configuration on page 104) <ol style="list-style-type: none"> a. If system boots, reinstall nonessential hardware one component at a time to isolate issue. b. If system does not boot, replace essential hardware with verified working parts, one component at a time. If system still does not boot, replace system board.

AC adapter issue

Use this information to troubleshoot AC adapter issues.

Table 6-11 Issues, possible causes, and fixes

	Solution
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> • No sign of power 	AC adapter and others (for example, external power source).
<ul style="list-style-type: none"> • No boot 	<i>Troubleshooting steps</i>
<ul style="list-style-type: none"> • No rear power light 	Quick check
<ul style="list-style-type: none"> • No front power light 	<ol style="list-style-type: none"> 1. Verify external power source (2. Examine the environment on page 95). 2. Remove all external devices, including docking station. 3. Perform a hard reset for the computer (8. Hard reset on page 102). 4. Disconnect and reassemble the power cord and adapter in case the adapter experienced short circuit, over current, over temperature events. 5. Use a verified working adapter. If the computer operates normally, there is a problem with the original adapter. 6. Verify that the AC adapter works on a verified working computer. If the computer operates normally, there is no problem with the adapter. See HP Smart Adapter warning message on page 126 for further information.
<ul style="list-style-type: none"> • Battery does not charge when AC adapter is connected 	

Table 6-11 Issues, possible causes, and fixes (continued)

Solution	
Verify AC adapter	
<ol style="list-style-type: none">1. Remove working battery.2. Verify that AC adapter is compatible with product. Verify that part number is for this computer if possible.3. Inspect AC adapter and power cord for physical damage, bent middle ID pin.4. Plug in AC adapter and power the computer without battery.5. Inspect the power port on computer side for any damage, dust, debris.6. Check power light (7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99). Rear power light indicates that external power to the computer is good.7. If there is still no rear power light or no boot, replace the AC adapter.	
Tips	<p>The HP Smart AC adapter has a special pin in the middle, called the ID pin, for power rating and throttling. If this pin is broken, the rear power light turns on, but the power button and front power lights blink continuously, and the computer does not turn on. Third-party AC adapters do not work with the computer.</p> <p>Use the AC adapter that came with the computer for better performance.</p>

Battery not recognized, not charging

Use this information to troubleshoot battery issues.

Table 6-12 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• No battery status light	Defective AC adapter , battery, or both.
<ul style="list-style-type: none">• Blinking amber (critically low battery level)	NOTE: Before proceeding, verify that the computer can boot to BIOS or Windows with a good AC adapter.
<ul style="list-style-type: none">• No boot without AC adapter	

Table 6-12 Issues, possible causes, and fixes (continued)

Items	Procedures
	<p data-bbox="608 258 831 289"><i>Troubleshooting steps</i></p> <p data-bbox="608 310 794 342">Visual inspections</p> <ol data-bbox="608 363 1428 541" style="list-style-type: none"><li data-bbox="608 363 1157 394">1. Inspect battery connectors for any signs of damage.<li data-bbox="608 415 1428 468">2. Verify that battery is installed properly in battery bay without gap or obstructions and latch locks are tight. Reseat battery (for models with removable batteries).<li data-bbox="608 489 1428 541">3. Determine whether battery gets hot (batteries heat up when charging, but not too hot to touch). <p data-bbox="608 562 1396 615">Check battery warranty to see whether the battery is new or its warranty is expired. Battery capacity degrades over time.</p> <p data-bbox="608 636 906 667">Verify front battery status light</p> <ol data-bbox="608 688 1257 762" style="list-style-type: none"><li data-bbox="608 688 1125 720">1. Battery status light is off: battery not recognized.<li data-bbox="608 741 1257 762">2. Battery status light is blinking amber: critically low battery level. <p data-bbox="608 783 678 814">Reset</p> <ol data-bbox="608 835 1173 909" style="list-style-type: none"><li data-bbox="608 835 1018 867">1. Hard reset (8. Hard reset on page 102)<li data-bbox="608 888 1173 909">2. Soft reset (9. Soft reset (Default Settings) on page 103) <p data-bbox="608 930 790 961">Verify AC adapter</p> <ol data-bbox="608 982 1412 1234" style="list-style-type: none"><li data-bbox="608 982 1412 1087">1. Determine whether the computer needs the AC adapter to boot and operate. Sometimes, an intermittently bad AC adapter and loose connection between adapter and computer results in inability to charge battery, which causes short run time.<li data-bbox="608 1108 1125 1140">2. Inspect AC adapter to verify that it is functioning.<li data-bbox="608 1161 1348 1192">3. Test with a working AC adapter and confirm whether battery is charging.<li data-bbox="608 1213 1396 1234">4. Be sure that battery is fully charged (AC adapter plugged in at least 2.5 hours). <p data-bbox="608 1255 1444 1308">Diagnostics: HP tools report results such as passed, calibrate, weak, replace, no battery, and unknown, and they suggest corresponding actions.</p> <p data-bbox="608 1329 1444 1360">Use HP Hardware Diagnostics (UEFI) (6. HP Hardware Diagnostics and Tools on page 96)</p> <p data-bbox="608 1381 1428 1434">HP PC Hardware Diagnostics (UEFI) is a good tool to use to isolate and determine faulty battery, especially for quickly discharging (short life) battery.</p> <ol data-bbox="608 1455 1444 1728" style="list-style-type: none"><li data-bbox="608 1455 1098 1486">1. Verify that battery is recognized and charging.<li data-bbox="608 1507 1428 1560">2. Verify battery condition if battery cycle life is past its life expectancy (that is, past 1000-cycle life and 3-year warranty). Battery might need to be replaced.<li data-bbox="608 1581 1444 1633">3. If issue remains, test with a verified working battery and verify battery status lights and battery conditions.<li data-bbox="608 1654 1034 1686">4. If issue remains, replace system board.<li data-bbox="608 1707 933 1728">5. Verify the new replacement.
Tips	See the computer user guide for instructions regarding battery maintenance and increasing battery life. Also see http://support.hp.com/us-en/document/c01297640?jumpid=hpr_r1002_usen_link3 .

Battery discharges too fast

Use this information to troubleshoot battery issues.

Table 6-13 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Battery has good status light but discharges too fast	AC adapter, battery, or both.
	<i>Troubleshooting steps</i>
	Verify AC adapter
	Determine whether the computer needs the AC adapter to boot and operate. Sometimes an intermittently bad AC adapter and loose connection between adapter and computer results in the inability to charge the battery and causes short runtime.
	<ol style="list-style-type: none">1. Inspect AC adapter to verify that it is working.2. Test with AC adapter alone and with a verified working AC adapter.
	Verify battery: Because battery capacity can degrade over time, check the warranty coverage. Run a battery test to confirm whether issue is hardware related.
	<ol style="list-style-type: none">1. Review battery power plans in Control Panel > Power Options that may consume more energy and discharge battery faster. Resetting default to Power Saver option can conserve battery power.2. Determine whether any graphics are processing.3. Verify battery maintenance and operations. Leaving the battery at a high level of charge in a high-temperature environment for extended periods accelerates the loss of capacity.4. Test and calibrate battery using HP PC Hardware Diagnostics (UEFI).5. Verify battery life cycle using HP Support Assistant tool.
	If battery cycle life is past its life expectancy (past the 1000-cycle life and 3-year warranty), the battery might need to be replaced.
	<ol style="list-style-type: none">6. Compare discharge time with a verified working battery (remove AC adapter) using Hardware Diagnostics (UEFI)>Hard Drive Tests>Extensive Test>Loop until error.
Tips	To conserve battery power, turn off Wireless On-Off button and other peripherals and USB devices, applications, processes (in Task Manager) when not in use; also, reduce screen brightness.
	Follow HP instructions about how to maintain battery and increase battery life. Also reference http://support.hp.com/us-en/document/c01297640?jumpid=hpr_r1002_usen_link3 .

Burnt smell

Use this information to troubleshoot burnt-odor issues.

Table 6-14 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Emits smoke, burnt smell	Defective on-board components.
	<i>Troubleshooting steps</i>
	General visual inspection
	<ol style="list-style-type: none">1. Disconnect the computer from power source (AC adapter and battery).2. Inspect for visual damage on AC adapter and battery. Test on a known working computer to isolate issue. If issue follows AC adapter or battery, replace it.3. Inspect any sign of liquid spill on the computer (back of keyboard).
The following steps are for authorized providers or technicians.	
	Further inspection on components
	<ol style="list-style-type: none">1. Inspect further sources internally after disassembling chassis, such as burnt or damaged components.2. If the issue persists, replace boards, AC adapter, and battery for safety concern, and report issues to HP.

POST

Use the following sections to troubleshoot Power-on Self Test issues.


No video (with power)

Use this information to troubleshoot video issues.

Table 6-15 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• No video (black or blank image) but have power• Light activity• No error messages• Fan noise• Hard drive light blinking and hard drive noise	<p>Failed display</p> <p>Failed critical components (memory, hard drive, system board)</p> <p>Loose connection</p> <p>Recently added hardware</p> <p>NOTE: These suggestions assume that the computer has not previously been set up for multiple displays.</p>

Table 6-15 Issues, possible causes, and fixes (continued)

Items	Procedures
	<i>Troubleshooting steps</i>
	Quick check
	<ol style="list-style-type: none">1. Verify that system light activity is OK.2. Remove all external devices, including docking station. Recently added hardware or applications may cause graphics driver conflict and result in loss of video.3. Perform hardware reset (8. Hard reset on page 102) and verify that HP Logo is presented correctly on display screen when pressing f10.4. Test with external monitor via VGA port (or DisplayPort, HDMI, or other). Press power button and close the computer lid to force video output to external video. If unsuccessful, contact HP service.5. If external video is OK, update BIOS, software, and drivers (4. Update BIOS and drivers on page 96), and perform soft reset (9. Soft reset (Default Settings) on page 103) if needed. Go to next step to verify display.
	Verify display
	<ul style="list-style-type: none">• When booting to Windows, determine whether image appears on display screen (via Windows Screen Solutions or Windows logo  + p for display switcher).• If there is video on the display, disconnect external display device, open the computer lid, and restart.
	The following steps are for authorized providers or technicians.
	<ol style="list-style-type: none">1. Reseat display cable connection on system board.2. Reseat display cable connection on display panel side.3. Examine and reseat major components, such as hard drive and memory.4. Test with minimum configuration (11. Test with minimum configuration on page 104) by removing hard drive to isolate operating system issues and testing video in F10 Setup.5. If video is present, restart and retest the computer.6. If video is present but bad, go to Display on page 128 section.7. If issue persists (no video), test with external video.8. If issue persists, test or replace a confirmed working display.9. If issue persists, replace discrete graphics card.10. If issue persists, replace system board because of defective video function.
Tips	Swipe a metal piece (screwdriver) over wireless or mute buttons to act as if closing lid to force video output to external display device.

Blinking lights

Use this information to interpret blinking lights on the computer.

Table 6-16 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Lights blink on keyboard caps lock/num lock keys	Blinking lights on startup usually indicate a problem with basic functionality of a critical component (processor, BIOS, graphics cards, memory, and so on) because of a loose connection, defective parts, or recently added parts.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. Check for any blink patterns. Count the number of blinks in a sequence, followed by a pause for a few seconds. 2. See status, blinking lights, and error message (7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99) for corrective actions. 3. If internal hardware components (such as memory, hard drive) have been recently added, a component may not be connected properly. Remove and reseat new components (10. Reseat cables and connections on page 103) one at a time.
Note	Because the display might not be functional, lights are used to indicate an error.

Diagnostic error messages

Use the information in the table to help you understand diagnostic error messages.

Table 6-17 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> • Computer has power • POST error message displays (Windows logo has not yet appeared) 	Diagnostic error messages indicate a problem. There may be a problem with the instruction being sent from the BIOS to a hardware component (for example, keyboard failures), or incompatible hardware. Can usually be resolved by installing updated firmware for the component.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. See 7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99 for corrective actions. An example of a POST error message might be "Boot Device Not Found." 2. If there is power, you might be able to access BIOS. Reset BIOS to its default condition. (9. Soft reset (Default Settings) on page 103) 3. Restore hardware to its original condition (for example, bootable solid-state drive instead of hard drive). 4. Reseat suspected components and verify connection. 5. Test suspected components using HP PC Hardware Diagnostics (UEFI) tool.
Note	An Error Message means that the system has finished BIOS hardware validation and is ready to launch the Startup Menu . To access the Startup Menu for further options, press the esc key while restarting the computer.

BIOS password

Use the information in the table to troubleshoot BIOS password issues.

Table 6-18 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Some sections are unavailable (grayed out)	You must use an administrator password.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. Review F10 BIOS Setup Overview to determine which features must be enabled. 2. Your BIOS settings may be managed by a BIOS administrator password setup. 3. If you lost or forgot the user password, contact your IT personnel.
Reference	HP F10 Setup Overview
	http://h10032.www1.hp.com/ctg/Manual/c04460979 http://h10032.www1.hp.com/ctg/Manual/c04685655 2015 Business PC models: see the HP PC BIOS F10 Setup Guide at http://support.hp.com .

Performance (OS)

Most software problems occur as a result of certain situations.

- The application was not installed or configured correctly.
- There is insufficient memory available to run the application.
- There is a conflict between applications.

Be sure that all the necessary device drivers are installed.

If an operating system other than the factory operating system is installed, check whether the operating system is supported and the application is certified for the version of the operating system.

Intermittent shutdown

Use this information to troubleshoot shutdown issues.

Table 6-19 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> • Shutdown during startup • Shutdown during operation 	It is often difficult to troubleshoot an intermittent issue. Possible causes include: Power-related issue: defective or insufficient power sources, poor connection. OS Custom Setting: Energy Saver (Power Management). Thermal-related issue: thermal sensors reach limits. Hardware related issue, voltage, out-of-range current, electrical short.

Table 6-19 Issues, possible causes, and fixes (continued)

Items	Procedures
	<p><i>Troubleshooting steps</i></p> <ol style="list-style-type: none">1. Update BIOS and drivers. (4. Update BIOS and drivers on page 96)2. Perform hard reset (8. Hard reset on page 102)3. Perform soft reset (9. Soft reset (Default Settings) on page 103)
	<p>Power-related issue</p> <ol style="list-style-type: none">1. Verify functionality of AC adapter alone. If it does not work, test with a verified working adapter.2. Verify battery alone. Verify that battery is not depleted. Test battery using HP PC Hardware Diagnostics (UEFI) tool.3. Verify connection of power button and cable.
	<p>OS custom settings</p> <ol style="list-style-type: none">1. Advise users to reset power options and close all applications that are not in use, including applications in the background.2. Test with a confirmed working operating system to isolate custom settings by users or any conflicting applications that cause shutdown.
	<p>The following steps are for authorized providers or technicians.</p>
	<p>Thermal-related issue</p> <ol style="list-style-type: none">1. Verify thermal condition:<ol style="list-style-type: none">a. Test fan using HP PC Hardware Diagnostics (UEFI) tool (6. HP Hardware Diagnostics and Tools on page 96)b. Check fan and connection. Reseat fan cable.c. Be sure that no obstructions or dust are in heat sink fan, fin, or vent.d. Test with a verified working fan.e. Remove old thermal compound and pads and replace with new compound and pads.2. Verify thermal solution:<ul style="list-style-type: none">o Use Thermal Monitor tool (available only to authorized service providers/ technicians) to perform stress test (processor and GPU) (6. HP Hardware Diagnostics and Tools on page 96), and verify that thermal sensors are within limits after thermal condition is serviced.
	<p>Hardware-related issue</p> <ol style="list-style-type: none">1. Check for any signs of loose connections, bent pins, stray wires, dust, nearly faulty parts (bulging/leaking capacitor).2. Verify that lights are solid.3. If shutdown is reproducible, test essential hardware configuration:<ol style="list-style-type: none">a. If no issue with hardware configuration, reinstall one nonessential component at a time to determine faulty hardware.b. If issue persists, replace essential hardware with a confirmed working part, one at a time. If the computer does not boot, replace system board.


Table 6-19 Issues, possible causes, and fixes (continued)

Items	Procedures
Tips	Intermittent issues are difficult to reproduce and troubleshoot. It is important to record details about shutdown frequencies, system configuration (3D video application), and operating conditions.

Blue screen

Use this information to troubleshoot blue screen issues.

Table 6-20 Issues, possible causes, and fixes

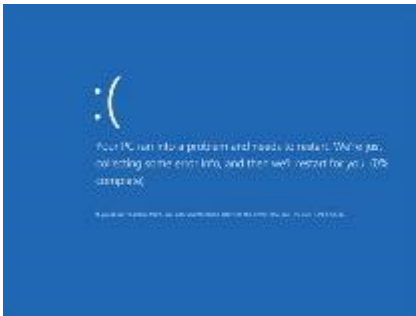Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• Have power, light activity, fan spinning• HP Logo displays briefly• Fails to boot into Windows operating system, displays blue screen, and then crashes, restarts, or stops responding	<p>Recent changes: conflict of instructions from multiple programs or just added hardware.</p> <p>Incompatible hardware and driver.</p> <p>Poor connection (hard drive, memory).</p> <p>Hardware malfunctioning due to overheating (GPU, processor).</p> <p>Defective hardware (memory, hard drive).</p>
Important Notes & Resources	<i>Troubleshooting steps</i>
	<p>There are many different ways to troubleshoot a blue screen error. Therefore, you need to identify working configuration and specific symptoms of the failure to narrow down the issue. See Blue screen (BSOD) error on page 146.</p>
	Recommended resources
	<p>Microsoft knowledge base:</p> <p>http://windows.microsoft.com/en-us/windows-8/resolve-windows-blue-screen-errors</p> <p>For more information, search for HP Troubleshooting Error Messages on a blue screen at http://www.hp.com.</p>

Overview of general troubleshooting steps for a blue screen error


1. Note the blue screen error message and what activity was performed at the time.
2. Perform a hard reset ([8. Hard reset on page 102](#)) after disconnecting all external peripherals.
3. Reset BIOS to default ([9. Soft reset \(Default Settings\) on page 103](#)) to prevent booting to another device.
4. Run HP Hardware Diagnostics ([6. HP Hardware Diagnostics and Tools on page 96](#)) to isolate major faulty hardware issues.
 - HP PC Hardware Diagnostics (UEFI) tool to test hard drive, memory, and system.

- Thermal Monitor (available only to authorized service providers and technicians) tool to monitor temperature limits of processor and GPU. See “HP Thermal Monitor” in [6. HP Hardware Diagnostics and Tools on page 96](#).
5. Remove or undo recently added hardware ([5. Remove or uninstall recently added hardware, software on page 96](#)). For example, incompatible memory or new solid-state drive storage.
 6. Reseat cables and connections ([10. Reseat cables and connections on page 103](#)). Pay attention to proper installation of memory and hard drive.
 7. Verify that a minimum of at least 100 MB of free space is available on your Windows partition.
 8. If you can start Windows:
 - a. Update BIOS and drivers ([4. Update BIOS and drivers on page 96](#)) to support updates for incompatibilities.
 - b. Get all the latest updates, using Windows Update.
 - c. Undo recent changes:
 - Startup using Last Known Good Configuration.
 - Use System Restore.
 - Roll back device driver in Device Manager.
 - d. Check for specific Error Message. See [Common blue screen error messages on page 156](#).
 - e. Boot to safe mode ([11. Test with minimum configuration on page 104](#)) to troubleshoot issues.
 9. If you cannot start Windows:
 - a. Boot to safe mode. ([11. Test with minimum configuration on page 104](#))
 - b. Use Startup Repair to fix Windows startup files.
 - c. Undo recent changes using System Restore to revert to a previous working state.
 - d. Check for specific STOP error by analyzing Crash Dump (retrieved via a bootable USB). See [Use Windows Debugging Tool on page 157](#).
 - e. Restore computer using System Recovery or image backup to factory settings.
 10. Test with essential hardware configuration ([11. Test with minimum configuration on page 104](#)) with a verified working operating system (for instance, USB Windows-To-Go), if available, to isolate the software issue.

Freeze at Windows Logo (hang or lockup)

Use the following information to troubleshoot hang or lockup issues.

Table 6-21 Issues, possible causes, and fixes

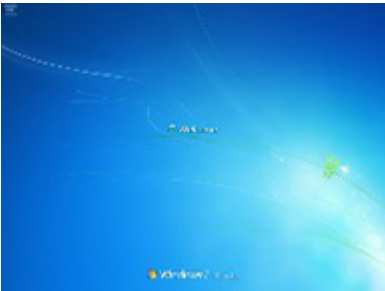Items	Procedures
<p><i>Symptoms</i></p> <ul style="list-style-type: none">• Has power, light activity, fan spinning• HP Logo displays briefly• Attempt to boot to operating system and freeze/hang at Windows logo• No response to pressing num lk or caps lock key	<p><i>Possible causes</i></p> <p>Conflict of instructions from multiple programs or drivers; installing a new hardware or program that is not compatible (may also cause a blue screen error—see blue screen issue).</p>
	
	<p><i>Troubleshooting steps</i></p> <p>Perform the following steps one at a time to verify normal boot process:</p> <ol style="list-style-type: none">1. Disconnect all external peripherals, and perform a hard reset (8. Hard reset on page 102).2. Perform soft reset (9. Soft reset (Default Settings) on page 103).3. Update BIOS and drivers (4. Update BIOS and drivers on page 96).<ol style="list-style-type: none">a. Roll back to previous version may be necessary.b. Go to safe mode to install drivers.4. Run Hardware Diagnostics (6. HP Hardware Diagnostics and Tools on page 96) to isolate hardware issue.5. Undo recent changes in Windows (5. Remove or uninstall recently added hardware, software on page 96).6. Reseat cables and connections (10. Reseat cables and connections on page 103).7. Start Windows in safe mode (11. Test with minimum configuration on page 104).8. Use Startup Repair Windows to fix Windows damaged files.9. Test with essential hardware configuration (11. Test with minimum configuration on page 104) with a verified working operating system (for instance, USB Windows-To-Go), if available, to isolate the software issue.
<p>Tips</p>	<p>For more information, see http://support.hp.com/us-en/document/c03671001.</p>

Electromagnetic Interference (EMI)

Use this information to troubleshoot EMI issues.

Table 6-22 Issues, possible causes, and fixes


Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
System locks up, freezes in certain physical area or location	Electromagnetic interference (EMI).
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. See (2. Examine the environment on page 95). Pay attention to external power source, high-frequency signals such as cell phones, microwave ovens.2. Move the computer to different locations nearby to determine where it fails and where it does not fail.3. Test with a verified working computer in original factory configuration.4. Consult with support.

No wake up

Use this information to troubleshoot wake-up issues.

Table 6-23 Issues, possible causes, and fixes

Items	Procedures
<p><i>Symptoms</i></p> <p>When resuming from a power management state the computer may display:</p> <ul style="list-style-type: none"> • Blank screen • Some light activity 	<p><i>Possible causes</i></p> <p>Power-saving mode; multiple-display setting.</p> <hr/> <p><i>Troubleshooting steps</i></p> <ol style="list-style-type: none"> 1. Verify that front power light (7. Status lights, blinking light codes, troubleshooting lights, and POST error messages on page 99) is blinking (indicating Sleep state). Press power button to exit Sleep. 2. Reset BIOS to default (associated with OS Power Management in Power Menu) (4. Update BIOS and drivers on page 96) 3. Check power management settings in Windows Power Options. Disable Sleep options if the issue is resolved.

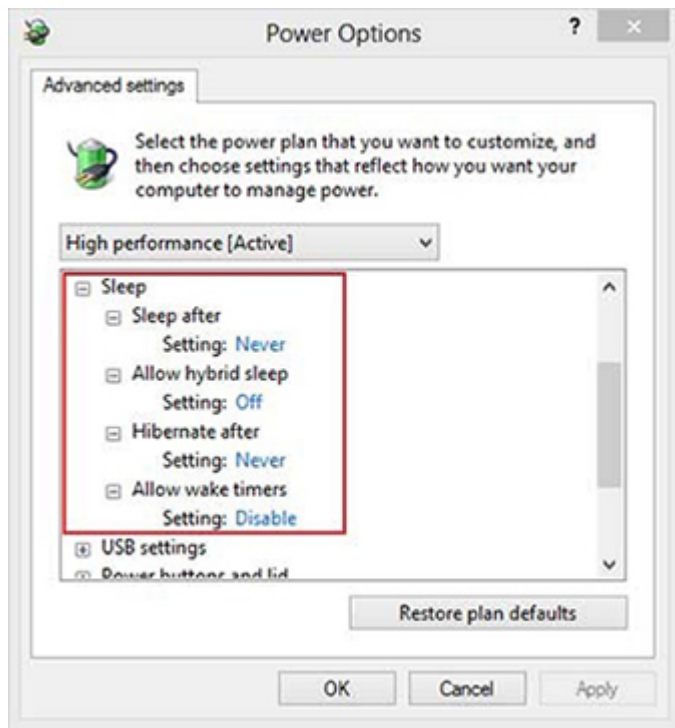

4. Screen saver is set. Press any key or touch touchpad to resume.
5. Verify that Display Choice is set to external video only. Toggle screen control key combination **fn + f4** or **Windows logo + P**.

Tips If you are using a docking station, set your notebook display as a primary display. When the computer is undocked, you may think it is in a power-saving state, but the screen image may actually appear on an external display device in the docking configuration.

Unresponsive

Use this information to troubleshoot issues with responsiveness.

Table 6-24 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Unresponsive	Program in use has stopped responding to commands.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. If possible, use the Windows Task Manager to isolate and terminate the offending process.2. Attempt the normal Windows shutdown procedure.3. Restart the computer using the power button.

Slow performance

Use this information to troubleshoot performance issues.


Table 6-25 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Slow performance when performing small tasks, or even in idle mode	Processor is hot or hard drive is full.
	<i>Troubleshooting steps</i>
	Processor is hot
	<ol style="list-style-type: none">1. Verify that airflow to the computer is not blocked.2. Verify that chassis fans are connected and working properly. Some fans operate only when needed.3. Verify that the processor heat sink is installed properly.
	Hard drive is full
	<ol style="list-style-type: none">1. Transfer data from the hard drive to create more space on the hard drive. Microsoft recommends at least 200 MB to sync system files.2. Perform disk defragmentation to consolidate fragmented data on the hard drive so it works more efficiently.
Tips	See Routine maintenance for performance improvement on page 156 . See http://windows.microsoft.com/en-us/windows-8/free-up-disk-space . See http://windows.microsoft.com/en-us/windows/optimize-windows-better-performance#optimize-windows-better-performance=windows-vista .

HP Smart Adapter warning message

Use this information to troubleshoot power adapter warning messages.

Table 6-26 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Warning message appears in window	Less powerful AC adapter, BIOS out of date.
	
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. Update BIOS, which may contain information that assigns an appropriate adapter for the configuration.2. Update the latest HP Hotkey Support software from Drivers website.3. Be sure that the power source is sufficient (where adapter is connected).4. Use appropriate AC adapter (often supplied with system) for optimum system performance.5. Test with a verified working AC adapter.6. Test the adapter on a verified working computer.7. Contact HP for configuration details.
Note	<p>HP Smart AC adapter warning message: informs you that as power demands increase, the notebook may not perform at full capacity, which may result in longer battery-charging time. In cases of extreme power demands, the system may also throttle back the processor, or with systems that have a discrete video subsystem, a video balance mode may occur to further balance the power needs of the system.</p> <p>Because system processor functions always have priority over battery charging, charging delays occur first.</p>

Incorrect time and date

Use the following information to troubleshoot time and date issues.

Table 6-27 Issues, possible causes, and fixes

Item	Procedure
<i>Symptom</i>	<i>Possible cause</i>
Incorrect date and time	Real-time clock (RTC) battery might need replacement.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. Reset the date and time in the operating system Control Panel.2. Replace the RTC battery.3. Verify that date and time are correct.

Display

Use these sections to troubleshoot display issues.

Display anomalies


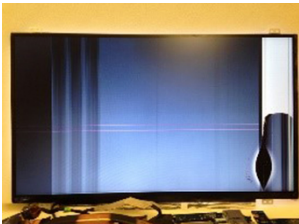
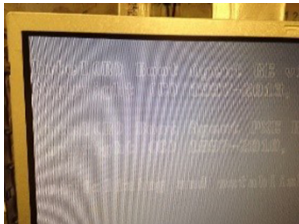
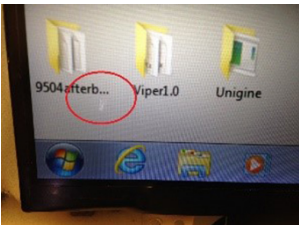
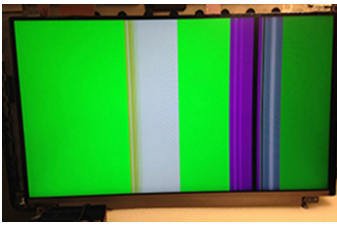

The display panel is a field-replaceable unit (FRU) and must be replaced by only authorized technicians. However, HP highly recommends that users and technicians observe symptoms and use the HP PC Hardware Diagnostics (UEFI) tool before any replacement.

Symptom

This section includes common display issues with symptoms:

- Blank or black video
 - Incorrect color, missing color, distorted image
 - Flickering image
 - Vertical lines (because of LDVS, decreased signal integrity, and data loss)
 - Dead pixel (because of display liquid, internal transistor, and others)
 - Horizontal lines (because of video memory)
 - Distorted when hot (because of thermal issue)
 - Cracked screen/image (physical damage)
 - Light leakage/bleeding
- Contact support for assistance.
- Humming noise (due to frequency settings)
- Contact support for assistance.

Table 6-28 Display anomaly illustrations

Display anomalies		
		
Cracked screen	Cracked image	Blurred image
		
Dead pixel	Vertical lines	Horizontal lines

Quick check

Use these steps to check the display.

- Visually examine the display for cracked screen, liquid crystal leak, dirty spots on glass, and other issues.
- Reset and update BIOS and docking firmware.
- Update operating system (OS), graphics or video drivers (Intel, AMD, NVIDIA, and others).

For custom images, HP highly recommends upgrading or installing Windows in UEFI mode (or Legacy disabled) to fully support hybrid graphics and avoid unexpected behaviors (for example, blue screen error, graphics or video issues) in the BIOS Legacy setting.

- Configure Windows settings (Power options, Screen brightness, Personalization, Screen resolution, and so on).
- Test with a verified working external display.
- Boot to Windows in safe mode.
- Test with a verified working operating system (for instance, shipping image).

HP PC Hardware Diagnostics (UEFI) for video test

Use this tool to quickly determine if the display issue is related to a real hardware issue.

To start HP PC Hardware Diagnostics (UEFI) ([6. HP Hardware Diagnostics and Tools on page 96](#)), when the computer is at boot, press the **f2** key, select **Component Tests**, and then select **Video**.


There are three options:

- **Video Memory Check:** to test video memory
- **Palette Check:** to test the three video color components (red, green, blue)
- **Dead Pixel Check:** to check dead pixels in eight different colors (Dead Pixel Check is available with the HP PC Diagnostics 3-in-1 USB Key tool)

Review the video troubleshooting in the following Display section for specific issues and possible solutions. For additional information about display problems, see documentation provided by the product manufacturer.

Display assembly diagram

The display assembly diagram shows basic video components: system board, graphics cards, display cables, display connectors, operating system (OS), graphics driver, and LCD display panel. Any component or a combination of these components can contribute to a video issue.

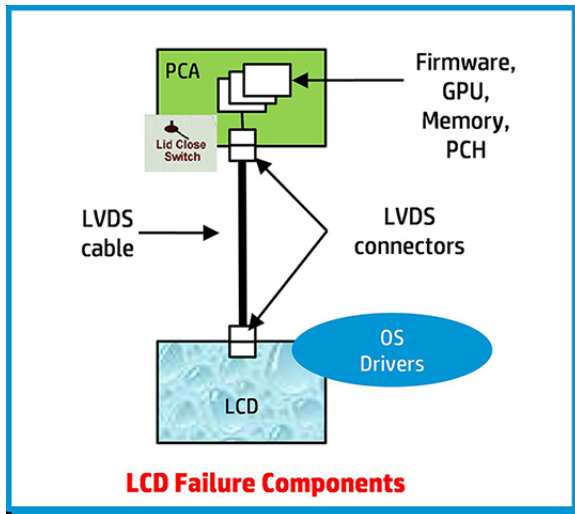

NOTE: The lid close switch is a Hall-effect sensor located in the top cover. When the display is closed, the sensor acts like a switch is closed. A notebook can force a video output to an external monitor, or go to hibernation or standby mode through power management. If the display screen does not light up when the display is open, the lid close switch (Hall-effect sensor) could be faulty.

Dead pixel

Display panel may show one or more pixels that are not properly lit when displaying a single color over the screen area. Use HP PC Hardware Diagnostics (UEFI) tool to determine those defective pixels.

There is no solution for dead pixels. See [Display issue: pixel anomalies on page 161](#) for the HP dead pixel policy.

No video (internal)

Use this information to troubleshoot video issues.

Table 6-29 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
No internal video with certain programs (for example, video-intensive games)	Display resolution, brightness, faulty lid switch, running a program requiring a higher resolution than the display screen can support. Faulty lid switch may put the system into Sleep or Hibernation mode.
	<i>Troubleshooting steps</i>
	Use an external monitor with higher resolution. Test with external monitor using HDMI or HP port. Press the power button and close the computer lid to force video output to external video. If there is still no video, contact support.
References	See section No video (with power) on page 116 for display information.

No video (external)

Use this information to troubleshoot external video issues.

Table 6-30 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
No image on external monitor	External monitor, resolution, display configuration, drivers.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. Be sure external monitor is compatible with the computer.2. Be sure that external monitor is turned on.3. Press any key to exit the power-saving mode.4. Adjust the brightness of the monitor.5. Test with a verified working monitor.6. Test the monitor via internal ports (VGA, DP ports).7. Install latest video driver.8. Reset the screen resolution as described in the documentation.9. Configure display choice, and then force output to external video by closing the notebook lid or pressing fn + f4 to switch screen output.

DisplayPort/VGA

Use this information to troubleshoot DisplayPort and VGA issues.

See [No video \(external\) on page 130](#).

HDMI

Use this information to troubleshoot HDMI issues.

Table 6-31 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• Display issue• Sound issue	Cable, connection, settings.
	<i>Troubleshooting steps</i>
	Quick Check
	<ol style="list-style-type: none">1. Verify that the HDMI device input source is set correctly (for example, HDMI1).2. Be sure you are using the correct HDMI cable.3. Check connection and reconnect the HDMI cable.4. Verify whether sound output is configured correctly in Control Panel > Sound Manager.

Table 6-31 Issues, possible causes, and fixes (continued)

Items	Procedures
	<ol style="list-style-type: none"> 1. Perform hard reset (4. Update BIOS and drivers on page 96). 2. Update BIOS and drivers (4. Update BIOS and drivers on page 96) when you hear sound but do not see video on HDTV.
References	http://support.hp.com/us-en/document/c01186408

No or bad external video via docking

Use this information to troubleshoot video issues while docking.

Table 6-32 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
No or bad image on external monitor via ports of docking station (such as VGA, DP, TB, display port, and others)	Rooted from system board, software or drivers, dock connectors, docking station hardware or firmware, dock video ports (DP, VGA, and others).
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. Be sure that external monitor is turned on. 2. Be sure that external monitor is compatible with the computer. 3. If applicable, plug the dock in different Type-C ports. For more information, see the technical white paper titled "HP Elite Dock with Thunderbolt 3 & HP ZBook Dock with Thunderbolt 3." Go to http://www.hp.com/ and search for HP ZBook Thunderbolt 3 Dock User Guide. 4. If the screen image is distorted, try a DP-to-VGA adapter. Connect the adapter to each DisplayPort and VGA port of the dock. 5. Test the monitor via internal ports (such as VGA, DP, HDMI, and others). 6. Verify that dock connectors of the notebook and the dock are clean, without dust, debris (for example, using air duster). 7. Ideally, use a verified working operating system or system connected to the dock to isolate the issue of the current operating system. 8. Ideally, use a verified working docking station to isolate the faulty dock. 9. Update latest dock firmware. Follow the installation instructions carefully. You may want to try a DP-to-VGA adapter if you have a distorted screen image. Connect the adapter to each DisplayPort of the dock. If you still cannot update the dock, attempt to update it on a confirmed working notebook before having the dock replaced.
Note	See the technical white paper titled "Multiple displays on HP ZBook Mobile Workstations" from HP platform support website. Go to http://h20195.www2.hp.com/v2/getpdf.aspx/4aa5-2657enw .

Incorrect or missing color/distorted image

Use this information to troubleshoot image issues.

Table 6-33 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
System works normally but the display shows:	Loose connection, display cable, display, graphics card.
<ul style="list-style-type: none">• Missing or strange color• Image distortion	<i>Troubleshooting steps</i> Verify with external monitor <ol style="list-style-type: none">1. Use combination fn + f4 to enable output to external monitor.2. Close the lid. <p>If the external monitor also shows incorrect color, it is graphics card issue. Test with a verified working graphics card.</p> <hr/> Verify monitor cable and cable connection (monitor disassembly required). <p>Be sure the monitor cables are not pinched or damaged.</p> <p>Be sure the monitor cables have good connection at both ends (system board and display panel).</p> <ul style="list-style-type: none">• If moving cables affects the image, the monitor cable is the cause of the issue. Test with a confirmed working cable.• If moving cables does not affect the image, the monitor has an issue. Test with a confirmed working monitor.


Touch screen

Use this information to troubleshoot touch screen issues.

Table 6-34 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Unresponsive	Dirt and smudge, driver, touch display configuration, power management.
Inaccurate	<i>Troubleshooting steps</i> Quick check <p>Turn off the computer, spray glass cleaner onto a soft, damp cloth, and gently wipe the screen to remove dirt and smudge.</p> <p>NOTE: Do not spray cleaner directly onto the screen.</p>

Table 6-34 Issues, possible causes, and fixes (continued)

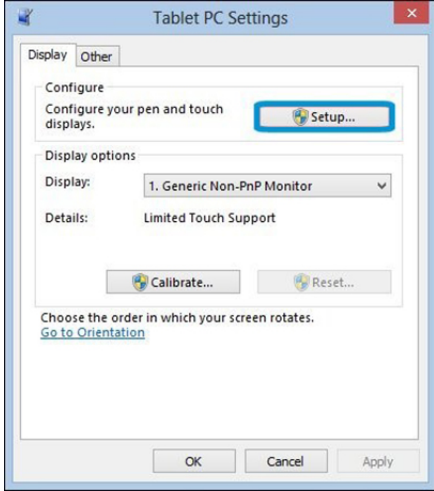Items	Procedures
Configure the touch display in Control Panel > Tablet PC Settings	<ol style="list-style-type: none">1. Restart the computer.2. Verify touch screen and graphics drivers.3. Configure the touch display to identify the screen as a touch screen as shown in the image at left.4. Calibrate the screen and reset if touch functionality is still not working correctly.5. Perform diagnostic test in HP Hardware Diagnostics under Component Tests > Touch Screen. If the diagnostics tests pass but the touch screen still does not respond, continue following the steps.6. Adjust the power management settings for your touch screen. If the touch screen stops working after waking from sleep, adjust the power management settings so that the touch screen device stays active while the computer is in Sleep mode.7. Perform Microsoft System Restore, and restore to a time when the system was working.8. Perform HP System Recovery if none of the previous actions resolve the issue.
	
References	https://support.hp.com/us-en/document/c03488148

I/O devices

Use this information to troubleshoot I/O device issues.



NOTE:

- Be sure that external devices are supported and compliant (for example, USB Type-C®, Thunderbolt 3, PCI Express).
- If you have problems with external devices not provided by HP, contact device manufacturers for compatibility and latest drivers before troubleshooting (for example, USB devices, Thunderbolt devices, PCI express card reader, VGA, display, HDMI monitors, speakers).
- Be sure I/O devices are properly inserted into the I/O ports, and then be sure that Windows Device Manager recognizes the I/O devices.

Keyboard

Use this information to troubleshoot keyboard issues.

Table 6-35 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Keystrokes not recognized	Dust trapped under keycap, loose keycap, loose keyboard connection, defective keyboard.
Characters not matched	
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. Inspect the keyboard for any signs of dust, liquid, or debris trapped under sticky keys that might prevent keystroke recognition. 2. Check for incomplete connection between keyboard and system board by verifying that caps lock or num lk light turns on when you press the key. 3. Verify whether the keyboard is recognized in Windows Device Manager, and verify whether the keyboard driver is installed properly. 4. Test with a working external keyboard (such as a USB keyboard). Also test in Windows for special keys (caps lock, shift, ctrl, fn, Windows, alt) if necessary. 5. Test with HP PC Hardware Diagnostics (UEFI) to isolate a hardware issue from a software issue. 6. Verify that BIOS is up to date. If so, resetting BIOS to default may help. 7. Test with a verified working operating system, or restore the operating system to be sure that the issue is not caused by items such as different language settings, sticky keys feature, and so on. 8. Verify that keyboard flex cables are fully inserted and in good condition.
The following steps are for authorized providers and technicians.	
	<ol style="list-style-type: none"> 1. Verify whether keyboard flex cable is in good condition (no delamination or torn cable end, no missing or cracked tracks, pads). 2. Verify that keyboard flex cable ends are fully inserted and aligned with connectors on system board, and those connector tabs are properly closed. Reseat cables. 3. Replace new internal keyboard and retest.
Tips	If a key works only when pressed with force, inspect and remove debris trapped under keycap.


Keyboard pointing stick (select products only)

Use this information to troubleshoot pointing stick issues.

Table 6-36 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Point stick not working properly	Dust trapped under point stick, loose point stick cap.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. Inspect for any signs of dust or liquid spill that prevents point stick from working. 2. Check whether point stick cap is loose, and reseat it if necessary.

Table 6-36 Issues, possible causes, and fixes (continued)

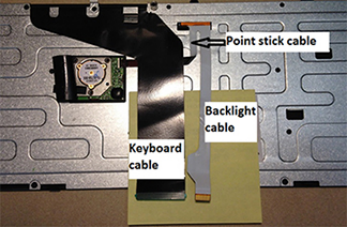Items	Procedures
The following steps are for authorized providers and technicians.	
 <p>Example of back of keyboard, including keyboard, point stick, and backlight cables.</p>	<ol style="list-style-type: none"> 1. Verify whether keyboard flex cables are in good condition (no delamination or torn cable end, no missing or cracked tracks, pads). 2. Verify that keyboard flex cable ends are fully inserted and aligned with connectors on system board and back of keyboard, and that connector tabs are properly closed. 3. Reseat point stick cables.

Keyboard backlight

Use this information to troubleshoot keyboard backlight issues.

Table 6-37 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Backlight function not working properly	Backlight disabled, loose connection.
	<i>Troubleshooting steps</i>
	<p>NOTE: Not all notebook computers have backlit keyboards.</p> <p>A keyboard function key lets you turn the light on and off. Verify whether backlit feature is not disabled by pressing a combination of fn + backlit key.</p>
The following steps are for authorized providers or technicians.	
	<ol style="list-style-type: none"> 1. Verify whether backlight flex cables are in good condition (no delamination or torn cable end, no missing or cracked tracks or pads). 2. Verify that backlight flex cable ends are fully inserted and aligned with connectors on system board and that connector tabs are properly closed. 3. Reseat backlight cable.


Touchpad

Use this information to troubleshoot touchpad issues.

Table 6-38 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Not working properly	Touchpad turned off, driver, settings.

Table 6-38 Issues, possible causes, and fixes (continued)

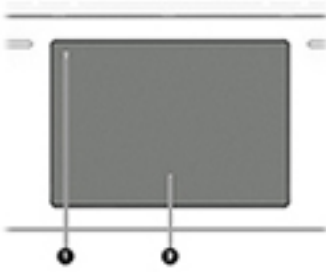Items	Procedures
(1) Touchpad on/off button	<i>Troubleshooting steps</i>
(2) Touchpad	<ol style="list-style-type: none"> 1. Ensure touchpad on/off light is not amber (disabled). Double tap to enable. 2. Verify whether touchpad device is listed in Device Manager > Mice and other pointing devices. 3. Install the latest touchpad driver. 4. Adjust touchpad settings (Control Panel > Mouse). 5. Test touchpad controller using the HP PC Hardware Diagnostics (UEFI) tool (f2 > Component Tests > Mouse Test > Pointer Test & Drag and Drop Test).
	
<p>The following steps are for authorized service providers/technicians.</p> <ol style="list-style-type: none"> 1. Check the touchpad cable for damage or a loose connection, and then reseal the touchpad cable. 2. If issue persists, replace the touchpad and verify the change. 	

Network connectivity (RJ-45 jack)

Use this information to troubleshoot network issues.

Table 6-39 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> • Unable to find networks (yellow bang) • Connection dropouts • Slow performance 	Network source, cable, connection, RJ-45 (network) jack, driver, settings.
	<i>Troubleshooting steps</i>
	Quick Check: verify the network status lights that supposed to flash when there is network activity.

Network connectivity wireless (WLAN)

Use this information to troubleshoot wireless connectivity issues.

Table 6-40 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> • Unable to find networks (yellow bang) • Connection dropouts • Slow performance 	Network source, cable, connection, wireless module, driver, settings.

Table 6-40 Issues, possible causes, and fixes (continued)

Items	Procedures
The following steps are for authorized providers or technicians.	
	<ol style="list-style-type: none"> 1. Verify that the wireless module and its antenna cables are fully inserted and in good condition (see WLAN module removal and replacement section). Reseat wireless module and antenna connection. 2. Verify the module antenna cable connection is not loose. 3. Verify that antenna cables are properly connected to the MAIN and AUX terminals (see WLAN module removal and replacement section).


WWAN

Use this information to troubleshoot WWAN issues.

Table 6-41 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Unable to find networks or service	Network source, cable, connection, driver, settings.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> 1. Update to the latest driver and utility. 2. Check with network service provider for signal coverage. 3. Be sure signal strength is good. 4. Be sure that your service is active.

The following steps are for authorized providers or technicians.

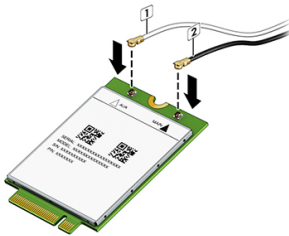


- Verify module and antenna cable connections are not loose.
- Verify antenna cables are properly connected to the correct terminals. For example, the antenna cable labeled **1** connects to the Main terminal labeled **1**. The antenna cable labeled **2** connects to the Aux terminal labeled **2**.

USB

Use this information to troubleshoot USB port issues.

Table 6-42 Issues, possible causes, and fixes

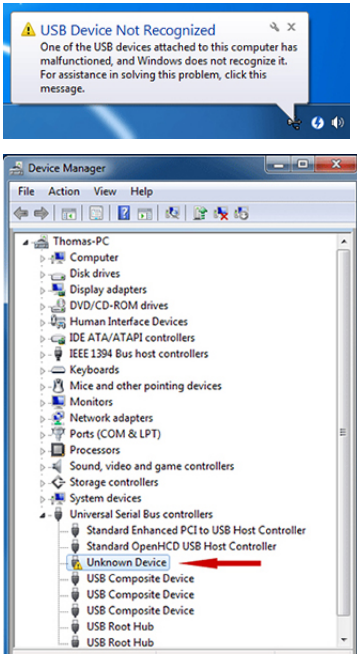Items	Procedures
<p><i>Symptoms</i></p> <ul style="list-style-type: none"> • USB devices are not recognized • USB devices are not charging 	<p><i>Possible causes</i></p> <p>USB devices do not have the latest software drivers or port insufficient power, or the devices are not compliant.</p> <p>NOTE: USB Type-C uses a different connector entirely.</p>
<p>Examples of USB device Not Recognized</p>  <p>The image shows two screenshots. The top one is a Windows error dialog box titled 'USB Device Not Recognized' with a yellow warning icon. The text inside says: 'One of the USB devices attached to this computer has malfunctioned, and Windows does not recognize it. For assistance in solving this problem, click this message.' The bottom screenshot is the Windows Device Manager window. Under 'Universal Serial Bus controllers', there is an 'Unknown Device' highlighted with a red arrow. Other devices listed include Standard Enhanced PCI to USB Host Controller, Standard OpenHCD USB Host Controller, and several USB Composite Devices and USB Root Hubs.</p>	<p><i>Troubleshooting steps</i></p> <ol style="list-style-type: none"> 1. Unplug the USB device. Restart the computer (wait for 2-5 minutes) to reset the USB port or hub in case of a power surge. 2. Perform a soft reset (9. Soft reset (Default Settings) on page 103), and verify if the USB device is recognized. 3. Verify whether the USB device is recognized in Device Manager > Universal Serial Bus Controller, or the USB is recognized without a yellow warning symbol, or bang. 4. Verify whether the latest USB driver, USB chipset driver, or both are installed. You can remove or reinstall the USB driver. 5. Be sure the USB device is supported, for example, USB 3.0 device requires more power draw (0.9 A) from a USB port than a USB 2.0 device (0.5 A). As a result, identify the USB charging port to be used for charging a USB device, or an external AC power adapter might be required for an external USB storage device to work properly. 6. Test with verified working USB devices (keyboard, mouse, USB key) to be sure USB ports are functional. 7. Test the USB device on a verified working computer to be sure the USB device is not malfunctioning.


Smart card reader

Use this information to troubleshoot smart card reader issues.

Table 6-43 Issues, possible causes, and fixes

Items	Procedures
<p><i>Symptoms</i></p> <ul style="list-style-type: none"> • Not recognized • Unable to write 	<p><i>Possible causes</i></p> <p>Physical damage, incorrect insertion, dirt, driver, malfunctioning card reader.</p> <p>NOTE: Some cards have a read-write security switch on the card. Be sure that switch is set to Write Enabled before attempting to write data to it.</p>

Table 6-43 Issues, possible causes, and fixes (continued)

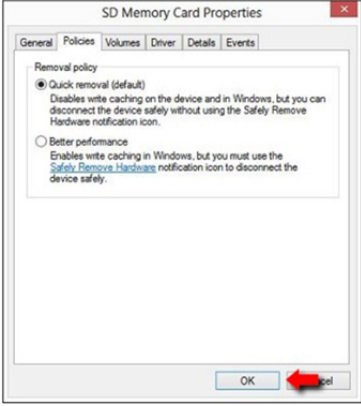Items	Procedures
<p>Card Reader Removal Policy</p> 	<p><i>Troubleshooting steps</i></p> <ol style="list-style-type: none"> 1. Verify card reader removal policy. 2. Be sure that the card has no physical damage. 3. Inspect the ends of the memory cards for dirt or material closing a hole or spoiling a metal contact. Clean the contacts with a lint-free cloth and small amounts of isopropyl alcohol. Replace the memory card if necessary. 4. Reinstall and update the drivers for the card reader. 5. Be sure that the smart card reader is compliant with ISO 7816 Class A, B, and C. 6. Reinsert the card reader with correct face as described in its documentation. 7. Check reader function with a verified working card.

IMPORTANT: If the card reader has an in-use indicator light, do not insert or remove memory cards while the light is flashing. Doing so might cause loss of data on the card or might permanently damage the card reader.

Speaker, headphone - audio issues

Use this information to troubleshoot audio issues.

Table 6-44 Issues, possible causes, and fixes

Items	Procedures
<p><i>Symptoms</i></p> <ul style="list-style-type: none"> • No sound from external or internal speakers • Distorted sound, too soft, too loud, intermittent 	<p><i>Possible causes</i></p> <p>Volume turned down, sound card not recognized, malfunctioning hardware, electronic interference.</p>

Table 6-44 Issues, possible causes, and fixes (continued)

Items	Procedures
	<p style="text-align: center;"><i>Troubleshooting steps</i></p> <ol style="list-style-type: none"> 1. Remove any device connected to the audio jack to enable the internal speaker. 2. Close all open programs. 3. Adjust volume by pressing fn + f6 or f7. Be sure that volume button light is not amber (mute). <p style="text-align: center;">- or -</p> <p>Adjust Windows volume control by selecting the speaker icon on the Windows taskbar. Be sure that the sound is not muted.</p> <ol style="list-style-type: none"> 4. Verify that the sound card is detected in Windows Device Manager. 5. Reinstall the latest audio driver. 6. Test audio device using the HP PC Hardware Diagnostics (UEFI) tool (f2 > Component Tests > Audio). 7. Test with a verified working operating system. If issue is resolved, restore full operating system. 8. Test with verified working external speakers or headset. 9. Reseat internal speaker connections. 10. Test with verified working internal speakers. 11. Replace internal speakers.
No sound from headphones	<ol style="list-style-type: none"> 1. Adjust volume by pressing fn + f6 or f7. Be sure that volume button light is not amber (mute). Or adjust Windows volume control by selecting the speaker icon on the Windows taskbar. Be sure that the sound it not muted. 2. Check headphone cable connection. 3. Test with a verified working audio board. 4. Replace audio board and verify the change.
No sound from external speakers	<ol style="list-style-type: none"> 1. Verify that external speakers are turned on. 2. Disconnect headphones from headphone jack. 3. Adjust volume by pressing fn + f6 or f7. Be sure that volume button light is not amber (mute). <p style="text-align: center;">- or -</p> <p>Adjust Windows volume control by selecting the speaker icon on the Windows taskbar. Be sure that the sound is not muted.</p> <ol style="list-style-type: none"> 4. Check for possible interference devices nearby that might affect the audio (cell phone or portable communications handset).

Thunderbolt (TB)


Use this information to troubleshoot Thunderbolt issues.

Table 6-45 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Thunderbolt device not working	BIOS, drivers, and user settings.

Troubleshooting steps

1. Update to the latest BIOS and choose appropriate TB Port settings.
2. Reset **User Account Settings** to default.
3. Update Intel Thunderbolt software that includes firmware version (for TB controller), driver version (operating system driver), and application version.

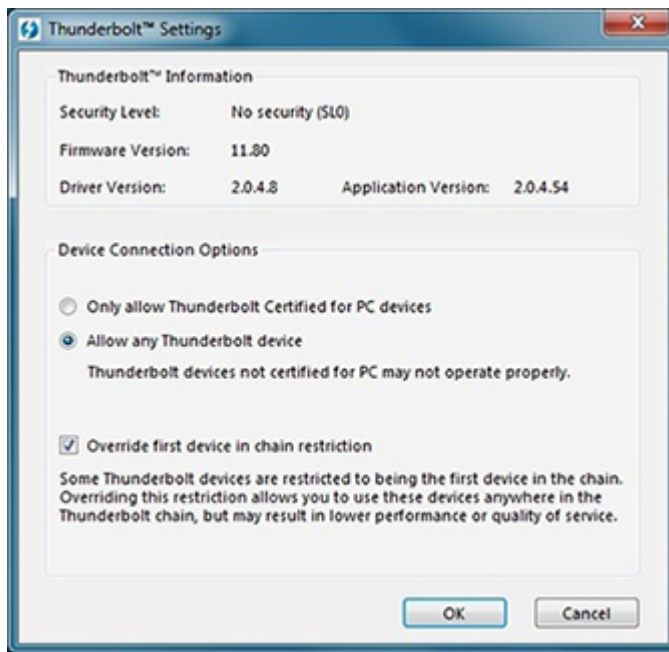

4. Verify that Windows Device Manager detects the TB device.
5. Verify cable connection to TB port.
6. Test with a verified working TB board, if possible.

NOTE: Thunderbolt is new technology. Thunderbolt cable and Thunderbolt device must be compatible with Windows. To determine whether your device is Thunderbolt Certified for Windows, see <https://thunderbolttechnology.net/products>.

Storage


Use this information to troubleshoot storage issues.



NOTE:

- Back up all critical data before troubleshooting the drive.
- Before contacting support, HP recommends that you run a drive (HDD, SSD, M.2 drive) test using the HP PC Hardware Diagnostics (UEFI) tool on the suspected failed drive.

- Diagnose the hard drive using BIOS, Diagnostics built in the shipping image, or an external USB (<https://support.hp.com/us-en/help/hp-pc-hardware-diagnostics>).
 - HP recommends the drive quick test to quickly (less than 10 minutes) identify the malfunctioning drive. If the issue still exists, run Extensive Test (more than 2 hours, or loop mode, which runs until an error occurs).
 - If any test fails, record failure code and contact support for instructions about how to order a replacement hard drive.
 - If all of the tests pass, the hard drive is not damaged. As a rule, HP will not replace a hard drive under warranty that does not fail the HP Hard Drive Self-Test.
 - If there is no physical problem with the hard drive (or memory), then try reinstalling the Windows operating system to troubleshoot the problem.
-

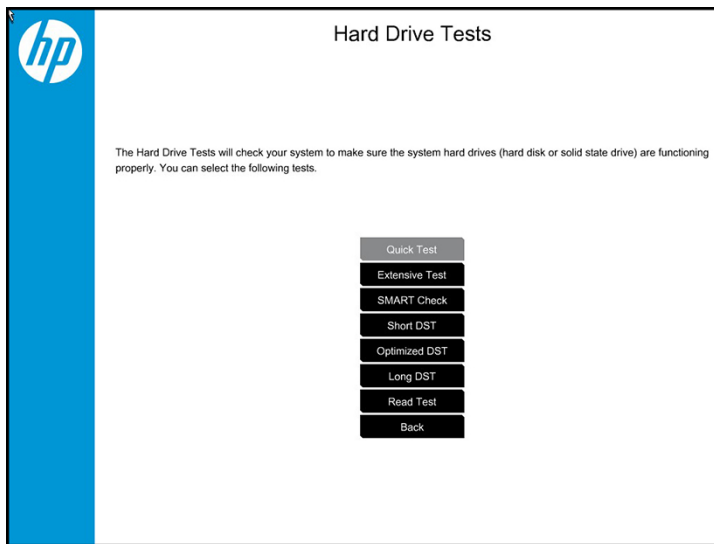

Hard drive or solid-state drive not recognized

Use this information to troubleshoot storage device issues.

Table 6-46 Issues, possible causes, and fixes

Items	Procedures
<i>Symptom</i>	<i>Possible causes</i>
Hard drive is not recognized during POST	Loose connection, faulty hard drive, faulty drive configuration/BIOS setting.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. Perform a hard reset (8. Hard reset on page 102).2. Reset BIOS to default.3. Verify hard drive connection and flex cable. Reseat hard drive and cable connection. For multiple storage devices, keep the primary drive with the operating system and remove other devices.4. Use the HP Hardware Diagnostics tool to verify that the drive is recognized and test it.5. If the hard drive fails diagnostics, record failure and have the drive replaced.6. Identify when the issue is related to software. If the hard drive passes diagnostics, test the drive on a verified working computer. If the failure follows the drive, reinstall the operating system to be sure that software is not an issue.7. Test with a verified working hard drive. If it is still not recognized, the system board is faulty.
	NOTE: If the drive is seen in BIOS and Diagnostics, try a secure erase before replacing a drive as this might resolve related issues.

No boot to operating system (no read-write error)

Use this information to troubleshoot issues with booting to the operating system.

Table 6-47 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> POST error message: Boot Device not found (3F0) 	Operating system, loose connection, faulty hard drive, BIOS configuration, Secure Boot.
<ul style="list-style-type: none"> Hang when booting to operating system 	<p><i>Troubleshooting steps</i></p> <ol style="list-style-type: none"> Verify whether Secure Boot is enabled in BIOS. Secure Boot prevents legacy boot devices from starting the computer, including bootable CDs and DVDs. For more information, see http://support.hp.com/us-en/document/c03653226. Reset BIOS to default. Be sure that BIOS Boot Mode in Boot Option is set up properly for bootable device and its operating system (for example, UEFI Native for Windows 8). Another example, choosing Legacy Boot Order for an UEFI device causes "Boot Device not found (3F0)" error. Verify hard drive connection and flex cable. Reseat connection. For multiple storage devices, keep the primary drive with the operating system and remove other devices. Use PC Hardware Diagnostics tool to test. Record failure code and have the hard drive replaced. If there is no error, reinstall the operating system using HP Restore. Test with a verified working operating system hard drive, if available.
Note	If there is a hard drive POST error message, see POST error messages and user actions on page 154 .

Read-write error

Use this information to troubleshoot read and write errors.

Table 6-48 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> POST error message (for example, error code 301) 	Loose connection, faulty hardware.
<ul style="list-style-type: none"> Hang when working on data, files, documents 	<p><i>Troubleshooting steps</i></p> <ol style="list-style-type: none"> Perform a hard reset (8. Hard reset on page 102). Reset BIOS to default (9. Soft reset (Default Settings) on page 103). Verify the drive connection and flex cable. Reseat connection (10. Reseat cables and connections on page 103). Use the HP Hardware Diagnostics tool to test. If failed, record failure code and have the hard drive replaced. If no error with HP PC Hardware Diagnostics (UEFI) tool, try to repair the hard drive and its files in Windows (using command "CHKDSK /f /r /x"). Use HP Restore to reinstall the operating system, if needed. Test with a verified working hard drive. If it is not recognized, the system board is faulty.

Table 6-48 Issues, possible causes, and fixes (continued)

Items	Procedures
Note	If there is a hard drive POST error message, see POST error messages and user actions on page 154 .

Slow performance

Use this information to troubleshoot performance issues.

Table 6-49 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Slow performance even when performing small read-write operations	Operating system files, hard drive is full.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none">1. Transfer data from the hard drive to create more space. Microsoft recommends at least 200 MB to sync system files.2. Perform disk defragmentation to consolidate fragmented data on the hard drive so that it works more efficiently.
	NOTE: Do not defragment an SSD.
Tips & tricks	For optimal system performance, place your operating system and all of your most commonly used applications and files on the fastest hard drive (solid-state drive) and fastest areas on the drive (primary partition of 200 GB max). See Routine maintenance for performance improvement on page 156 .


Blue screen (BSOD) error

A faulty hard drive can cause a blue screen error. Perform the drive tests using the HP Diagnostics Tool to be sure that the drive is functional.

If all of the tests are successful, see [Common blue screen error messages on page 156](#) for detailed troubleshooting steps.

Noisy hard drive

Use this information to troubleshoot a noisy hard drive.

 **IMPORTANT:** Because an SSD has no moving parts, it does not make loud or clicking noises.

Depending on type and rotational speed, some hard drives make more noise than others.

Not all noises are related to the fan or hard drive.

Table 6-50 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none"> Loud noise from hard drive 	BIOS, hard drive firmware, driver, faulty drive, power supply (AC adapter).
<ul style="list-style-type: none"> Clicking noise from hard drive 	<i>Troubleshooting steps</i>
<ul style="list-style-type: none"> Still boots to operating system and operates normally 	<ol style="list-style-type: none"> Update BIOS and hard drive firmware. Examine AC adapter to be sure that it is not faulty or overloaded. Disconnect all peripherals (USB storages, dock, and others). Remove hard drive to isolate the noise. Test the hard drive on a verified working computer if the noise continues. If the hard drive makes the same noise or clicking sounds, the sounds are either normal sounds for the hard drive or a fault with the hard drive. Verify original hard drive connection and flex cable. Reseat hard drive and connection. Run HP PC Hardware Diagnostics (UEFI). If failed, record failure code and replace hard drive replace. If you find no error with HP PC Hardware Diagnostics (UEFI), perform disk defragmentation. Some hard drives make a clicking noise when highly fragmented.
Tips	<p>For optimal system performance, place your operating system and all of your most commonly used applications and files on the fastest hard drive or solid-state drive and on the fastest areas on the drive (primary partition of 200 GB max).</p> <p>See Routine maintenance for performance improvement on page 156.</p>

Mechanical

Use this information to troubleshoot mechanical issues.

Noise (sound)

Use this information to troubleshoot abnormal noise issues.

Table 6-51 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Computer emits abnormal noise	Aside from basic components (power adapter, supply, fan, speaker, hard drive, optical drive, display panel, external devices), it is also common for electronic components to produce noise.
	<i>Troubleshooting steps</i>
	<ol style="list-style-type: none"> Inspect external power source and change to verified working one. Determine whether the noise comes from AC power adapter. Test with a verified working AC adapter.
	Disconnect external devices and all cables connected to the computer to isolate issue to computer only.

Table 6-51 Issues, possible causes, and fixes (continued)

Items	Procedures
Noisy fan	Determine whether the noise comes from the fan. Disconnect the fan briefly to isolate whether noise originates from fan. If noise is absent with fan disconnected, see Fan runs constantly on page 148 .
Noisy hard drive	Determine whether the noise comes from the hard drive. See Noisy hard drive on page 146 .
Noisy optical drive	<ol style="list-style-type: none">1. Determine whether the noise comes from an optical drive.2. Remove CD/DVD from the optical drive.
Noisy speaker	<ol style="list-style-type: none">1. Determine whether the noise comes from speaker.2. Test with a verified working external headset/speaker.
Noisy display	Determine whether the noise comes from display panel (humming noise). Change display frequency settings. See Display on page 128 .
The section below is intended for authorized service providers and technicians.	
	<ol style="list-style-type: none">1. After disassembling the chassis, inspect components of the interior for excessive wear or damage.2. If noise issues persist, proceed with process of elimination for battery, AC adapter, or boards.

Fan runs constantly

Use this information to troubleshoot a constantly running fan.

Table 6-52 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
<ul style="list-style-type: none">• Fan never stops running• Generates heat• Decreased computer performance	<ul style="list-style-type: none">• BIOS not up to date.• Thermal condition (fan, air flow)—fan might not be defective but must run constantly to remove excess heat generated by electrical components.• Inappropriate configuration.
	<i>Troubleshooting steps</i>
	General actions
	<ol style="list-style-type: none">1. Verify whether BIOS is set to Fan Always on while on AC Power F10 Setup. When booting the computer, press f10 to open Setup, and then select Advanced > Built-In Device Options Menu.2. Update BIOS and drivers (4. Update BIOS and drivers on page 96) and reset BIOS to default. BIOS can implement new fan characteristics and updates for other components.3. Perform a hard reset (8. Hard reset on page 102). Performing a hard reset can reset recorded thermal values in memory.

Table 6-52 Issues, possible causes, and fixes (continued)

Items	Procedures
	<p data-bbox="644 260 852 281">Thermal-related issue</p> <ol data-bbox="644 310 1465 632" style="list-style-type: none"><li data-bbox="644 310 1465 583">1. Verify that fan is spinning. Reseat fan cable before moving to next step.<ol data-bbox="692 359 1465 583" style="list-style-type: none"><li data-bbox="692 359 1155 380">a. Check fan and connection. Reseat fan cable.<li data-bbox="692 407 1465 428">b. Be sure that no obstructions or dust are in heat sink fan, heat sink fin, or vent.<li data-bbox="692 455 1465 533">c. Test fan using HP PC Hardware Diagnostics (UEFI) tool (6. HP Hardware Diagnostics and Tools on page 96). Be sure that the fan is not producing loud noise and that fan blades spin correctly.<li data-bbox="692 560 1027 581">d. Test with a verified working fan.<li data-bbox="692 609 900 630">e. Replace the fan.<li data-bbox="644 659 1465 806">2. Verify thermal solution Use the Thermal Monitor tool (HP Thermal Monitor on page 99), which is available only to authorized service providers and technicians, to run a stress test (processor and GPU) and verify that thermal sensors are within limits after thermal condition is serviced.
	<p data-bbox="644 827 820 848">User configuration</p> <p data-bbox="644 877 1465 953">Change Power Options in Windows (for example, choosing Balanced mode instead of High performance). High performance and extensive graphics might cause the fan run constantly to release the heat.</p>
Notes	<p data-bbox="644 974 1465 1052">BIOS currently omits fan presence detection to shorten boot time delay less than four seconds. Therefore, the fan error is generated based on previous boot to operating system that found system fan error.</p> <p data-bbox="644 1079 1465 1157">Fan often is part of thermal solution, including heat sink, heat sink fin/muffler, and thermal grease. Fan replacement requires reboot and fan function verification using HP PC Hardware Diagnostics (UEFI) tool.</p> <p data-bbox="644 1184 1059 1205">For more information, see the following links:</p> <ul data-bbox="644 1232 1171 1314" style="list-style-type: none"><li data-bbox="644 1232 1171 1253">• http://support.hp.com/us-en/document/c01007591.<li data-bbox="644 1274 1171 1314">• https://support.hp.com/us-en/document/c01657439.

Thermal shutdown (hot)

Use this information to troubleshoot a thermal shutdown.

Table 6-53 Issues, possible causes, and fixes

Items	Procedures
<i>Symptoms</i>	<i>Possible causes</i>
Similar to fan runs constantly issue (Fan runs constantly on page 148)	BIOS not up to date, thermal condition (fan, air flow)
<ul style="list-style-type: none"> • System shutdown • Abnormal heat • Continually running fan • Decreased computer performance 	<i>Troubleshooting steps</i> <ol style="list-style-type: none"> 1. Update BIOS and drivers (4. Update BIOS and drivers on page 96) and reset BIOS to default. BIOS can implement new fan characteristics and updates for other component. 2. Perform a hard reset (8. Hard reset on page 102). Performing a hard reset can reset recorded thermal values in memory. 3. Determine whether you are using a correct AC adapter. 4. Be sure to turn power off completely when putting a notebook in a travel bag.
	Thermal-related issue
	<ol style="list-style-type: none"> 1. Verify thermal condition: <ol style="list-style-type: none"> a. Check fan and connection. Check if fan is spinning when computer is on. Reseat fan cable. b. Be sure that no obstructions or dust are in heat sink fan, fin, or vent. c. Be sure that the notebook is not sitting on a hot surface that blocks vent intakes. d. Test fan using HP PC Hardware Diagnostics (UEFI) tool (6. HP Hardware Diagnostics and Tools on page 96). Be sure that the fan is not producing a loud noise and that fan blades spin correctly. e. Test with a verified working fan. f. Remove old thermal compound and pads, and replace properly with new pads. 2. Verify thermal solution: <ul style="list-style-type: none"> ○ Use Thermal Monitor tool (available only to authorized service providers and technicians) to run stress test (processor and GPU), and verify that thermal sensors are within limits after thermal condition is serviced.
Note	See https://support.hp.com/us-en/document/c01657439 .

Additional information

The following sections provide additional information that you can use during the troubleshooting process.

Acronyms

These acronyms are used in this chapter.

Blue screen (BSOD)—A Windows error screen that can occur if a problem causes your computer to shut down or restart unexpectedly. When you experience this type of error, you cannot see items such as the Start menu or the taskbar when your computer is turned on. Instead you might see a blue screen with a message that your computer ran into a problem and needs to restart.

CPU—Central processing unit

DIMM–Dual in-line memory module

Daughterboard–Type of circuit board that plugs into or is attached to the system board or similar expansion card to extend its features and services.

GPU–Graphics processor unit

GTS–General Troubleshooting Step

HDD–Hard drive

KB–Keyboard

LVDS–Low-Voltage Differential Signaling

MSG–Maintenance and Service Guide

mWS–Mobile Workstations

WS–Workstations

OS–Operating system

PC–Personal computer

POST–Power-On Self-Test

SSD–Solid-state drive

TSG–Troubleshooting Guide

UEFI–Unified Extensible Firmware Interface

WLAN–Wireless local area network

WWAN–Wireless wide area network

Blinking lights and boot error codes

In some cases, when the host processor is not executing code or does not have the necessary code to drive the display, light blink codes inform you of a problem.

The following information is from the white paper <http://h10032.www1.hp.com/ctg/Manual/c04685655>.

Table 6-54 Blinking lights and boot error codes

Blink codes	Error
Amber battery light: blinks 1 Hz continuously	Embedded Controller unable to load firmware
Caps and num lk lights = 1 blink	Processor not executing code
Caps and num lk lights = 2 blinks	BIOS recovery code unable to find valid BIOS recovery image
Caps and num lk lights = 3 blinks	Memory module error
Caps and num lk lights = 4 blinks	Graphics controller error
Caps and num lk lights = 5 blinks	System board error
Caps and num lk lights = 6 blinks	Intel Trusted Execution Technology (TXT) Error
Caps and num lk lights = 7 blinks	Sure Start unable to find valid BIOS Boot Block image


Table 6-54 Blinking lights and boot error codes (continued)

Blink codes	Error
Caps and num lk lights = 8 blinks	Sure Start has identified a problem (Manual Recovery Policy Set)

Processor not executing code

This computer experienced a problem due to the failure of certain code to execute, resulting in a failed startup of the processor.


The issue could be related to the processor or the system board in the computer. If the processor is socketed, be sure that the processor is seated correctly in the socket. If this error reoccurs, see [General troubleshooting steps on page 92](#).

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the [caps lock](#) and [num lk](#) keys both **blink once**, followed by a pause, and then continue in a repeating pattern.

BIOS recovery code unable to find valid BIOS recovery image

This computer has experienced a problem in locating a valid BIOS image, resulting in a failed startup.


You can resolve this problem by placing a clean copy of the system BIOS on a USB key or in the appropriate hard drive directory and performing a reboot. If this error reoccurs, see [General troubleshooting steps on page 92](#).

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the [caps lock](#) and [num lock](#) keys both **blink twice**, followed by a pause, and then continue in a repeating pattern.

Memory module error

This computer has experienced a memory initialization problem resulting in a failed startup. This issue might be related to the memory modules in the computer. You can resolve this problem by ensuring that memory modules are correctly inserted and seated.


If this error reoccurs, you must use a service event to determine the source of the error (memory modules or system board) and take the appropriate corrective action.

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the [caps lock](#) and [num lock](#) keys both **blink three times**, followed by a pause, and then continue in a repeating pattern.

Graphics Controller Error (No Controller)


This computer has experienced a graphics controller initialization problem resulting in a failed startup. This issue might be related to the graphics controller in your machine.

You can resolve this problem by ensuring that the graphics controller module is seated correctly in machines with modular graphics. If this error reoccurs, you must use a service event to identify the source of the error and take the appropriate corrective action.

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the **caps lock** and **num lock** keys both **blink four times**, followed by a pause, and then continue in a repeating pattern.

Failure System Board Error

This computer has experienced a system board initialization problem resulting in a failed startup. This issue might be related to the system board in the computer. You must use a service event to identify the source of the error and take the appropriate corrective action.

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the **caps lock** and **num lock** keys both **blink five times**, followed by a pause, and then continue in a repeating pattern.

Intel Trusted Execution Technology (TXT) Error


This computer has experienced a problem related to the Intel Trusted Execution Technology resulting in a failed startup. The error occurs when three situations are true:

- The Intel Trusted Execution Technology (TXT) has been enabled on the computer.
- Policies have been set to prevent startup if the BIOS measurement has changed.
- The BIOS measurement has changed.

For more information about Intel TXT, go to


<http://www.intel.com/content/dam/www/public/us/en/documents/white-papers/trusted-execution-technology-security-white-paper.pdf>

You must use a service event to resolve this issue.

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the **caps lock** and **num lock** keys both **blink six times**, followed by a pause, and then continue in a repeating pattern.

Sure Start unable to find valid BIOS Boot Block image

This computer has experienced a problem in locating a valid BIOS image, resulting in a failed startup. You must use a service event to identify the source of the error and take appropriate corrective action.

 **NOTE:** The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the **caps lock** and **num lock** keys both **blink seven times**, followed by a pause, and then continue in a repeating pattern.

Sure Start has identified a problem (Manual Recovery Policy Set)

This computer has experienced a problem in locating a valid BIOS image, resulting in a failed startup. HP Sure Start normally repairs this type of issue; however, on this computer HP Sure Start has been configured to operate in manual mode key sequence.

To proceed with the repair, press and hold the following keys: [esc + up arrow + down arrow](#). To avoid the need for this manual recovery step, set the HP Sure Start recovery policy to automatic. If this error reoccurs, you must use a service event to identify the source of the error and take appropriate corrective action.



NOTE: The computer attempts to notify you of this problem through a series of blinking lights. When you attempt to turn on the computer from an Off or Hibernated state, lights associated with the [caps lock](#) and [num lk](#) keys both **blink eight times**, followed by a pause, and then continue in a repeating pattern.

POST error messages and user actions

Use this information to determine the meaning of POST error messages.

Table 6-55 POST error messages and user actions to address the error

Test description	Failure descriptions	Error code	Possible user actions
Product information	Invalid value	00A	Contact support for assistance.
Startup test	Memory module	200	Attempt to reseat the memory module and then repeat the test. Search http://www.hp.com/support for details about troubleshooting issues related to the memory module. If the memory module still fails, contact support.
Startup test	Hard Disk 1 SMART	301	Attempt to reseat the hard drive and repeat the test. The hard disk drive might have failed. Contact support for assistance.
Startup test	Hard Disk 2 SMART	302	The hard drive might have failed. Contact support for assistance.
Startup test	Hard Disk 1 Quick	303	The hard drive might have failed. Contact support for assistance.
Startup test	Hard Disk 2 Quick	304	The hard drive might have failed. Contact support for assistance.
Run-in test	Memory module	200	Attempt to reseat the memory module and then repeat the test. Search http://www.hp.com/support for details about troubleshooting issues related to the memory module. If the memory module still fails, contact support.
Run-in test	Hard Disk 1 SMART	301	Attempt to reseat the hard drive and repeat the test. The hard drive might have failed. Contact support for assistance.
Run-in test	Hard Disk 2 SMART	302	The hard drive might have failed. Contact support for assistance.
Run-in test	Hard Disk 1 Quick	303	The hard drive might have failed. Contact support for assistance.
Run-in test	Hard Disk 2 Quick	304	The hard drive might have failed. Contact support for assistance.
Hard Disk Test	Hard Disk 1 SMART	301	Attempt to reseat the hard drive and repeat the test. The hard drive might have failed. Contact support for assistance.
Hard Disk Test	Hard Disk 2 SMART	302	The hard drive might have failed. Contact support for assistance.
Hard Disk Test	Hard Disk 1 Quick	303	The hard drive might have failed. Contact support for assistance.
Hard Disk Test	Hard Disk 2 Quick	304	The hard drive might have failed. Contact support for assistance.
Hard Disk Test	Hard Disk 1 Full	305	The hard drive might have failed. Contact support for assistance.

Table 6-55 POST error messages and user actions to address the error (continued)

Test description	Failure descriptions	Error code	Possible user actions
Hard Disk Test	Hard Disk 2 Full	306	The hard drive might have failed. Contact support for assistance.
Boot Device Manager	Boot device not found	3F0	This code indicates a potential problem with the hard drive. Run the hard drive test. See https://support.hp.com/emea_africa-en/document/c01443371 for more information.
Boot Device Manager	Hard Disk 1 Error	3F1	Indicates a potential problem with the hard drive. Run the hard drive test. See https://support.hp.com/emea_africa-en/document/c01443371 for more information.
Boot Device Manager	Hard Disk 2 Error	3F2	This code indicates a potential problem with the hard drive. Run the hard drive test. See https://support.hp.com/emea_africa-en/document/c01443371 for more information.
Boot Device Manager	Hard Disk 1 SMART	301	This code indicates a potential problem with the hard drive. Run the hard drive test. See https://support.hp.com/emea_africa-en/document/c01443371 for more information.
Boot Device Manager	Hard Disk 2 SMART	302	This code indicates a potential problem with the hard drive. Run the hard drive test. See https://support.hp.com/emea_africa-en/document/c01443371 for more information.
BIOS Recovery	BIOS Recovery Occurred	500	This message indicates that BIOS recovery was completed successfully. No further action is required.
BIOS Application	BIOS Application Error	501	The BIOS installation might have become corrupted. Download the latest version of the BIOS and install it. See 4. Update BIOS and drivers on page 96 for more information. If reinstalling the BIOS fails, contact support for further assistance.
CMOS Recovery	CMOS Recovery Occurred	502	This message indicates that CMOS recovery was completed successfully. No further action is required.
Battery Check	Primary Battery Replace	601	This code indicates that the primary battery has very low capacity. Search http://www.hp.com/support for details about using the HP Support Assistant to verify the battery capacity and, if necessary, order a replacement.
Battery Check	Secondary Battery Replace	602	This indicates that the secondary battery has very low capacity. Search http://www.hp.com/support for details about using the HP Support Assistant to verify the battery capacity and, if necessary, order a replacement.
Wireless Module	Not installed or responding	701	Reseat the wireless LAN adapter module, if your notebook supports it. Because seating or reseating a wireless LAN adapter is unique to each computer model.

Table 6-55 POST error messages and user actions to address the error (continued)

Test description	Failure descriptions	Error code	Possible user actions
Fan	Fan not operating correctly	90B	<p>The system fan might be malfunctioning.</p> <p>For information about troubleshooting heat-related issues, see http://support.hp.com/us-en/document/c01007591.</p> <p>A hard reset can sometimes restore the system fan to working order. See https://support.hp.com/us-en/document/c01684768 for details.</p> <p>If the system fan continues to malfunction, contact support.</p>

Routine maintenance for performance improvement

The table presents a summary of the suggested times for performing the routine maintenance tasks that are described in this document.

Table 6-56 Routine maintenance tasks to improve performance

Tasks	Weekly	Monthly	Occasionally
Perform a system tune-up.	X		
Run Windows Update.	X		
Scan for and remove viruses.	X		
Scan for and remove spyware and adware.	X		
Empty the Recycle Bin.	X		
Delete temporary Internet files.	X		
Back up user files.		X	
Create a restore point.		X	
Defragment the hard drive.		X	
Run Scan Disk.		X	
Clean the exterior of the computer.			X
Close programs that are not being used.			X
Prevent programs from loading at startup.			X
Remove rear cover and clean fan blades and vents with compressed air.			X

Common blue screen error messages

The following sections define blue screen error messages.

Error message list

For an example of a Bug Check Code Reference, use this image.

For more information, see

[https://msdn.microsoft.com/en-us/library/windows/hardware/hh994433\(v=vs.85\).aspx](https://msdn.microsoft.com/en-us/library/windows/hardware/hh994433(v=vs.85).aspx).

```
STOP: 0x00000079 (0x00000002, 0x00000001, 0x00000002,
0x00000000)

Mismatched kernel and hal image.

Beginning dump of physical memory
Physical memory dump complete. Contact your system
administrator or technical support group.
```

Note that the hexadecimal number following the word "STOP" is called the bug check code or Stop code.

Bug check symbolic names

Each bug check code also has an associated symbolic name.

In the example, the screen shows

[https://msdn.microsoft.com/en-us/library/windows/hardware/ff559209\(v=vs.85\).aspx](https://msdn.microsoft.com/en-us/library/windows/hardware/ff559209(v=vs.85).aspx)

Microsoft general troubleshooting of Windows bug check codes

Use this information to troubleshoot Windows bug codes.

- If you recently added hardware to the system, try removing or replacing it. Or check with the manufacturer to see if any patches are available.
- Try running HP PC Hardware Diagnostics (UEFI).
- Check with the manufacturer to see if an updated system BIOS or firmware is available.
- Be sure that any expansion board is properly seated and all cables are completely connected.
- Confirm that any new hardware that is installed is compatible with the installed version of Windows.
- If new device drivers or system services have been added recently, try removing or updating them.




NOTE: Use safe mode when removing or disabling components. Safe mode loads only the minimum required drivers and system services during the Windows startup. To enter safe mode, restart your computer and press **f8** at the menu that displays the operating system choices. At the resulting **Windows Advanced Options** menu, choose **Safe Mode**.

- Run a virus detection program. Viruses can infect all types of hard drives formatted for Windows, and resulting drive corruption can generate system bug check codes. Be sure that the virus detection program checks the Master Boot Record for infections.
- Verify that the system has the latest service pack installed.
- Disable BIOS memory options such as caching or shadowing.
- Check the System Log and Application Log in Event Viewer to see if any additional error messages have been logged recently. These might pinpoint the cause of the error.

Use Windows Debugging Tool

Debugging Tools for Windows are the primary tools used by Microsoft software developers to analyze and resolve errors that result in memory dumps.


Use the tool ([https://msdn.microsoft.com/library/windows/hardware/ff551063%20\(v=vs.85\).aspx](https://msdn.microsoft.com/library/windows/hardware/ff551063%20(v=vs.85).aspx)) to determine the cause of the error. Follow general steps for downloading, setting up, and using the Windows 10 debugging tool. A similar process is used for Windows 7 or Windows 8.

 **NOTE:** The following screen shots provide only an example of the tool. Specifics shown are not representative of all applications of the debugging tool. This is a Microsoft tool supported by Microsoft.


Windows Software Development Kit (SDK)

Use these steps to download and use the Windows SDK.


1. Download the SDK from the following link:
<https://dev.windows.com/en-US/downloads/windows-10-sdk>
2. Set up the SDK in the configuration window (Windows 10 shown).

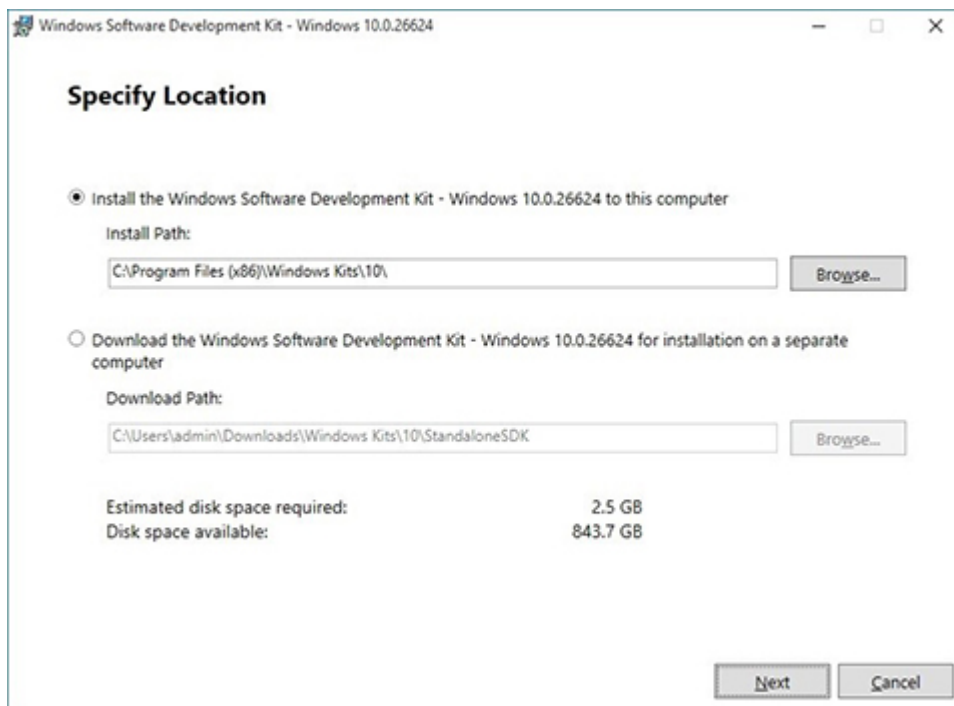

3. Select features to install.

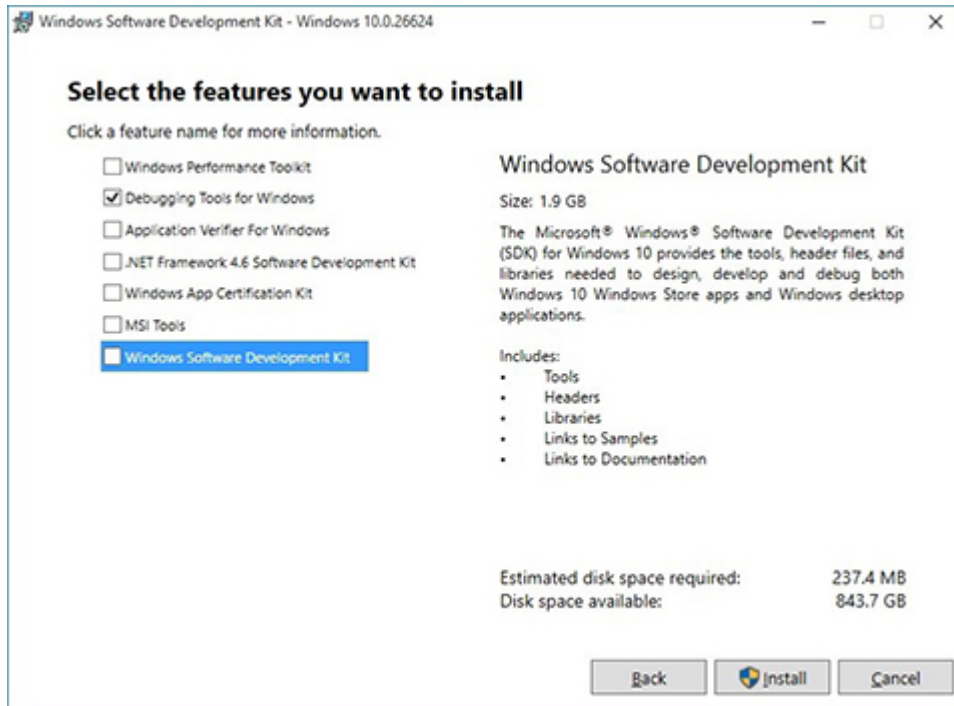


4. Run the SDK as an administrator.

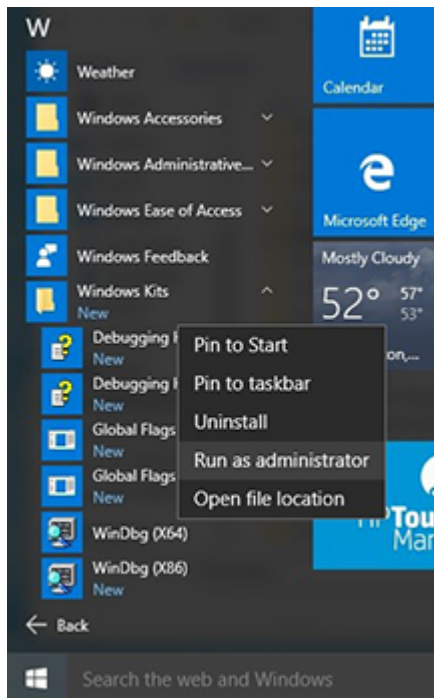



5. Set the symbol path. Select **File > Symbol File Path**.

- In the **Symbol path** box, type `SRV*C:\Windows\symbol_cache*http://msdl.microsoft.com/download/symbols`.

- Save the workspace.

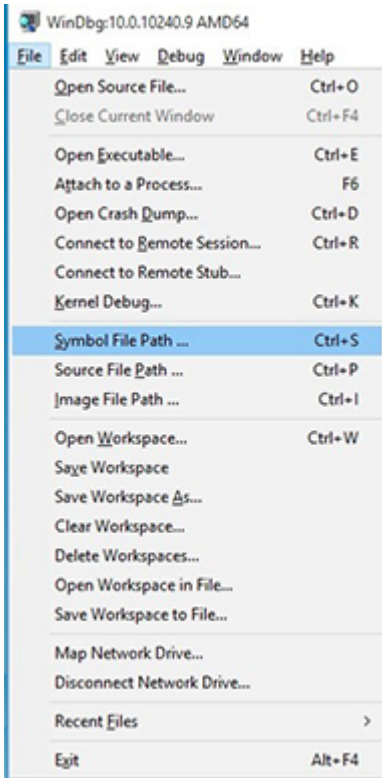

6. Open the crash dump file.

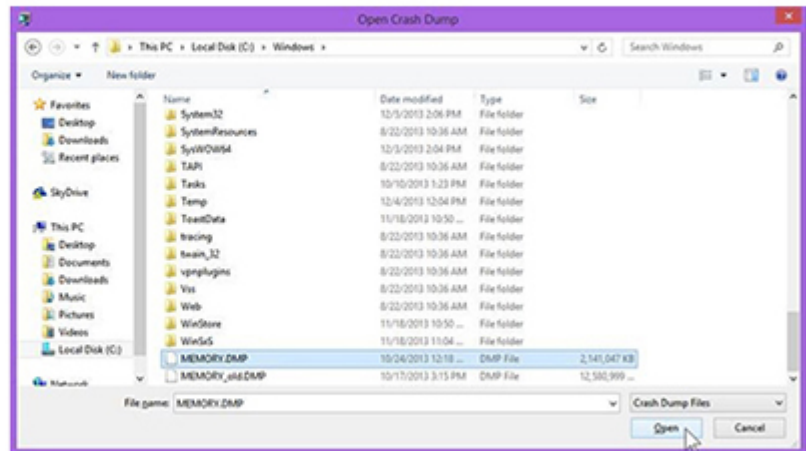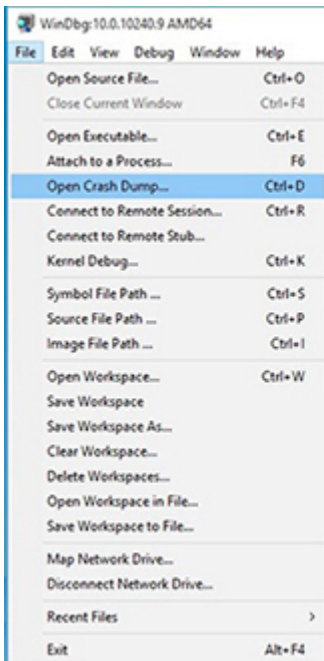

- Analyze the file. In the following memory dump sample, look for Bug Check 0x3B. The ATIKMAG driver needs to be investigated for further root cause.

Lookup for Bug Check 0xC2.


```
1: kd> !analyze -v
*****
*                                     *
*                               Bugcheck Analysis                               *
*                                     *
*****

SYSTEM_SERVICE_EXCEPTION (3b)
An exception happened while executing a system service routine.
Arguments:
Arg1: 00000000c0000005, Exception code that caused the bugcheck
Arg2: fffff8006d927acf, Address of the instruction which caused the bugcheck
Arg3: fffffd00020e4e500, Address of the context record for the exception that caused the bugcheck
Arg4: 0000000000000000, zero.

Debugging Details:
-----
BUGCHECK_P1: c0000005
BUGCHECK_P2: fffff8006d927acf
BUGCHECK_P3: fffffd00020e4e500
BUGCHECK_P4: 0
EXCEPTION_CODE: (NTSTATUS) 0xc0000005 - The instruction at 0x%p referenced memory at 0x%p. The memory

FAULTING_IP:
atikmpag+2facf
fffff8006d927acf 4539bc2434030000 cmp     dword ptr [r12+334h],r15d
...

SYMBOL_STACK_INDEX: 0
SYMBOL_NAME: atikmpag+2facf
FOLLOWUP_NAME: MachineOwner
MODULE_NAME: atikmpag
IMAGE_NAME: atikmpag.sys
DEBUG_FLR_IMAGE_TIMESTAMP: 55479b42
STACK_COMMAND: .cxr 0xffffd00020e4e500 ; kb
BUCKET_ID_FUNC_OFFSET: 2facf
FAILURE_BUCKET_ID: 0x3B_atikmpag!Unknown_Function
BUCKET_ID: 0x3B_atikmpag!Unknown_Function
PRIMARY_PROBLEM_CLASS: 0x3B_atikmpag!Unknown_Function
ANALYSIS_SOURCE: KM
FAILURE_ID_HASH_STRING: km:0x3b_atikmpag!unknown_function
FAILURE_ID_HASH: {adb0075-801c-005a-68e8-645bb2f2c848}
```

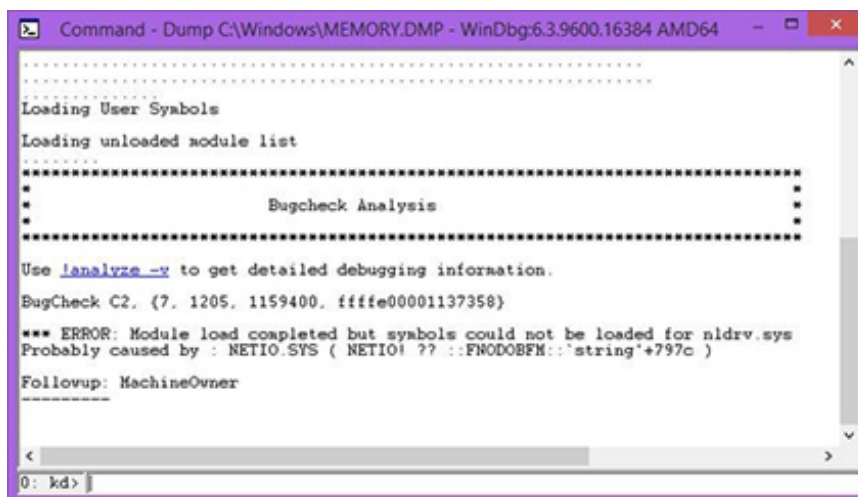

```
Command - Dump C:\Windows\MEMORY.DMP - WinDbg:6.3.9600.16384 AMD64
Loading User Symbols
Loading unloaded module list
*****
*                                     *
*                               Bugcheck Analysis                               *
*                                     *
*****

Use !analyze -v to get detailed debugging information.
BugCheck C2, (7, 1205, 1159400, fffff0001137358)
*** ERROR: Module load completed but symbols could not be loaded for nldr.sys
Probably caused by : NETIO.SYS ( NETIO! ?? ::FNODOBFM::'string'+797c )

Followup: MachineOwner
-----
0: kd>
```

Display issue: pixel anomalies

All HP notebook displays adhere to strict quality and reliability specifications. A small percentage of display panels might have minor cosmetic manufacturing anomalies or irregularities such as bright or

dark dots in the viewable area. These cosmetic imperfections are common to all display panel types, not specifically HP products.

All display panel defects should be examined at the highest possible resolution using both the brightest and darkest possible backgrounds, because some subpixel failures might not be readily visible under certain conditions.

- Type 1: Bright dot on a dark background = Always On
- Type 2: Dark dot on a bright background = Always Off
- Combination = in any combination and any color that are always on or off

Use the HP PC Hardware Diagnostics (UEFI) tool to determine numbers of pixels and their distance. HP uses the following set of criteria when damaged displays are submitted for warranty coverage.

Source: <http://support.hp.com/us-en/document/c00035844>

Table 6-57 Electrical defect criteria

Panel resolution	Accept	Reject
Subpixel faults		
VGA, SVGA, SD, WSVGA, XGA, 720p, SD+, WXGA, HD	N ≤ 2 Type 1 N ≤ 2 Type 2	N ≥ 3 Type 1
WXGA+, SXGA+, HD+, SXGA+	N ≤ 3 Type 1 N ≤ 3 Type 2	N ≥ 4 Type 1
WSXGA+, UXGA, FHD, WUXGA	N ≤ 4 Type 1 N ≤ 4 Type 2	N ≥ 5 Type 1
QHD, QHD+, WQXGA, UD	N ≤ 5 Type 1 N ≤ 5 Type 2	N ≥ 6 Type 1
Electrical defect clusters (defects within a 5x5 pixel block)		
Minimum distance between ANY allowable defects (unless otherwise specified)	S ≥ 25 mm	S < 25 mm
Cluster with 2 or more subpixels with subpixel faults		Not allowed
Dim lines		Not allowed
Cross lines on/off		Not allowed
Horizontal lines on/off		Not allowed
Vertical lines on/off		Not allowed



NOTE: Examine all LCD panel defects at the highest possible resolution using both the brightest and darkest possible backgrounds, because some subpixel failures might not be readily visible under certain conditions.




NOTE: Contact support for assistance if issues are not listed.

Cable management

Proper routing of the internal cables is critical to the operation of the computer. Follow good cable management practices when you have to remove and install components.

- Handle cables with care to avoid damage.
- Apply only the tension required to seat or unseat cables during insertion or removal from the connector.
- When possible, handle cables by the connector or pull-strap.
- Route cables in such a way that they cannot be caught or snagged by parts being removed or replaced.
- Keep cables away from direct contact with major heat sources, such as the heat sink. Some air flow guides have a cable guide that lets you route cables safely around the heat sink.
- Do not jam cables on top of daughterboards or memory modules (DIMMs). Circuit cards and DIMMs are not designed to take excessive pressure.
- Keep cables clear of any movable or rotating parts (such as a fan) to prevent them from being cut or crimped when the component is lowered into its normal position.
- In all cases, avoid bending or twisting the cables. Do not bend any cable sharply. A sharp bend can break the internal wires.
- Do not rely on components like the keyboard or service door to push cables down internally. Always position the cables to lie properly by themselves or in the cable guides and chassis areas designed for cable routing.

 **IMPORTANT:** Always release connector latch before removing the cable. Otherwise, pulling the cable could damage the cable pins and result in a failed device.

Connector types

There are several types of connectors on the system board with different requirements for cable removal or insertion.

 **IMPORTANT:** Do not touch connector pins and connector gold fingers directly with bare hands.


Flex cable


Use this information to properly use flex cables.

When connecting flex cables to a ZIF connector, rotate the latch to 90°, push the cable completely, evenly into the connector, and then close the latch.

When removing flex cables from a ZIF connector on the system board, you must release the latch before removing the cable. Always follow these steps:

1. Flip the connector latch 90° to release the cable.
2. Grasp the cable end of the connector and pull it straight out.


 **IMPORTANT:** Always release connector latch before removing the cable. Otherwise, pulling the cable could damage the cable pins and result in a failed device.

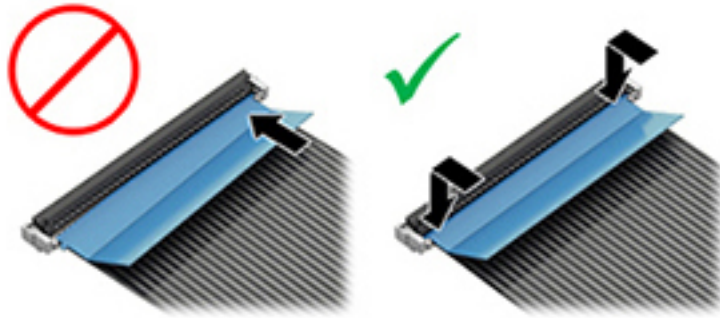

Horizontal cable insertion

Use flat tool to pull connector evenly. Do not pull on cable to remove.

Slide connector into receptacle on same horizontal plane as board and use a flat tool to push evenly into receptacle.

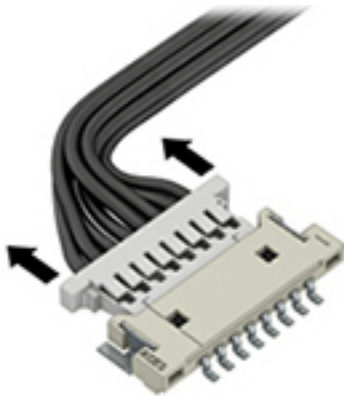

Multiple-pin horizontal connector (LVDS cable to display panel)


Use these procedures to properly insert and remove a multiple-pin horizontal connector.

Insert procedure:

1. Slide connector evenly into receptacle on same horizontal plane as PCB connector.
2. Pull lock bar to insert and push both side connector horizontally to firmly lock.
3. Tape down lock bar over the panel to hold in position.

Reverse the previous procedure to remove the connector:


1. Remove tape.
2. Pull up bar (pull tape) and release the lock with the PCB connector.
3. Pull to the direction in parallel with PCB to withdraw the connector.

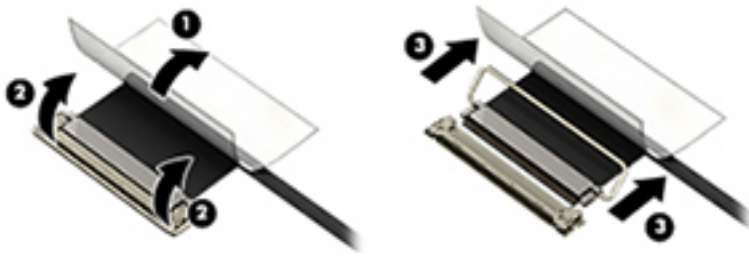

Multiple-pin vertical connector (LVDS cable to system board)

Use this procedure to properly insert and remove a multiple-pin vertical connector.


- Remove the connector gasket before removing the connector.
- If the connector has a plastic pull tab, pull the tab to disconnect. Otherwise, use flat tool under the connector to remove evenly. Do not pull on the cable to remove.
- Press evenly when reseating, reconnecting, or installing the connector.

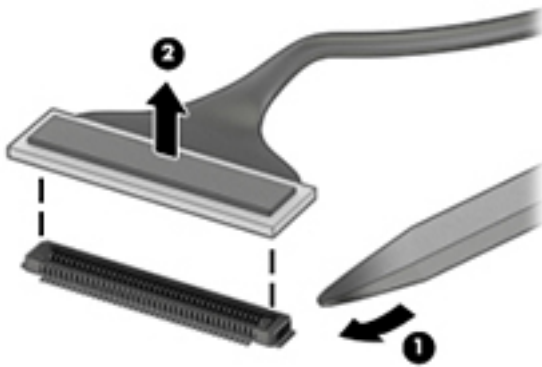


For more information about cable management, see [Cable management on page 163](#).

7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.


 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 167](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 167](#).

Creating a system restore


System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.


1. Run a Microsoft System Restore.
2. Run Reset this PC.

 **NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 167](#).

For more information about the first two methods, see the Get Help app:


- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.

 **NOTE:** You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media


You can use HP Recovery media to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 166](#).

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.


To recover your system:

- Insert the HP Recovery media, and then restart the computer.

 **NOTE:** HP recommends that you follow the [Restoring and recovery methods on page 167](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, which is the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image


To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

8 Computer Setup (BIOS), TPM, and HP Sure Start

HP provides several tools to help set up and protect your computer.

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as hard drives, display, keyboard, mouse, and printer). Computer Setup includes settings for types of devices installed, the startup sequence of the computer, and amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

To start Computer Setup, turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.


Navigating and selecting in Computer Setup

You can navigate and select in Computer Setup using one or more methods.

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.


- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.


Your changes go into effect when the computer restarts.


Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps.


 **NOTE:** Restoring defaults will not change the hard drive mode.

1. Start Computer Setup. See [Using Computer Setup on page 169](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.


Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

If you are already in Windows, you can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing **fn+esc** (select products only). Or you can use Computer Setup.


1. Start Computer Setup. See [Using Computer Setup on page 169](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 170](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

- or -
Select the question mark icon (select products only) in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).

The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.


Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps.

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

TPM BIOS settings (select products only)

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).

 **IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation or usage of TPM that violates the previously mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

 **NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Using Computer Setup on page 169](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 174](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
 - Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows


After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.


3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

 **NOTE:** To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

 **NOTE:** To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store


You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 176](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 176](#).

- b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable fast boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application. To disable fast boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
 2. Select **Advanced**, and then select **Boot Options**.
 3. Clear **Fast Boot**.
 4. Select **Save Changes and Exit**, and then select **Yes**.
-

1. From the **Start** menu, open the HP System Information Application or enter **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer will boot to HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.

3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics runs previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Exit**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	363.0 mm	14.3 in
Depth	251.0 mm	9.9 in
Height (front to back)	27.7 mm	1.1 in
Weight		
	2.4 kg	5.3 lb
Input power		
Operating voltage and current	19.5 V DC @ 7.70 A - 150 W	
	19.5 V DC @ 10.3 A - 200 W	
	19.5 V DC @ 11.8 A - 230 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	40.6 cm	16.0 in
	39.6 cm	15.6 in
Resolution	3840 × 2400 (WQUXGA)	
	1920 × 1200 (WUXGA)	
	1920 × 1080 (FHD)	
Surface treatment	Antiglare (WUXGA and FHD panels)	
	Brightview (OLED panel)	
Brightness	1000 nits (WUXGA, sRGB panels)	
	500 nits (WQUXGA, DCI-P3 panels)	
	400 nits (WUXGA, sRGB 100 panels)	
Viewing angle	UWVA	
Backlight	OLED + LBL	
	WLED + LBL	
	WLED	
	LED	
Display panel interface	eDP 1.4 + PSR 2.0	
	eDP 1.4 without PSR	
	eDP 1.3 + PSR	
	eDP 1.2 without PSR	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 10-3 Solid-state drive specifications

	512 GB*	1 TB*	2 TB*	4 TB*
Dimensions				
Height	1.0 mm	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	8 g	8 g
Interface type				
Ready time, maximum (to not busy)	< 1.0 ms	1.0 ms	1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms	0.1 ms
Transfer rate				

Table 10-3 Solid-state drive specifications (continued)

	512 GB*	1 TB*	2 TB*	4 TB*
Sequential read	Up to 2150 MBps	Up to 2150 MBps	Up to 3500 MBps	Up to 3500 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 430,000 IOPs	Up to 620,000 IOPs
Sequential write	Up to 1550 MBps	Up to 1550 MBps	Up to 2800 MBps	Up to 2800 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 390,000 IOPs	Up to 500,000 IOPs
Total logical sectors	1,000,215,216	1,500,336,388	3,000,723,328	6,001,730,164
Operating temperature	0°C to 70°C (32°F to 158°F)			

*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.

NOTE: Certain restrictions and exclusions apply. Contact support for details.

11 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



NOTE: If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then quickly press **esc**.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.
- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Restart the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:

- Remove and retain the storage drive.
- or -
- Clear the drive contents by using a third-party utility designed to erase data from an SSD.
- or -
- Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.


- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.

- or -

Clear the contents of the drive using the following Disk Sanitizer commands steps:

- i. Turn on or restart the computer, and then quickly press **esc**.
- ii. Select the **Security** menu and scroll down to the **Utilities** menu.
- iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.

 **NOTE:** The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 11-1 Troubleshooting steps for nonvolatile memory usage

Memory type	Volatility; size	Store user data	Retain power if removed	Purpose	How input to memory	How write protected
System BIOS	Non-volatile; 64 MB	Yes	Yes	Stores BIOS code and computer setting and password data	BIOS code programmed at factory. Config and settings input using menu	Utility required to write data to this memory. See www.hp.com/support menu
DRAM	Volatile; user configurable	Yes	No	Stores OS and app real time data	By OS behavior	User accessible
Embedded controller	Non-volatile; 128 KB chip embedded	No	Yes	Controller FW	Programmed at factory	Utility required to write data to this memory, combined with BIOS update file.
Thunderbolt	Non-volatile; 1 MB	No	Yes	Controller FW	Programmed at factory	Utility required to write data to this memory, combined with BIOS update file.
Type-C PD controller	Non-volatile; N/A	N/A	N/A	Controller FW	Programmed at factory	Utility required to write data to this memory, combined with BIOS update file.
GFX card VBIOS	Non-volatile; 2 MB	N/A	N/A	GFX card video BIOS code	Programmed at factory	Utility required to write data to this memory, softpaq tool on HP website.
Controller (NIC) EEPROM	Non-volatile; N/A	N/A	N/A	Stores config data and MAC address	Programmed at factory	Utility required but limited to factory and write in times
SODIMM memory SPD	Non-volatile; N/A	N/A	N/A	Stores memory module information	DIMM SPD programmed by memory vendor	Data cannot be modified
Peripheral SSD/HDD	Non-volatile; user configurable	Yes	Yes	Store OS image and user data	By user behavior	User accessible
Fingerprint reader	Non-volatile; N/A	N/A	N/A	Controller FW	Programmed at factory	Utility required but limited to factory
Touchpad	Non-volatile; N/A	No	Yes	Controller FW	Programmed at factory	Utility required but limited to factory
Touch screen	Non-volatile; N/A	No	No	Controller FW	Programmed at factory	Utility required but limited to factory


Table 11-1 Troubleshooting steps for nonvolatile memory usage (continued)

Memory type	Volatility; size	Store user data	Retain power if removed	Purpose	How input to memory	How write protected
Discrete TPM	Non-volatile; ST 1.769 Infineon 15.22	Yes	Yes	Store security and encryption data	Programmed at factory	Utility required but limited to factory
Card reader	Non-volatile; N/A	N/A	N/A	Stores user data	By user behavior	User accessible
Keyboard FW (per key RGB)	Non-volatile; N/A	N/A	N/A	Controller FW	Programmed at factory	Utility required but limited to factory
WLAN/BT	RF transmission; N/A	No	Yes	Stores calibration data and MAC address	Programmed at factory	Utility required but limited to factory and write in times
802.11 WSWAN EEPROM	RF transmission; N/A	No	Yes	Stores calibration data and MAC address	Programmed at factory	Utility required but limited to factory and write in times
Panel EDID	Commodity; N/A	No	Yes	Stores panel model number and settings	Programmed at factory	Utility required but limited to factory
Camera FW	Commodity; N/A	No	Yes	Stores camera firmware	Programmed at factory	Utility required but limited to factory

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press **esc**.
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older BIOS architecture but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by "Restore the nonvolatile memory found in Intel-based system boards"?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?

 **IMPORTANT:** Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.

- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption.

If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>.

12 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 12-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1

Table 12-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type H05VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

13 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

- AC adapter
 - product description 4
 - spare part numbers 28
- adapter, spare part numbers 28
- ambient light sensor module
 - illustrated 27
 - removal 84
 - spare part number 27, 84
- ambient light sensor module cable
 - illustrated 27
 - removal 84
 - spare part number 27, 84
- antenna
 - illustrated 23, 27
 - removal 56, 88
 - spare part numbers 23, 27, 56, 88, 89
- audio jack
 - illustrated 22
 - removal 68
 - spare part number 22, 68
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 6
- audio, product description 2

B

- backpack, spare part numbers 28
- backup, creating 166
- backups 166
- battery
 - illustrated 25
 - removal 42
 - spare part numbers 25, 42
- battery light 7
- beam connector, spare part number 24
- bezel
 - illustrated 26
 - removal 81
 - spare part numbers 26, 81
- BIOS
 - determining version 170
 - downloading an update 170, 171

- updating 170
- Bluetooth label 18
- boot order
 - changing using the f9 prompt 171
- boot order, changing 168
- bottom case
 - illustrated 23
 - removal 58
 - spare part number 23, 58
- Bracket Kit, spare part number 28
- buttons
 - center touchpad 11
 - left touchpad 11
 - power 14, 16
 - right touchpad 12

C

- Cable Kit
 - contents 27
 - spare part number 27
- camera 9
 - identifying 9
- camera light, identifying 9
- camera module
 - illustrated 27
 - removal 85
 - spare part number 27, 85
- camera module cable
 - illustrated 27
 - removal 85
 - spare part number 27, 85
- camera privacy cover, identifying 9
- caps lock light, identifying 12
- card reader
 - illustrated 23
 - removal 71
 - spare part number 23, 71
- card reader cable
 - illustrated 23, 27
 - removal 60
 - spare part number 23, 27, 60
- caring for your computer 36
- cautions
 - electrostatic discharge 32, 33
- chipset, product description 1

- cleaning your computer 36
 - caring for wood veneer 38
 - disinfecting 37
 - HP Easy Clean 36
 - removing dirt and debris 36
- components
 - bottom 16
 - display 8
 - keyboard area 10
 - left side 7
 - rear 17
 - right side 6
 - top cover 10
- Computer Setup
 - navigating and selecting 169
 - restoring factory settings 169
 - starting 169
- computer specifications 179
- connector, power 7
- connectors
 - Mini DisplayPort 8

D

- display
 - specifications 179
- display assembly
 - illustrated 22
 - removal 77
 - spare part numbers 22, 77
 - subcomponents 25
- display back cover
 - illustrated 27
 - spare part numbers 27
- display components 8
- display hub board
 - illustrated 27
 - removal 87
 - spare part number 27, 88
- display hub board cable
 - illustrated 27
 - removal 87
 - spare part number 27, 87
- display panel
 - illustrated 26
 - product description 1
 - removal 82
 - spare part numbers 26, 83

display panel cable
 illustrated 26
 removal 83
 spare part number 26, 83
display specifications 179
DisplayPort, identifying 8
duckhead adapter, spare part
 number 28

E

electrostatic discharge (ESD) 32,
 33
 preventing damage 32-34
esc key, identifying 15

F

fan
 illustrated 23
 removal 62
 spare part number 23, 62
fingerprint reader
 illustrated 23
 removal 69, 70
 spare part number 23, 69
fingerprint reader bracket
 illustrated 23
 removal 70
 spare part number 23
fingerprint reader cable
 illustrated 23, 28
 removal 70
 spare part number 23, 28, 70
fingerprint reader, identifying 15
fn key, identifying 15
fn lock light, identifying 13

G

graphics card
 illustrated 23
 product description 2
 removal 63
 spare part numbers 23, 63
grounding methods 32-34
guidelines
 packaging 32, 38
 transporting 32, 38
 workstation 32

H

hard drive
 specifications 179
HDMI port, identifying 8

heat sink
 illustrated 24
 removal 67
 spare part numbers 24, 67

hinge
 illustrated 26
 removal 82
 spare part number 26, 82

hinge cover
 illustrated 26
 removal 80
 spare part number 26, 80

HP PC Hardware Diagnostics UEFI
 downloading 176
 failure ID code 175
 HP Hotkey Support
 software 176
 starting 175, 176
 using 175

HP PC Hardware Diagnostics
 Windows
 accessing 173, 174
 downloading 174
 failure ID code 173
 installing 175
 using 173

HP Recovery media
 recovery 167

HP Sure Recover 168
HP Sure Start 182, 187

I

illustrated parts catalog 21
integrated numeric keypad,
 identifying 16
internal microphones,
 identifying 9, 10

J

jacks
 audio-out (headphone)/audio-in
 (microphone) combo 6
 network 7
 RJ-45 (network) 7

K

keyboard hub
 illustrated 23
 removal 73
 spare part number 23, 73
keyboard hub cable
 illustrated 23, 28
 removal 61

 spare part number 23, 28, 61
keyboard, product description 4
keypad
 integrated numeric 16
keys
 esc 15
 fn 15
 num lk 16
 Windows 15

L

labels
 Bluetooth 18
 regulatory 18
 serial number 18
 service 18
 wireless certification 18
 WLAN 18

latches
 service door release 17

left side components 7

lights
 AC adapter and battery 7
 battery 7
 camera 9
 caps lock 12
 fn lock 13
 microphone mute 13
 num lk 13
 power 13
 privacy key 12
 RJ-45 (network) 7

lights, mute 12
lights, num lk 13
lock, spare part numbers 29
low blue light mode 8

M

media card reader 2

memory
 nonvolatile 182
 volatile 182
memory card reader,
 identifying 8
memory module
 illustrated 24
 product description 2
 removal 47
 spare part numbers 24, 47
memory module compartment
 cover
 illustrated 24
 removal 48
 spare part number 24, 48

microphone mute light,
identifying 13
microphone, product
description 2
Mini DisplayPort, connector 8
model name 1
mouse, spare part numbers 29
mute light, identifying 12

N

Near Field Communications (NFC)
tapping area and antenna,
identifying 11
network jack, identifying 7
NFC module
illustrated 22
removal 55
spare part number 22, 55
NFC module antenna
removal 55
spare part number 22, 55
NFC module cable
illustrated 22, 28
removal 72
spare part number 22, 28, 72
nonvolatile memory 182
num lk light 13
num lk light, identifying 13

O

operating system, product
description 5
optical drive, spare part
number 28

P

packaging guidelines 32, 38
Plastics Kit, spare part
number 29
pointing device, product
description 4
ports
HDMI 8
Mini DisplayPort 8
product description 3
USB SuperSpeed 7
USB SuperSpeed port with HP
Sleep and Charge 6
USB Type-C Thunderbolt port
with HP Sleep and
Charge 8
power button, identifying 14, 16

power connector
identifying 7
power cord
requirements for all
countries 188
requirements for specific
countries and regions 188
set requirements 188
spare part numbers 29-31
power lights 13
power requirements, product
description 4
privacy key light 12
processor, product description 1
product description
audio 2
chipset 1
display panel 1
graphics card 2
keyboard 4
media card reader 2
memory module 2
microphone 2
operating system 5
pointing device 4
ports 3
power requirements 4
processors 1
product name 1
security 4
sensors 4
serviceability 5
storage 2
video 2
wired LAN 2
wireless 3
product name 1
product name and number,
computer 18

R

recovery 166
discs 167
media 167
USB flash drive 167
recovery media 166
creating using HP Cloud
Recovery Download
Tool 166
creating using Windows
tools 166
regulatory information
regulatory label 18
wireless certification labels 18

Remote HP PC Hardware
Diagnostics UEFI settings
customizing 178
using 177
removal and replacement
procedures 41
removing personal data from
volatile system memory 182
restoring 166
restoring and recovery
methods 167
right side components 6
RJ-45 (network) jack, identifying 7
RJ-45 (network) lights,
identifying 7
RTC battery
illustrated 22
spare part number 22
Rubber Kit, spare part number 31

S

Screw Kit, spare part number 31
SD card reader
illustrated 22
removal 75
spare part number 22, 75
SD card reader cable
illustrated 22, 28
removal 76
spare part number 22, 28, 76
security cable slot, identifying 7
security, product description 4
sensor module
illustrated 27
removal 86
spare part number 27, 86
sensor module cable
illustrated 27
removal 86
spare part number 27, 86
sensors, product description 4
serial number, computer 18
service cover
illustrated 25
removal 41
spare part numbers 25, 41
service door release latch and
security screw 17
service labels, locating 18
serviceability, product
description 5
setup utility
navigating and selecting 169
restoring factory settings 169

- SIM card, inserting 19
 - slots
 - security cable 7
 - smart card 6
 - smart card slot, identifying 6
 - solid-state drive
 - illustrated 24
 - removal 51
 - spare part numbers 24, 51
 - specifications 180
 - solid-state drive shield
 - illustrated 24
 - removal 52
 - spare part number 24, 52
 - spare part country codes 89
 - speakers
 - illustrated 23
 - removal 57
 - spare part number 23, 57
 - speakers, identifying 17
 - special keys, using 15
 - specifications
 - computer 179
 - display 179
 - hard drive 179
 - solid-state drive 180
 - static electricity 32, 33
 - storage, product description 2
 - support information 39
 - Sure Start
 - using 172
 - system board
 - illustrated 23
 - removal 64
 - spare part numbers 23, 64
 - system memory, removing
 - personal data from
 - volatile 182
 - system restore 167
 - system restore point,
 - creating 166
- T**
- Thunderbolt port with HP Sleep and Charge
 - identifying USB Type-C 8
 - top cover with keyboard
 - illustrated 22
 - spare part numbers 22, 89
 - touchpad
 - illustrated 22
 - removal 74
 - settings 10, 11
 - spare part numbers 22, 74
 - touchpad buttons
 - identifying 11, 12
 - touchpad cable
 - illustrated 22, 28
 - removal 54
 - spare part number 22, 28, 54
 - touchpad zone, identifying 11
 - TPM settings 172
 - transporting guidelines 32, 38
 - traveling with the computer 18
- U**
- USB SuperSpeed port with HP Sleep and Charge,
 - identifying 6
 - USB SuperSpeed port,
 - identifying 7
 - USB Type-C Thunderbolt port with HP Sleep and Charge,
 - identifying 8
- V**
- vents, identifying 17
 - video
 - Mini DisplayPort 8
 - video, product description 2
- W**
- Windows
 - backup 166
 - recovery media 166
 - system restore point 166
 - Windows key, identifying 15
 - Windows tools, using 166
 - wired LAN, product description 2
 - wireless antenna
 - illustrated 23, 27
 - removal 56, 88
 - spare part numbers 23, 27, 56, 88, 89
 - wireless antennas, identifying 9
 - wireless certification label 18
 - wireless, product description 3
 - WLAN antenna
 - illustrated 27
 - removal 88
 - spare part number 27, 88
 - WLAN antennas, identifying 9
 - WLAN device 18
 - WLAN label 18
 - WLAN module
 - illustrated 24
 - removal 43
 - spare part numbers 24, 43
 - WLAN module plate
 - removal 44
 - spare part number 25, 44
 - workstation guidelines 32
 - WWAN antenna
 - illustrated 23, 27
 - removal 56, 88
 - spare part numbers 23, 27, 56, 89
 - WWAN antennas, identifying 9
 - WWAN module
 - illustrated 25
 - removal 45
 - spare part numbers 25, 45
 - WWAN module plate
 - removal 46
 - spare part number 25, 46
 - WWAN module thermal cover
 - illustrated 25
 - removal 45
 - spare part number 25, 46